
 


3.00mW x 2.26mD x 2.30mH

AU: 1800 029 70 NZ: 0800 466 444 admin@absco.com.au www.abscosheds.com.au

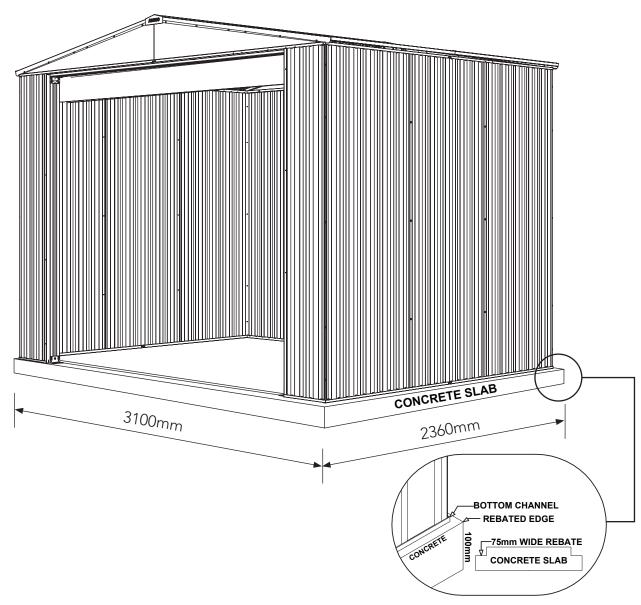

Model: 3023BRK







LEAVE A REVIEW

Tell us about your experience and receive a \$20 Coles Gift Card.
Visit www.abscosheds.com.au/review



3.00mW x 2.26mD x 2.30mH

GENERAL INSTRUCTIONS

- Before commencing any assembly, read through these instructions in detail to gain a thorough understanding of assembly methods and associated details.
- Unpack the carton and carefully identify and check off all the parts against the parts described and illustrated on "COMPONENTS PACKING LIST" pages.
- Local authority approval must be obtained prior to construction of the shed. Once you have selected your site you will need to lodge a site plan to your local council.

SITE PREPARATION

- The site for the shed must be level. An uneven surface may result in misalignment of parts.
- The shed shall be erected on top of a reinforced concrete slab and anchored down appropriately illustrated on "FINAL CONSTRUCTION" page. If using a rebated slab ensure that all frame uprights are trimmed 25mm.

TOOLS REQUIRED



SAFETY NOTES

- Some parts may have sharp edges. It is advisable to wear gloves when handling these items and safety glasses if drilling holes. Sensible shoes are highly recommended.
- Do not erect your shed in windy conditions.
- It is highly recommended to erect the shed with two or more people.

RECOMMENDED











Absco Industries Assembly Instruction Manual Model: 3023BRK 11/01/21 1.1



3.00mW x 2.26mD x 2.30mH

COMPONENT PACKING LIST

Check off all components.

MAIN PACK CARTON								
QTY	COMPONENT DESCRIPTION	PART No.	CHECK	QTY	COMPONENT DESCRIPTION	PART No.	CHECK	
6	STEEL SHEET 2034mm X 773mm	H30		2	GABLE L/H L=1475mm	16L		
4	STEEL SHEET 2034mm X 773mm	H31		2	GABLE R/H L=1475mm	16R		
6	STEEL SHEET 1546mm X 773mm	45A		2	BRACE L= 393mm	13A		
2	STEEL SHEET 2034mm X 329mm	H39B		1	RIDGE BEAM JOINER L: 450mm (17.7")	ZARSP		
1	RIDGE BEAM L = 1147mm	97BL		1	RIDGE BEAM L = 1147mm	97BR		
1	FITTINGS & ACCESSO PACKET	ORIES		1	CHANNEL SET			

11/01/21

1.1



3.00mW x 2.26mD x 2.30mH

COMPONENT PACKING LIST

Check off all components.

CHANNEL SET								
QTY	COMPONENT DESCRIPTION	PART No.	CHECK	QTY	COMPONENT DESCRIPTION	PART No.	CHECK	
2	CHANNEL L = 1126mm	59EL		2	CHANNEL L = 1126mm	59ER		
1	CHANNEL L = 1496.5mm	81AL		1	CHANNEL L = 1496.5mm	81AR		
4	CHANNEL L = 1126mm	81CL		4	CHANNEL L = 1126mm	81CR		
2	CHANNEL L = 1126mm	78BL		2	CHANNEL L = 1126mm	78BR		
1	CHANNEL L = 1496.5mm	77BL		1	CHANNEL L = 1496.5mm	77BR		
1	CHANNEL L = 1496.5mm	77CL		1	CHANNEL L = 1496.5mm	77CR		
2	CHANNEL L = 329mm	81M		2	Part No. Here JAMB L= 2034mm	HJ2		
1	JAMB L= 1537mm	93L		1	JAMB L= 797mm	93R		
4	LIP TRIM L= 1546mm	87A						

1.1



3.00mW x 2.26mD x 2.30mH

COMPONENT PACKING LIST

Check off all components.

FITTINGS & ACCESSORIES PACKET CONTENTS								
QTY	COMPONENT DESCRIPTION	PART No.	CHECK	QTY	COMPONENT PAR DESCRIPTION No.	CHECK		
2	CAP GABLE L: 170mm	14A		24	SELF DRILLING HEX HEAD TEK SCREW 15MM LONG	35		
1	RIDGE PLATES	RBP		1	<i></i> 3mm (0.12") DRILL BIT			
11	CHANNEL JOINER L= 200mm (7.9")	CSJ		1	HEX TEK SCREW DRIVER BIT			
12	SELF DRILLING HEX HEAD TEK SCREW 45MM LONG	FAST019		1	PHILLIPS HEAD DRIVER			
1	8G x 3/8 SELF TAPPING SCREWS 220 PK	FAST001		1	8G x 3/8 SELF TAPPING SCREWS 100 PK FASTO	01		



3.00mW x 2.26mD x 2.30mH

COMPONENT PACKING LIST

Check off all components.

HIGH GARAGE-FRONT FRAME PACK								
QTY	COMPONENT DESCRIPTION	PART No.	CHECK	QTY	COMPONENT DESCRIPTION	PART No.	CHECK	
2	CHANNEL L = 2300mm	C2300		10	CHANNEL L = 285mm	K0285		
2	CHANNEL L = 2070mm	N2070		2	CHANNEL L = 240mm	C0240		
2	CHANNEL L = 2034mm	C2034		2	CHANNEL L = 100mm	C0100		
2	₹	M1484		1	HIGH-FRONT FR FITTINGS PAC (SEE BELOW			
	HIGH-	FRONT FI	RAME FIT	TINGS	PACK CONTENTS			
10	MULTI P BRACKE	URPOSE :T		1	SMALL TRIANGUI PLATE	_AR		
6	10mm DYNABOLTS 150 SELF DRILLING 16mm TEK SCREWS							
ROLLER DOOR PACK								
1	ROLLER SHUTTER UNIT WITH TRACKS							

Model: 3023BRK

1.1



3.00mW x 2.26mD x 2.30mH

Guide on Splitting Sheets

- This product comes with a perforated sheet that is designed to be split into two smaller sheets.
- These sheets have sharp edges. Once separated please use appropriate foot and hand protection when handling.
- In order to split the sheet lay it on the ground and lift and fold one end until the perforations have cleanly snapped.
- Discard the middle piece as scrap when convenient. Fold the scrap piece in half two or three times and throw in garbage.









Fold first side of sheet until free

Fold middle section of sheet until free

Discard middle piece

SPLITTING SHEET H39								
QTY	COMPONENT DESCRIPTION	PART No.	C	QTY	COMPONENT DESCRIPTION	PART No.		
1	STEEL SHEET 2034mm X 773mm	H39	=	2	STEEL SHEET 2034mm X 329mm	H39B		




3.00mW x 2.26mD x 2.30mH

SNAPTITE ASSEMBLY GUIDE

The Snaptite Assembly System locks end channels to all roof and wall sheets without the need for tools and fasteners.

To assemble each panel, the perimeter channels are secured to the top and bottom of each panel. Gently tap the channel over the SNAPTITE lugs on the sheet, working along the sheet.

Each perimeter channel must finish flush with the edges of the sheets. Simply tap the channel along the sheets until each end is neatly flush. If you need to remove channels from the panels, slide it off from the side.

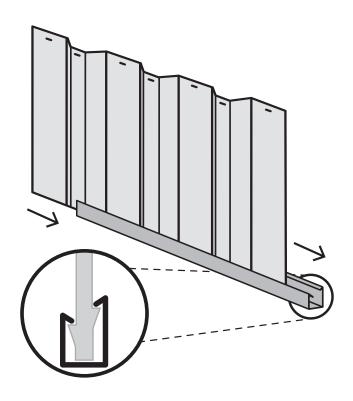



Channel locks the shed panel into position without the need for screws!

FASTENING SYMBOLS



Secure channel to sheeting by SNAPTiTE fastening method.



Join components together with one screw at this location only, as some channels have extra holes that are not required for this model of shed.



Do not join components together at this location yet, as the screws may obstruct further assembly of the other components.



Join components together by pre-drilling the holes first. Use one component as template to mark where the holes are and drill with a 3mm drill bit.



3mm pop rivet



4mm nut and bolt set.



Absco Industries Assembly Instruction Manual Model: 3023BRK 11/01/21 1.1




3.00mW x 2.26mD x 2.30mH

Guide on Joining Spliced Channels

The text marked on all parts must be shown on the same side as each other




Step 1.
Position the channels and the CSJ joiner so the centre of the CSJ is in line with the end of each channel to be joiner together.

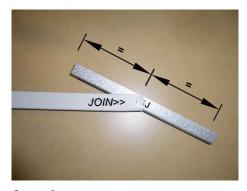

Step 2.
Join the first channel to the CSJ by inserting the centre of the CSJ, on an angle, to the end of the channel where the JOIN>> text is marked.




Push down one side of the CSJ until you hear a 'click'.

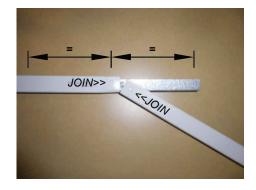


Step 3.


Join the second channel to the CSJ by positioning the <<JOIN of the channel at the centre of the CSJ, on an angle. Push the CSJ into the channel until you hear a 'click'.

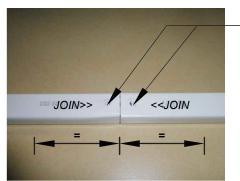

Finished Channel.
The joined channels should now look like the picture with the CSJ positioned equally inside of the joined channels.

Drill out holes with 3mm drill bit in CSJ to match the holes in channel. Drilling of screws on the joined channels is being done after sheets are locked on the spliced channels.

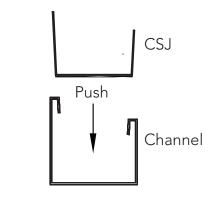

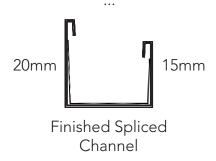

Model: 3023BRK




3.00mW x 2.26mD x 2.30mH

PRE-ASSEMBLY OF SPLICED CHANNELS

Join together 22x channel sections using 11x channel joiners (Part CSJ)

NOTE: Some channels may have holes in them - You will need to redrill holes where CSJ joining channel covers them.

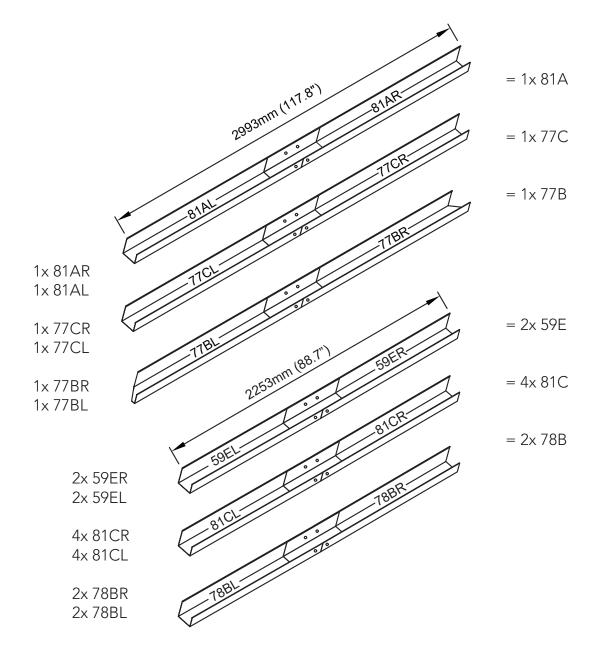




3.00mW x 2.26mD x 2.30mH

Guide on Joining a Spliced Ridge Beam


Follow these three steps to assemble a ridge beam.



Step 1.
Place two ridge beams as shown and push them together.
Slide the cap of one under the other.

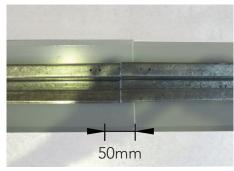

NOTE. There is a 50mm overlap of the ridge caps when the beams are in position.

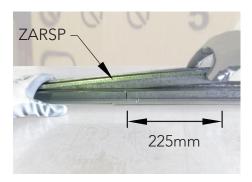


Step 2. Use the ZARSP to connect at the centre of the two ridge beams. Be sure it is pushed in fully.



Step 3.
Turn over the ridge beam.
Measure 250mm from the
middle along the centre of one
ridge beam, mark spacings of
50mm. Fasten with a Tek screw
at each marking.




Repeat to the other side of the ridge beam assembly.

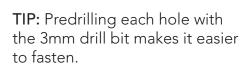



Finished Spliced Ridge Beam

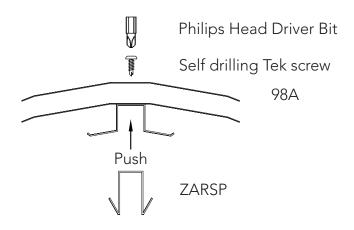



11/01/21


11



3.00mW x 2.26mD x 2.30mH

PRE-ASSEMBLY OF SPLICED RIDGE BEAM

1 required.

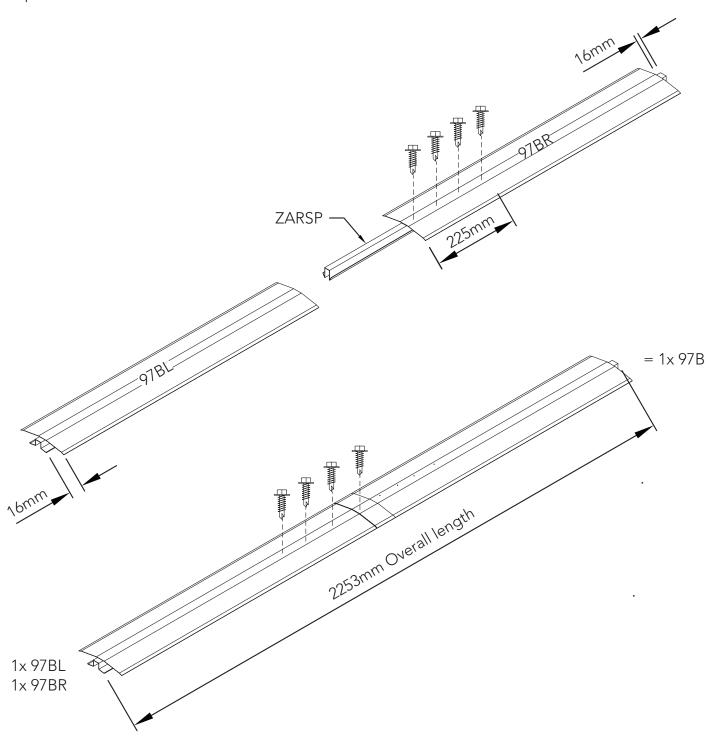


1.1

12

3.00mW x 2.26mD x 2.30mH


OVERVIEW OF ROOF COMPONENTS

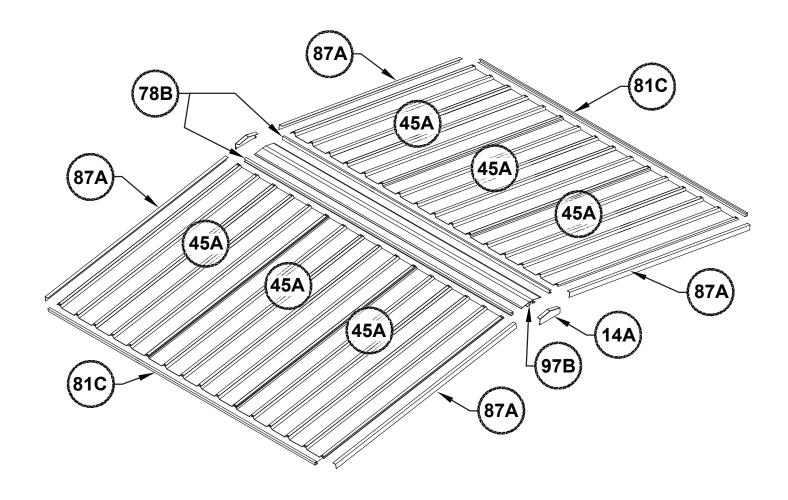




3.00mW x 2.26mD x 2.30mH

OVERVIEW OF WALL COMPONENTS

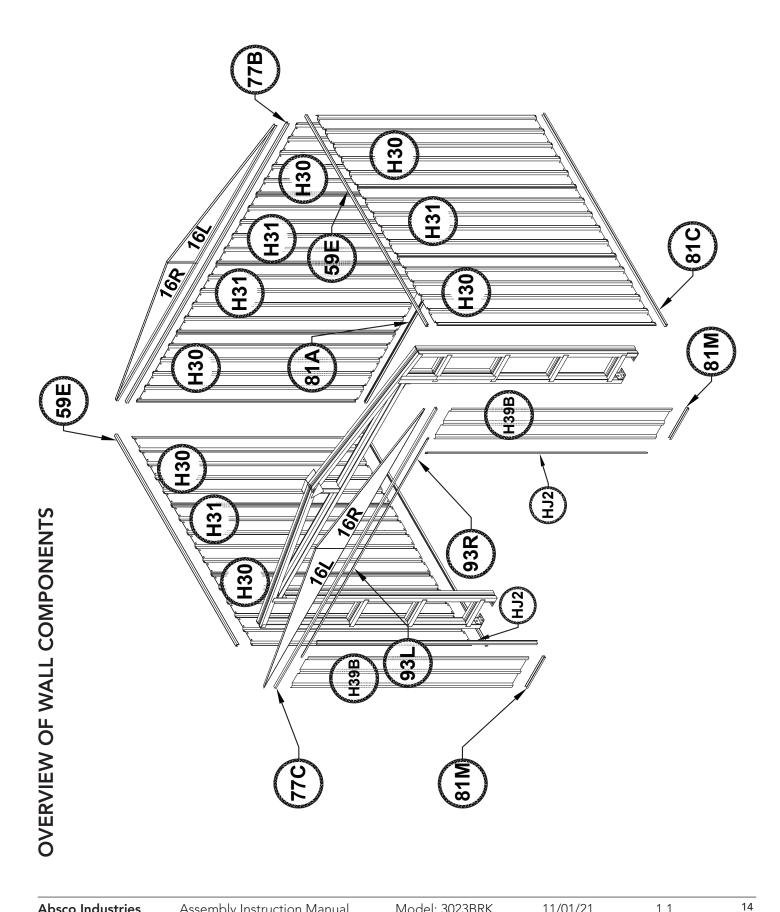




3.00mW x 2.26mD x 2.30mH

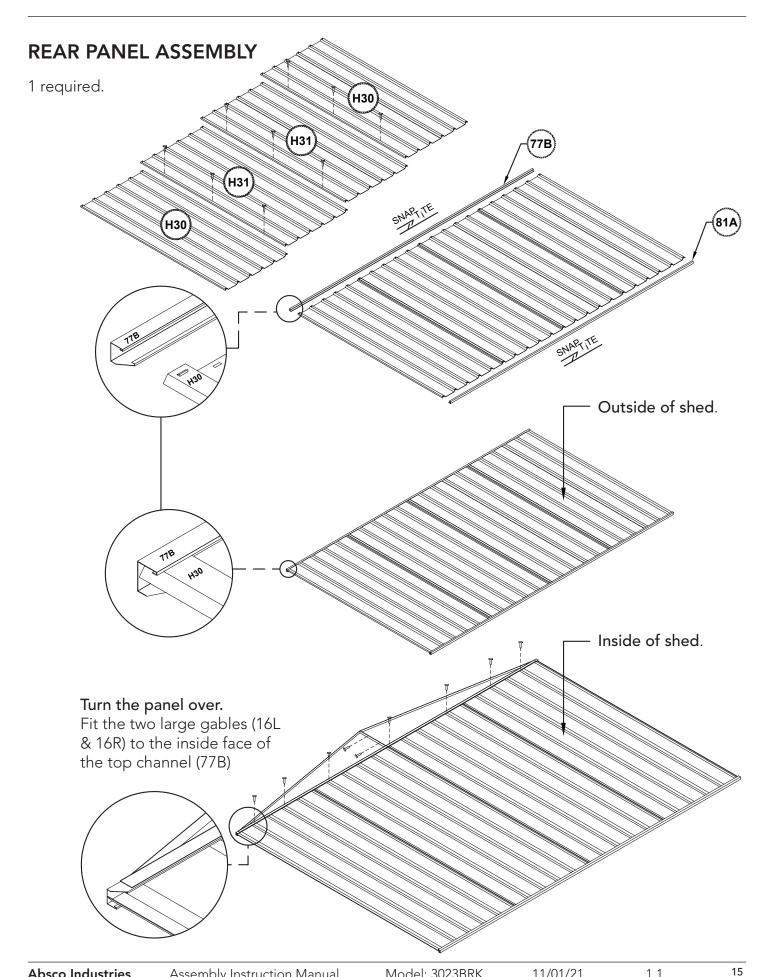



3.00mW x 2.26mD x 2.30mH

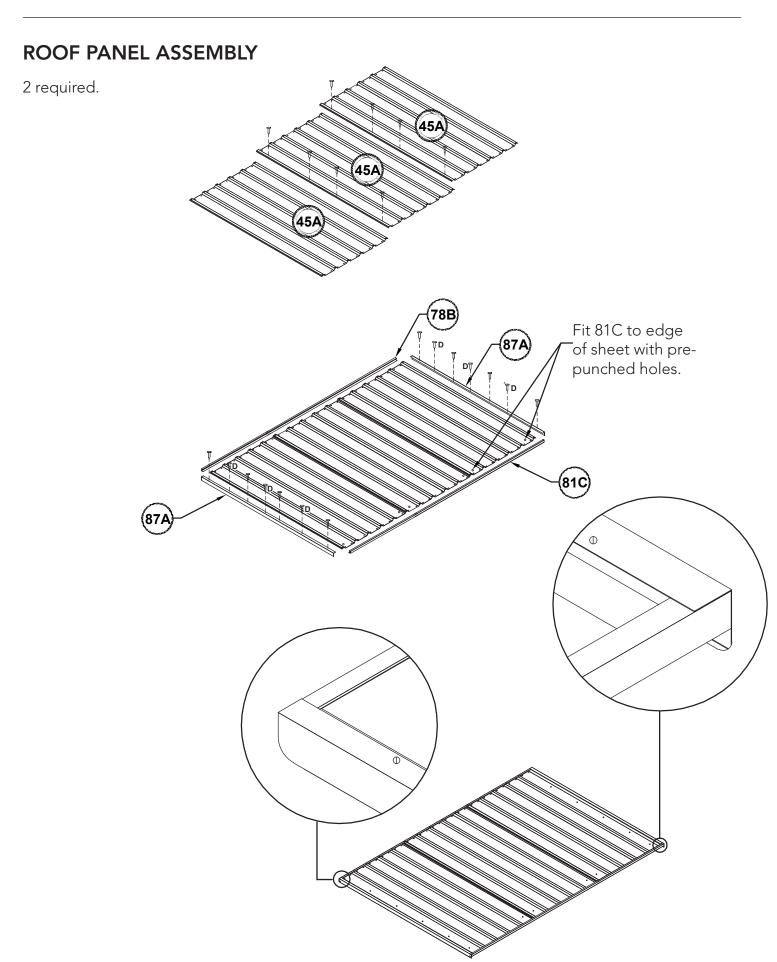


1.1



3.00mW x 2.26mD x 2.30mH

SIDE PANEL ASSEMBLY

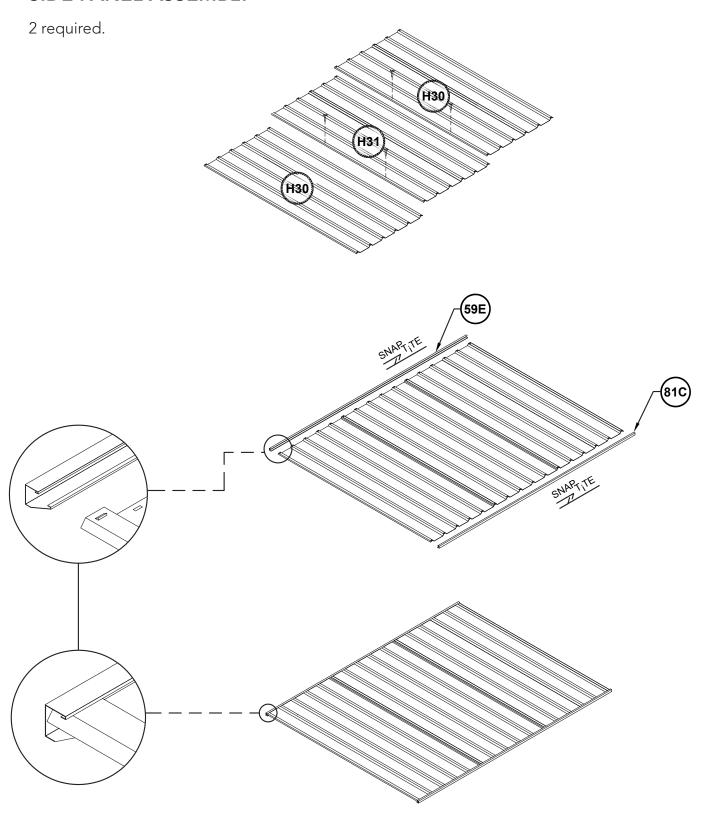




3.00mW x 2.26mD x 2.30mH

HIGH FRONT FRAME ASSEMBLY


STEP 1 of 2

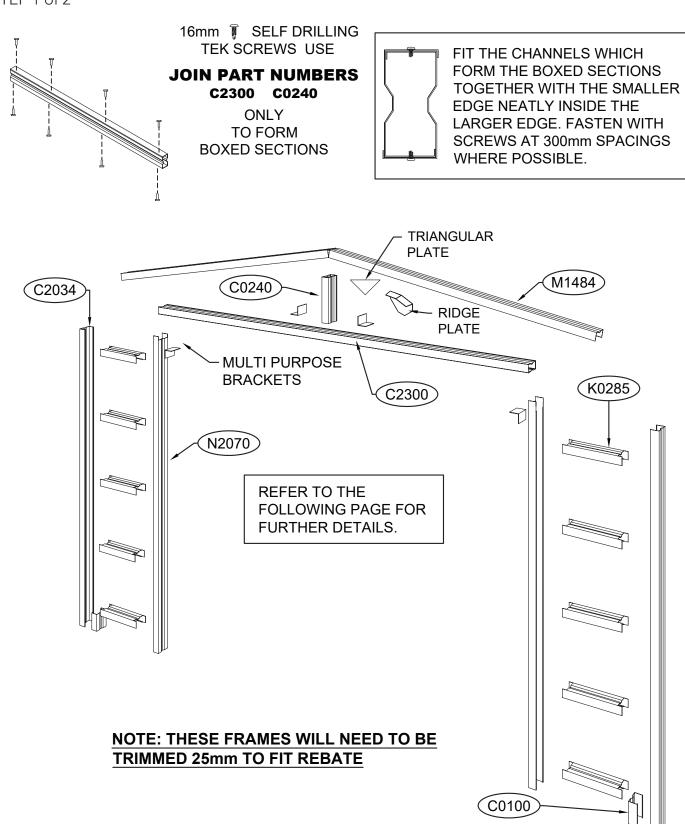



3.00mW x 2.26mD x 2.30mH

HIGH FRONT FRAME ASSEMBLY

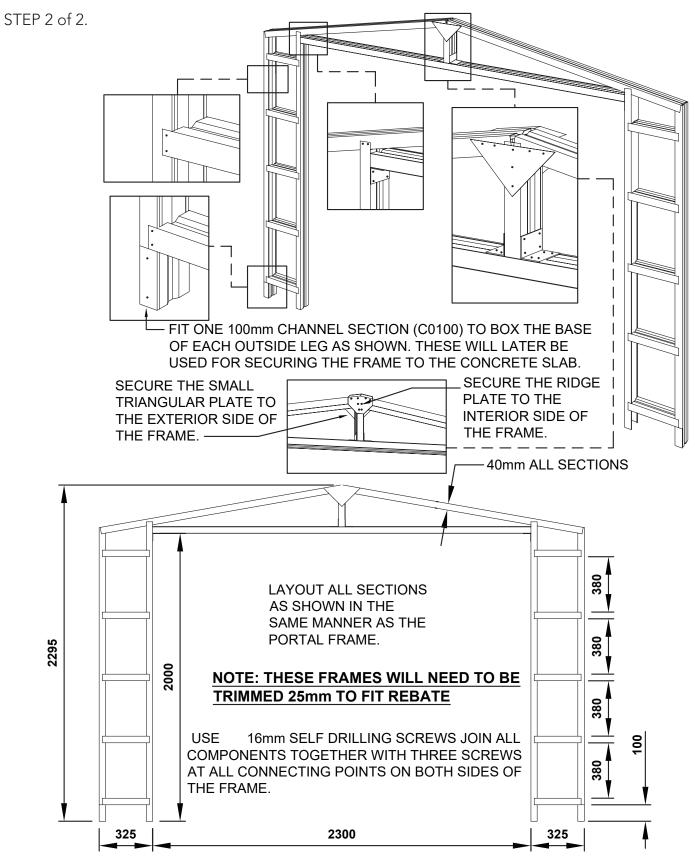

NOTE: IF YOU HAVE AN EDGE REBATE IN YOUR CONCRETE SLAB, YOU WILL HAVE TO CUT AN AMOUNT OFF THE BOTTOM OF THE FRAME LEGS EQUAL TO THE DEPTH OF THE REBATE.

Model: 3023BRK





3.00mW x 2.26mD x 2.30mH


HIGH FRONT FRAME ASSEMBLY SUPPORT PHOTOS

STFP 1

Draw pattern on the concrete in accordance with the dimensions detailed in the assembly instructions.

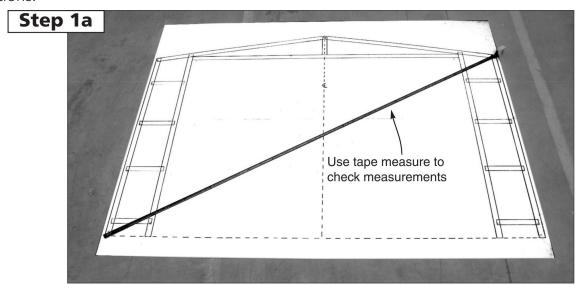

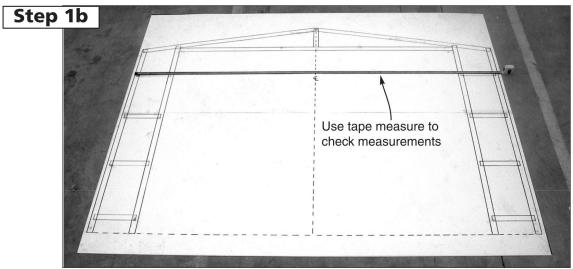

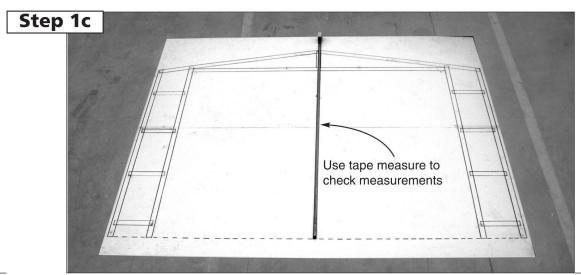




3.00mW x 2.26mD x 2.30mH

HIGH FRONT FRAME ASSEMBLY SUPPORT PHOTOS

STEP 2.

Understand where components are to be positioned.



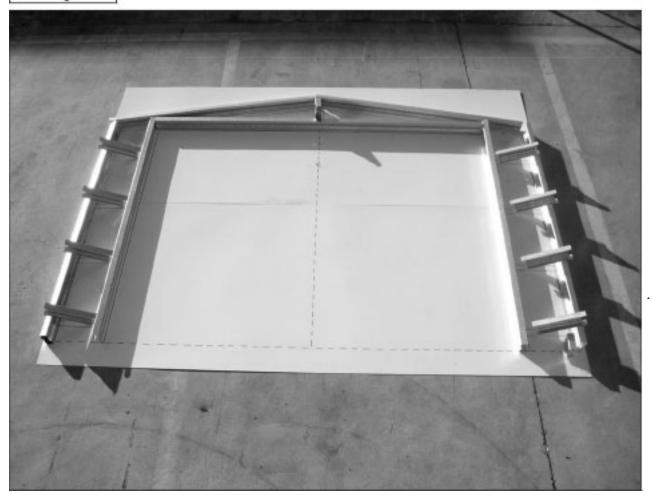


Absco Industries Assembly Instruction Manual Model: 3023BRK 11/01/21 1.1 2




3.00mW x 2.26mD x 2.30mH

HIGH FRONT FRAME ASSEMBLY SUPPORT PHOTOS

STEP 3. Join C0100 to C2034

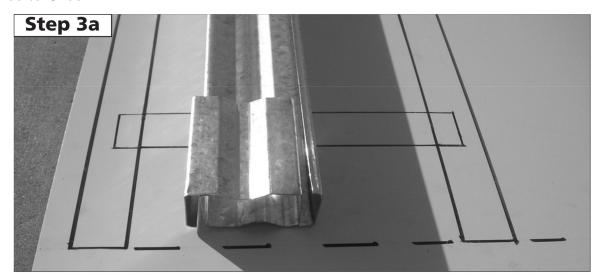



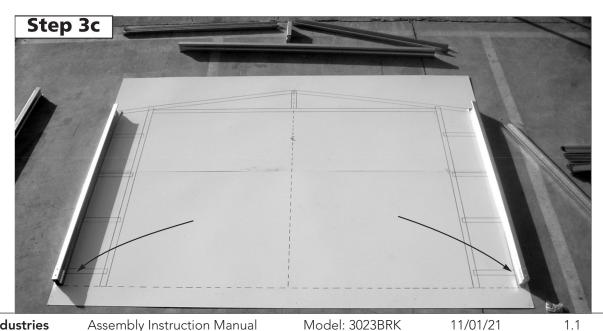



3.00mW x 2.26mD x 2.30mH


HIGH FRONT FRAME ASSEMBLY SUPPORT PHOTOS

STEP 4. Join C2034 to M1484

Step 4a



Step 4b

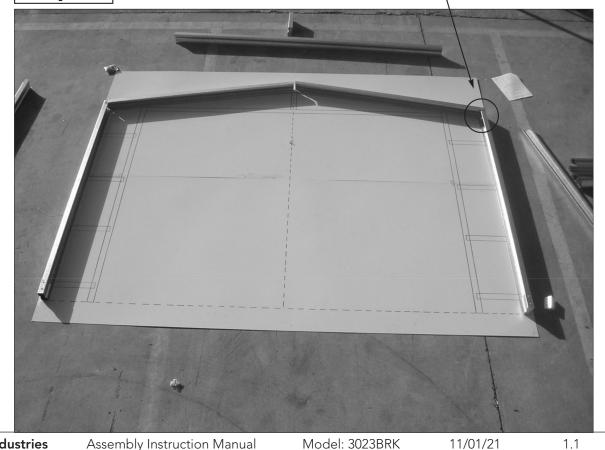

23



3.00mW x 2.26mD x 2.30mH

HIGH FRONT FRAME ASSEMBLY SUPPORT PHOTOS


STEP 5.

Join K0285 to C2034 & N2070.

Step 5a




Step 5b

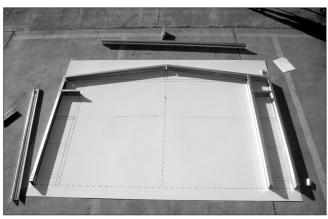

Step 5c




Step 5d

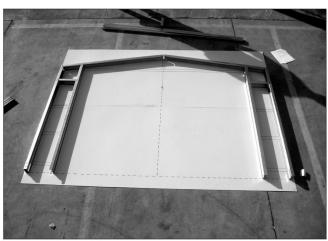

Step 5e



Step 5f

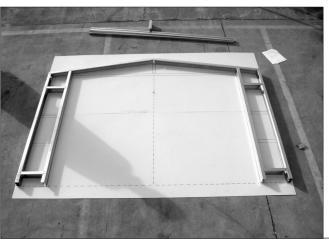

Assembly Instruction Manual

Model: 3023BRK 11/01/21

1.1




3.00mW x 2.26mD x 2.30mH

HIGH FRONT FRAME ASSEMBLY SUPPORT PHOTOS


STEP 6.


Fit mulitpurpose brackets.

Step 6a

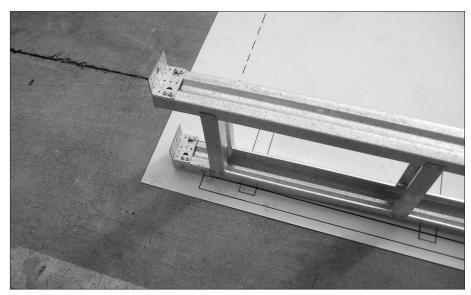

Step 6b

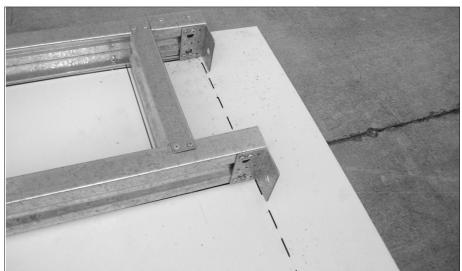

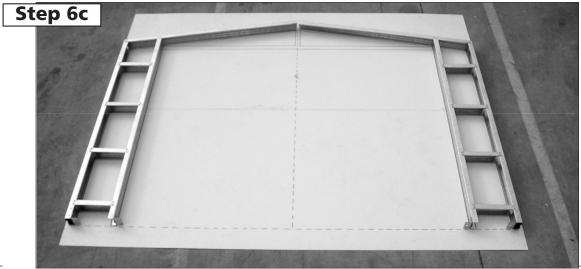




3.00mW x 2.26mD x 2.30mH

HIGH FRONT FRAME ASSEMBLY SUPPORT PHOTOS

STEP 7.

Assemble the C0240 & C2300 sections.

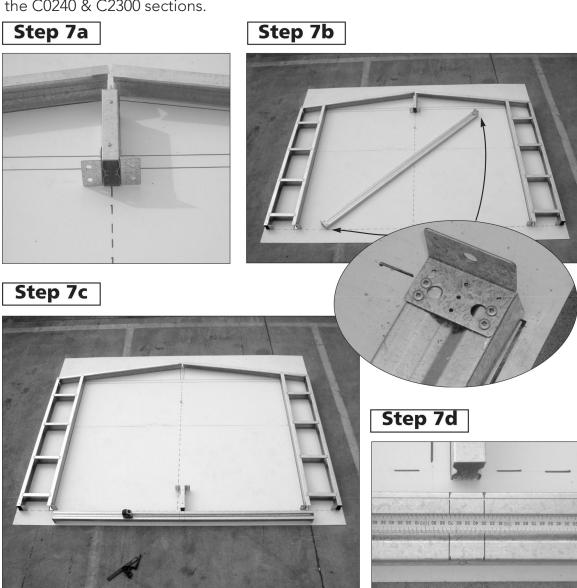

Step 7e






3.00mW x 2.26mD x 2.30mH

HIGH FRONT FRAME ASSEMBLY SUPPORT PHOTOS

STEP 8.

Join all sections together.

Step 8a

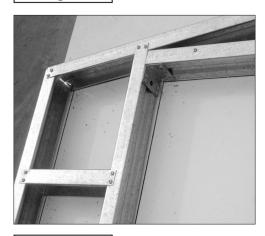

Step 8b



Step 8c



Step 8d



Step 8e



1.1




3.00mW x 2.26mD x 2.30mH

HIGH FRONT FRAME ASSEMBLY SUPPORT PHOTOS


STEP 9.

Turn over frame and repeat steps 4 to 8.

Step 9a

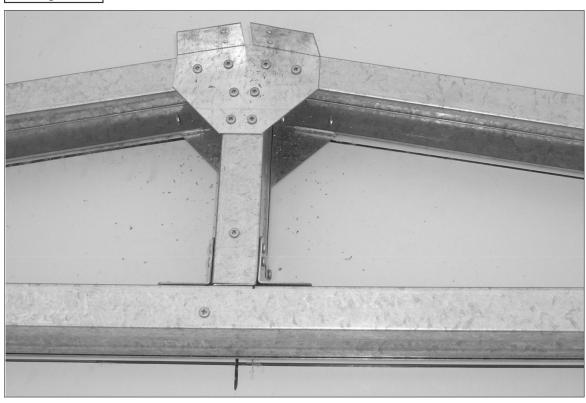

Step 9b

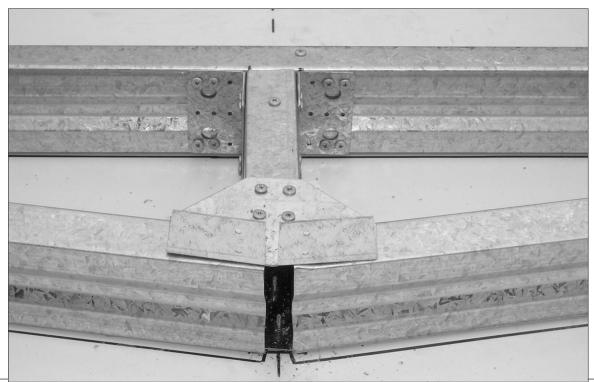

1.1




3.00mW x 2.26mD x 2.30mH

HIGH FRONT FRAME ASSEMBLY SUPPORT PHOTOS


STEP 10.

Fully assembled front frame.

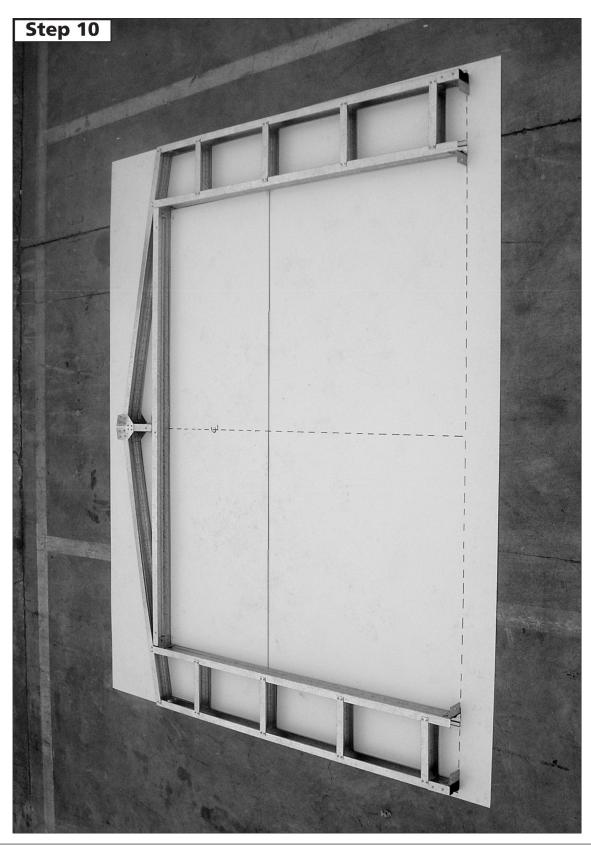



3.00mW x 2.26mD x 2.30mH

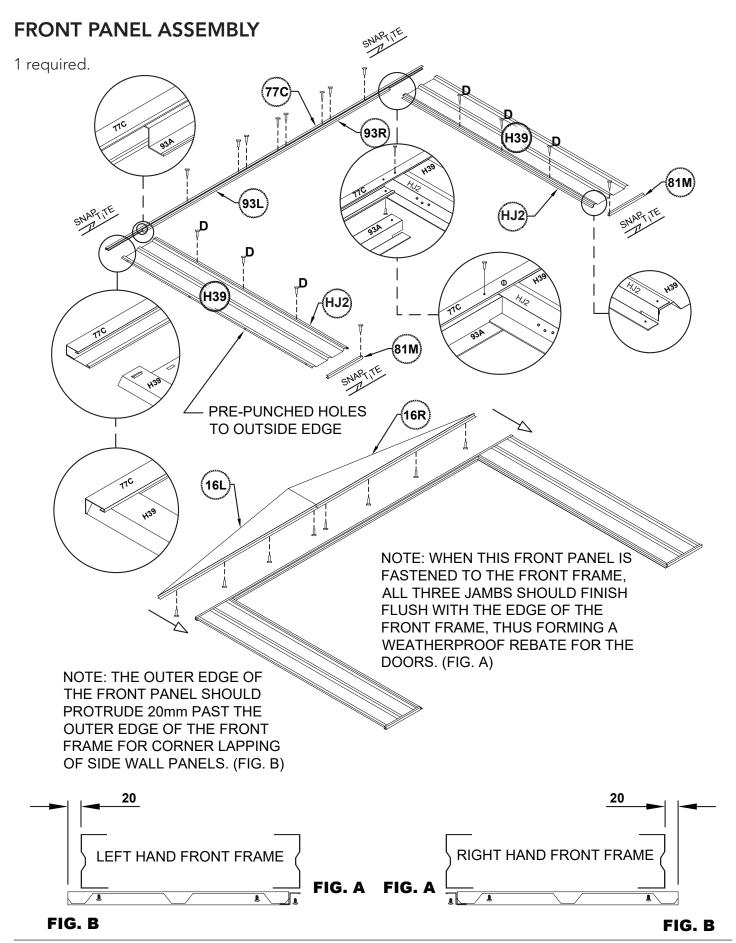




3.00mW x 2.26mD x 2.30mH

HIGH FRONT FRAME DETAILS

Recommended slab dimensions - 3100mm x 2360mm External wall dimensions - 3000mm x 2260mm Internal wall dimensions - 2960mm x 2220mm

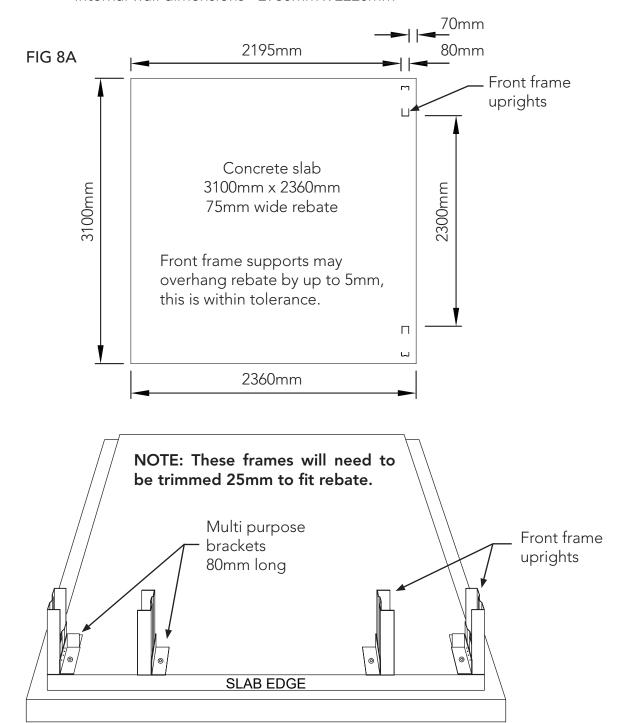


- Secure multipurpose brackets to uprights using self drilling screws
- Move frames into postion, mark and drill holes in slab using 10mm masonry drill bit
- Secure frames to slab with M10 dynabolts.



3.00mW x 2.26mD x 2.30mH


PANEL CONSTRUCTION

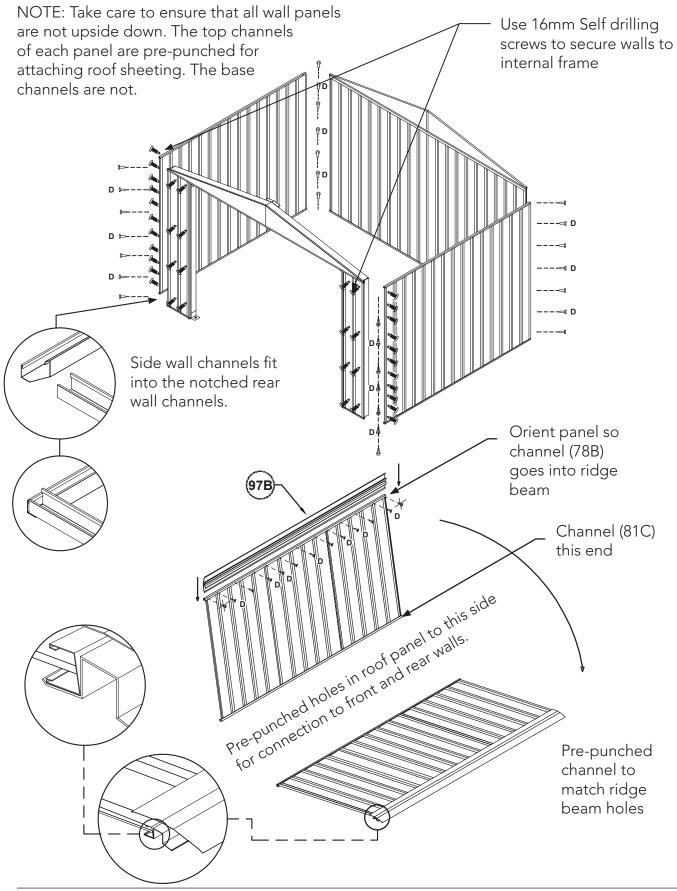

11/01/21




3.00mW x 2.26mD x 2.30mH

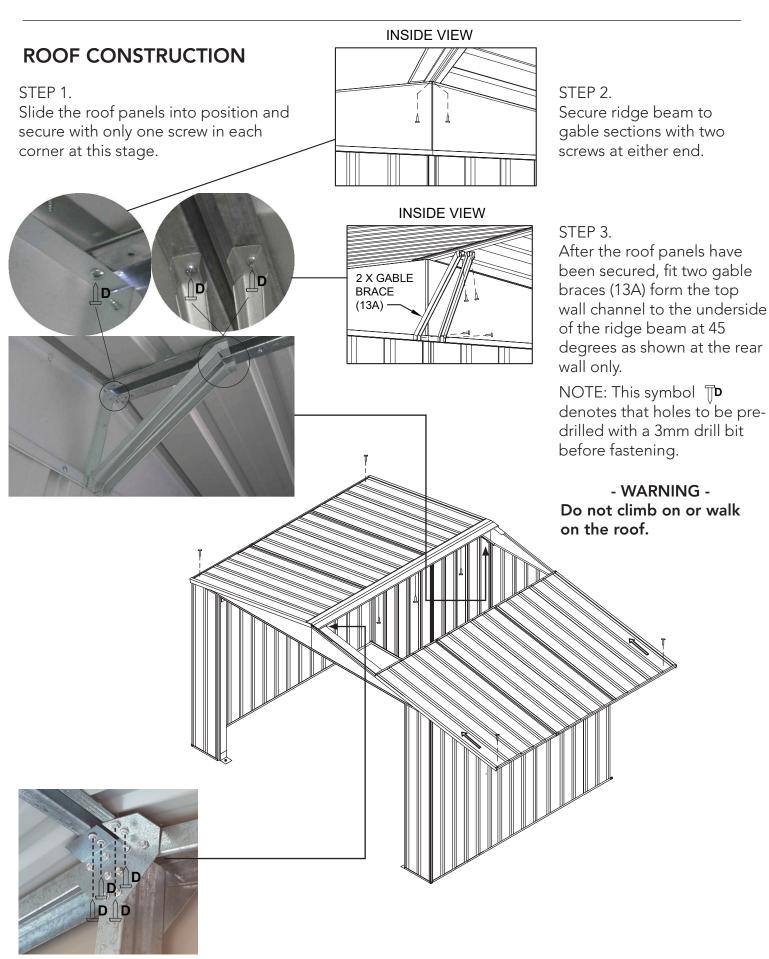



3.00mW x 2.26mD x 2.30mH

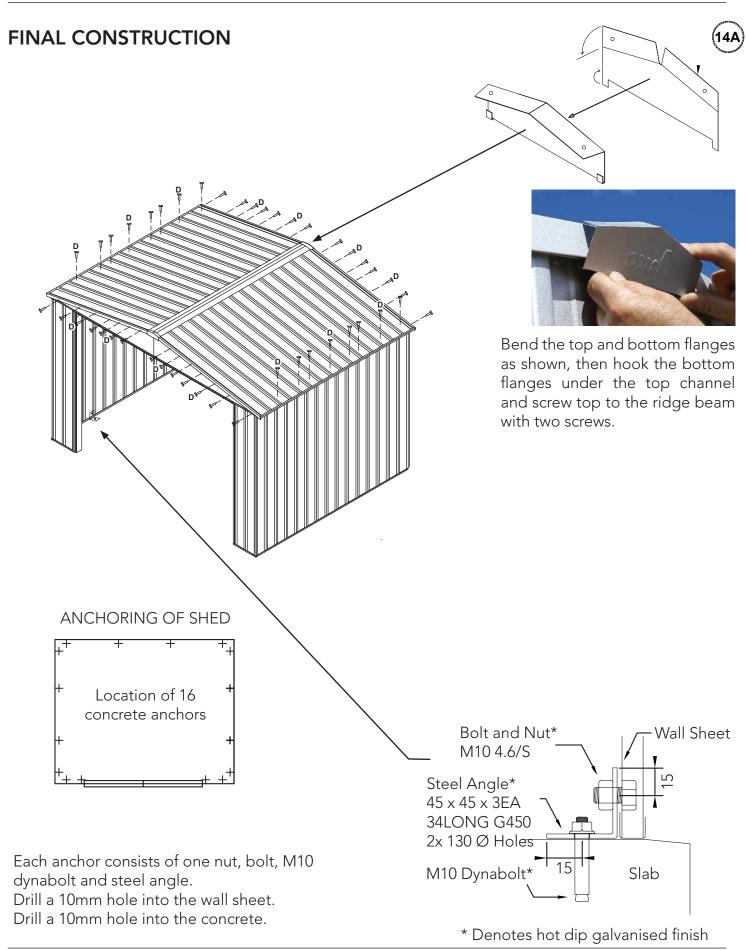



3.00mW x 2.26mD x 2.30mH

ROLLER SHUTTER ASSEMBLY SUPPORT PHOTOS



To begin remove the tape that is holding the back cover of the roller shutter unit.

1

Cut side guides to length for the Bush Ranger Shed. Mark 1820mm from one end and cut to length. Shown below are the offcuts.

2

Take the two "end plate legs" and slide them onto the roller door unit as shown. These will be used to fit the runners.

3A

Take your newly cut to length guides and slide them over the edge of the roller shutter and end plate leg.

3B


Pre-drill with the 3mm drill bit through the guide and the end plate legs.

Take a 45mm long Tek screw and fasten through both of these.

Do not advance the screw all the way down yet because we will use this screw to fasten it to the inside frame of the shed.





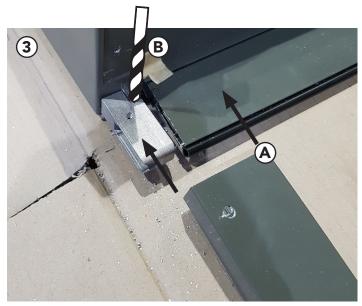



3.00mW x 2.26mD x 2.30mH

ROLLER SHUTTER ASSEMBLY SUPPORT PHOTOS



Position the roller door inside the shed as shown. You will need to bring it through the opening at an angle to get it to fit. Lay on ground as shown if there is enough floorspace. Remove all protective films at this point.

Stand the unit up and position the roller unit centred in the opening, you can check it is centred by looking at the guides. They should be running parallel to the front frame inset the same distance on both sides.



Next drive the Tek screw that is already in the roller unit through the rest of the way into the front frame on both sides.

Now the roller door is held in place slide the roller down and fasten at each cross member in the front frame. This will result in 4 screws per side. pre-drilling with a 3mm drill bit will make it easier to drive the 45mm tek screw into the front frame.





Absco Industries Assembly Instruction Manual Model: 3023BRK 11/01/21 1.1 36




3.00mW x 2.26mD x 2.30mH

ROLLER SHUTTER ASSEMBLY SUPPORT PHOTOS



With the roller shutter fully extended use three more tek screws and fasten inside the roller unit in the top corner at the middle and either side spaced equally.

It is easier if you have an extension for your drill. With the shutter unrolled completely remove the protective polycell sheet from within the roller.

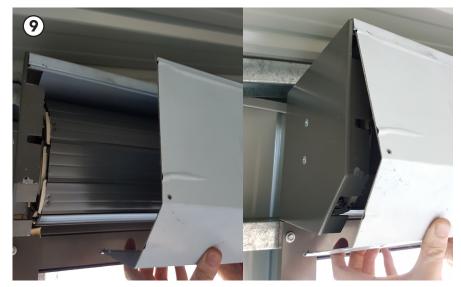


Take the sheet metal cover for the roller unit. Orient as shown, fasten with the supplied pop-rivets or use our most common self tapping screw to fasten.



3.00mW x 2.26mD x 2.30mH


ROLLER SHUTTER FINAL ASSEMBLY

The handles can be mounted at any width along the locking bar. Critical dimensions for drilling a handle are shown below

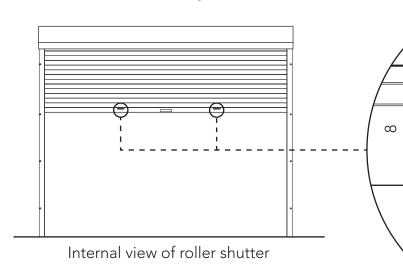

96 Holes to be drilled are 5mm diameter Fasten with two M4x15mm button hd screws per handle.


The two guides require cutouts to accept the locking bars of the roller shutter. Critical dimensions of the cutout are shown below

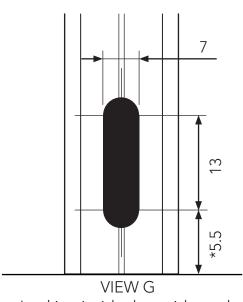

Looking inside the guide track

*NOTE: If rubber is fitted to the bottom slat then make this dimension 11mm.

An uneven slab or misalignment of parts during construction may mean you have to alter these dimensions to suit.

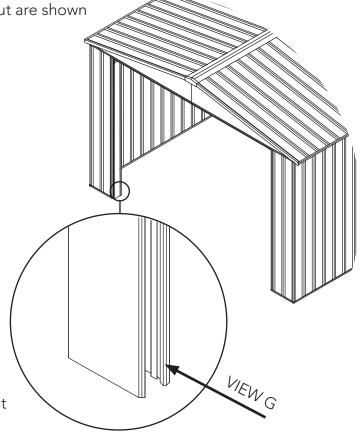

Detail shown without framing or sheeting

Absco Industries Model: 3023BRK Assembly Instruction Manual 11/01/21 1.1



3.00mW x 2.26mD x 2.30mH

Absco Large Gable Roof Shed Notes

General

- 1.G This instruction manual shall be read in conjunction with other consultants drawings, specifications and written instructions provided by Absco and/or their representatives.
- 2.G The drawings provided herein are for installation and structural engineering purposes only. If discrepancies are discovered within the documentation provided, these shall be brought to the attention of Absco and written approvals obtained prior to commencing the affected section of work.
- 3.G If in doubt ask.
- 4.G Until approvals from the local authorities are obtained, commencement of construction from these drawings shall not commence.
- 5.G Unless varied by the project specification, all materials and workmanship shall be undertaken in accordance with the relevant Australian standards and the by-laws and ordinances of the relevant building authorities.
- 6.G All dimensions indicated in these drawings shall be verified on site by the installation contractor. Scaling of drawings shall not be undertaken.
- 7.G Prior to commencing works on site, the contractor shall verify the position of all services in the area to ensure that the construction does not interfere with any of those services.
- 8.G During installation on site the shed structures shall be maintained in a stable condition with no part becoming overstressed or permanently deformed.
- 9.G In circumstances where the shed has been installed in a manner which is inconsistent with the installation manual, structural certification shall be void.
- 10.G The structural components detailed within this installation manual have been designed for the following loads in accordance with AS/NZS1170 based on a Class 10a, Type 2 structure:
- Roof Live Load: 0.25 kPa uniformly distributed or 1.1 kN concentrated as per AS/NZS1170.1

 
Wind Load: Classification N2, Non-Cyclonic to AS4055 where Vu = 40 m/s, Vs = 26 m/s

Windward wall Cpe = 0.7

Leeward Wall Cp, e = -0.3 to -0.5 as applicable based on shed geometry

Side Wall Cp, e = -0.2 to -0.65 as applicable based on shed geometry

Roof Cp, e = -0.3 to -1.04 depending on wind direction



AU: 1800 029 70 NZ: 0800 466 444

Model: 3023BRK



39



3.00mW x 2.26mD x 2.30mH

Absco Large Gable Roof Shed Notes

Steelwork

- 1.S All structural steelwork shall have a corrosion protection system applied consistent with AS/NZS 2312-2002.
- 2.S All structural steelwork detailed within this installation manual shall be minimum Grade 550 for roll formed sections (including roof and wall sheeting and portal frame members) and Grade 250 for angle sections.
- 3.S All multi purpose and anchor brackets for connection onto the supporting reinforced concrete slab (includes 45x45x3EA x 34mm long and 47x47x1.9EA x 80 long) shall be minimum Grade 450.
- 4.S All portal frame knee and apex plates shall be minimum Grade 450
- 5.S All roof, and wall sheeting shall be minimum base metal thickness of 0.3mm
- 6.S All portal frame members shall be minimum base metal thickness of 0.75mm.
- 7.S All snaptite channels and jambs shall be minimum base metal thickness of 0.42mm
- 8.S All top hats shall be minimum base metal thickness of 1.0mm
- 9.S All portal frame knee and apex plates shall be minimum base metal thickness 1.0mm
- 10.S All screw fasteners shall be Phil Pan Head Zinc Plated #8 x 3/4" (STP0820)
- 11.S All bolt fasteners for anchoring shall be M10 minimum grade 4.6/S
- 12.S Installation of screw fasteners shall generally be undertaken in accordance with the relevant provisions of AS1562.

Absco Industries Assembly Instruction Manual Model: 3023BRK 11/01/21 1.1 40




3.00mW x 2.26mD x 2.30mH

Absco Large Gable Roof Shed Notes

Supporting Slab and Foundations

- 1.F The supporting slab foundation for the garden shed shall be of a minimum size indicated on the installation manual. The top surface of the formed slab shall be level and free of any irregularities which would inhibit the installation of the shed.
- 2.F The structural engineering design for the supporting slab foundation shall be undertaken by a suitably qualified structural engineer. The design shall consider all relevant provisions of AS3600 and AS2870.
- 3.F Between adjacent footings or excavations, the contractor installing the slab foundation shall not exceed a rise of 1 in a run of 2 in line of slope.
- 4.F Unless approved in writing by the slab foundation engineer, the limits of excavations near existing footings shall be in accordance with that indicated below.

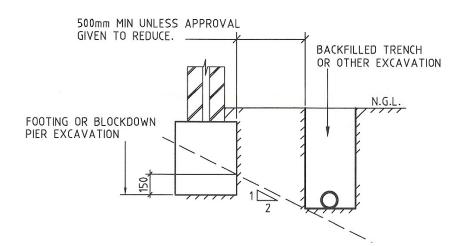

The contactor shall undertake investigatory localised excavations near existing footings to ascertain their depth prior to excavating adjacent to them. It is noted that excavating to a depth below that indicated above shall not be undertaken without the written approval from the engineer.

 
Absco Industries Assembly Instruction Manual Model: 3023BRK 11/01/21 1.1 41



3.00mW x 2.26mD x 2.30mH

Absco Sheds Storage Guidelines

- Absco Sheds are designed to be weatherproof for normal weather conditions. In the event of extreme weather conditions such as heavy rain, combined with high wind gusts, the ridge capping, sheeting joins, screw fixings etc., may exhibit minor deformations which may allow some water entry. These areas should be checked regularly to ensure that maximum strength and protection is maintained.
- Other weather conditions such as extreme heat and extreme cold, moist or dry air can influence the effects of concrete floor moisture and/or condensation on the underside of the roof sheets.
- Absco Sheds and storage units are primarily used for storage of garden equipment such as lawnmowers, wheelbarrows, garden tools etc. Storage items that might be adversely affected by any of the above conditions may require additional protection such as being sealed or covered by plastic sheets and/or stacked above the concrete floor on timber slats.
- Waterproof sealants may be used to offer further protection where required around joins and screw fixings, as can rubber door seals and other products which are available from most hardware outlets.
- Placement of waterproof sealants (silicone) between the base of the shed and concrete slab is not recommended, as this process can have a reverse effect, preventing excess water from escaping, resulting with water accumulating and being trapped inside the shed.
- Absco accepts no responsibility for water entry, floor moisture, condensation or the condition of the Contents inside your Absco steel building arising from any of the pre-mentioned weather conditions.





Model: 3023BRK



42

Lifetime Warranty Statement



This warranty against defects is given by:

Absco Industries (ABN: 77 869 708 678) Address: PO Box 119 Acacia Ridge QLD 4110

Ph: 1800 029 701 Fax: 07 3344 1191

Email: admin@absco.com.au

Date of issue: 19 December 2018

Details of Manufacturer's Warranty

This product comes with a Lifetime structural warranty from the date of purchase. This warranty also applies where there are missing or damaged parts identified in the parts list referred to in the instruction kit within the product packaging.

Please ensure that you keep this warranty form in a safe place along with your proof of purchase. You can register your warranty online **http://abscosheds.com.au/warranty-details/** or complete the form on the back of this document and mail it back to Absco, along with a copy of your proof of purchase.

The benefits of this warranty are in addition to your rights under the Australian Consumer Law (ACL) and in particular, the guarantees implied under the ACL and any other rights and remedies of the consumer under a similar law in relation to the goods and services to which this warranty relates.

Process of claiming warranty:

To make a claim under the warranty within the warranty period, you will need to contact the manufacturer directly by phone or email:

Contact Number: 1800 029 701

Contact Email: admin@absco.com.au

You will be required to produce proof of purchase (this is at discretion of the manufacturer) at the time of the claim.

The manufacturer bears the cost of replacing the products or spare parts or repairing the products and reasonable direct expenses of claiming under this warranty:

Where parts are replaced, the manufacturer will bear the cost of sending the spare part and will endeavour to deliver it to the customer's nearest reseller within 20 working days for the customer to pick up. At such time the customer may be required to return the alleged faulty parts.

Where assessment is required in case of replacing or repairing the product, the manufacturer will appoint an assessor within 10 working days to identify the alleged defect. The manufacturer will bear the repair costs by appointing a local tradesman. The manufacturer may choose to replace the product if the repair or the cost of repair is not feasible. The replacement product will be available for collection from the nearest reseller within 20 working days. The customer will bear the cost of assembly for the replacement product.

IMPORTANT

1. Manufacturer's Disclosure

This warranty against defects shall not apply in the following situations:

- A)Where the product is not assembled in accordance with the instructions provided in the product kit;
- B)Where the product is used to store corrosive materials such as fertilizer, chlorine etc;
- C)The warranty does NOT cover damage caused by storms, wind, rain, snow or poor foundations;
- D)This warranty does not apply to surface deterioration of panels caused by 'Swarf' (Tiny particles of steel debris left from cutting, grinding or drilling operations) that has not been removed after building construction.

2. Notes

This product is weatherproof to a certain level; however driving windy rain may cause the product to leak. Condensation may also occur in some weather conditions such as extreme heat or cold. The product should only be used for storing items such as gardening equipment and should not be used for articles that may be prone to damage if they come into contact with moisture.

3. Major Defects

If the manufacturer is satisfied that the defect is a major defect, the purchase price may be refunded in lieu of providing a replacement product or repairing the product.

This warranty is provided in addition to other rights and remedies you have under law: Our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

If you do not wish to register your warranty online, complete the below form and email, fax or post this form back to Absco, along with a copy of your proof of purchase.

NAME:		
STREET ADDRESS:	POSTAL / ZIP CODE:	
STATE / CITY / PROVINCE / REGION:		
COUNTRY:		
SHED TYPE/CODE:		
ORDER NO:		
DATE OF PURCHASE:		
EMAIL ADDRESS:		
DATE REGISTERED:		