

750mm WIDE DOOR OPENING
1 REQUIRED

1500mm WIDE DOOR OPENING
2 REQUIRED

2300mm WIDE DOOR OPENING
3 REQUIRED


CARTON CONTENTS:

1 X PHILLIPS
DRIVER BIT

4 X 16mm SELF DRILLING
TEK SCREWS

1 X GALVANISED STEEL
DOOR ENTRY RAMP
750mm LONG

EXISTING SHED
BASE CHANNELS

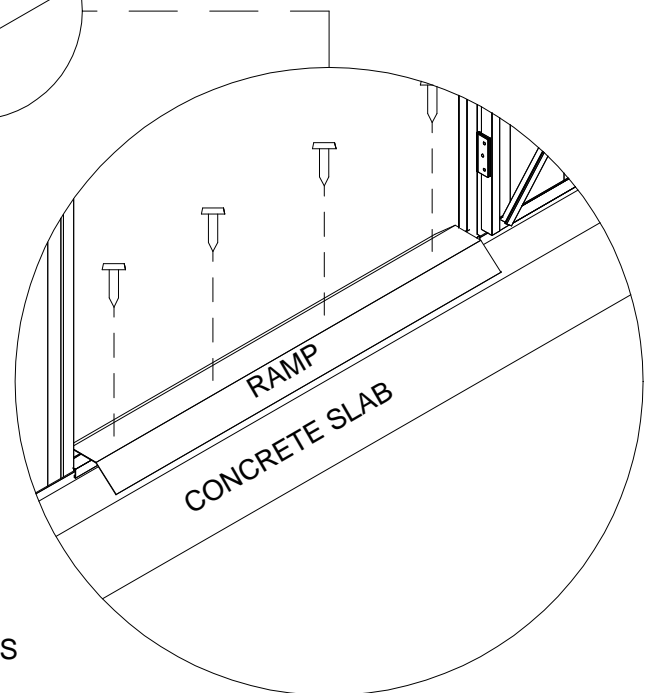

INSTALLATION:

LOCATE THE RAMP CENTRALLY OVER THE BASE CHANNELS. USING YOUR BODY WEIGHT, ENSURE THAT THE TOP OF THE RAMP HAS MADE CONTACT WITH THE BASE CHANNELS. USING A BATTERY OR ELECTRIC DRILL, APPLY MODERATE PRESSURE TO SECURE THE SECTIONS TOGETHER AS SHOWN.

NOTE: FOR DOUBLE DOOR SHEDS, YOU WILL NEED TO DRILL A 10mm HOLE IN THE RAMP TO ACCOMMODATE THE BOTTOM DOOR PADBOLT.