

For construction in non-cyclonic areas

Wind rating: N2 as per AS4055-2021.

If you require a higher wind rating please contact  
us: admin@absco.com.au or 1800 029 701

\*You will need to contact a suitably qualified professional to specify concrete slab or footings for your site.

Brackets for securing the frame to either a concrete slab or footings are included in this kit. Anchors are not supplied.

Local authority approval must be obtained prior to construction. Once you have selected your site, draw a site plan and lodge your application together with a copy of the engineering plans located at the back of these instructions.



**DOWNLOAD  
OUR APP FOR  
ASSEMBLY  
VIDEOS**



## PLEASE LEAVE A REVIEW

Tell us about your experience!  
Visit [www.absco.sheds.com.au/review](http://www.absco.sheds.com.au/review)

**Before Getting Started:**

- Read these instructions carefully and fully so that an understanding of the steps involved in construction is obtained. Do this with constant reference to the engineering drawings provided.
- Measure and check off all the components prior to commencement. If a discrepancy is discovered, contact Absco immediately for assistance.

**Part Numbers:**

- All framing sections & wall and roof sheets have part numbers printed on them. The remainder of the components should be identified by their description, size and pictures provided in the component lists.

**Roller Door Instructions and Engineering Certification:**

- Absco Industries supplies roller doors from another Australian manufacturer. The instructions to install the door are supplied with the roller door and are not covered in this document.
- The engineering documentation that certifies the door to the appropriate wind loading is also supplied by the manufacturer.

**Anchor Sets Not Supplied:**

- Sleeve anchors are detailed but not supplied with this garage. They can be purchased readily from most hardware stores. Anchors required for this garage is **32 OFF 12x130 mm Sleeve Anchors**.

**Self Drilling Tek Screws:**

- Hex head tek screws (FAST035) are to be used unless noted otherwise.
- Hex head tek screws with neoprene washer (FAST033) are to be used for securing roof sheets to framework.
- Wafer head tek screws (FAST014) are to be used on the outside of framework to keep these surfaces as smooth as possible so that sheeting can be secured to them.
- All roof and wall sheets are pan fixed. ie: Screwed through the flat pan of the steel sheeting into the framework.

### Tools Required:



ELECTRIC  
DRILL



LADDER



ELECTRIC DRILL WITH  
HAMMER FUNCTION



MALLET



TAPE  
MEASURE



POP RIVET  
TOOL



16mm MASONRY  
DRILL BIT



SHIFTING SPANNER /  
13mm SOCKET TOOL

### Tools Recommended:



SPIRIT  
LEVEL




PHILLIPS HEAD  
SCREW DRIVER



SILICONE



TIN  
SNIPS

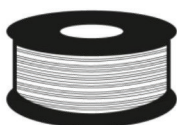

BUILDERS'  
STRING



MARKER



ANGLE  
GRINDER




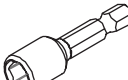


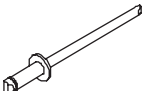

















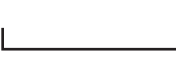
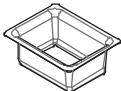
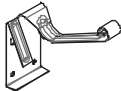

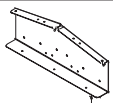
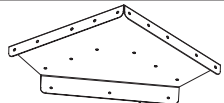
HACKSAW

### Safety Notes:

- The assembly of this product requires some lifting of heavy objects. Two person lifts are required.
- Some parts have sharp edges and/or corners. The use of gloves and safety shoes is highly recommended. Pay attention to where these parts can be safely handled most safely, and plan the handling of these parts before working with them.
- Drilling sheet metal produces small metal shavings the use of safety glasses and the periodic clearing of these shavings throughout the build is recommended.
- Use the appropriate personal protective equipment for any tool used during the assembly.















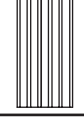

## COMPONENT PACKING LIST

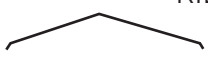Check off all components.

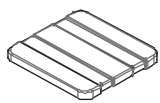QTY	COMPONENT DESCRIPTION	PART NO.	CHK	QTY	COMPONENT DESCRIPTION	PART NO.	CHK
1	 PHILIPS HD DRIVER BIT	<b>FAST 023</b>		1	 HEX HD DRIVER BIT	<b>FAST 038</b>	
400	 WAFER HD TEK SCREW 10-16x 16mm	<b>FAST 014</b>		1400	 HEX HD TEK SCREW 10-16x 16mm	<b>FAST 035</b>	
200	 POP RIVET 4-3	<b>FAST 009</b>		400	 HEX HD TEK SCREW W/ NEO WASHER 10-16x 16mm	<b>FAST 033</b>	
40	 PURLIN BRACKET	<b>BKT 11</b>		44	 MULTI-PURPOSE BRACKET	<b>BKT 17</b>	
2	 TRIANGLE PLATES 150x 150mm	<b>ZACO 190</b>		4	 ROOF STRAPPING L = 20m	<b>FAST 040</b>	
6	 ANGLE BRACE 40x 40x 530mm	<b>ZACO 124A</b>		1	 CENTRE MULLION 80x 300x 3240mm	<b>ZACO 215</b>	
4	 SIDE MULLION 80x 150x 2790mm	<b>ZACO 216</b>		24	 HEX HD TEK SCREW 14-20x 45mm	<b>FAST 081</b>	
4	 GUTTER L = 3030mm	<b>TR22</b>		2	 DOWNPIPE 100x 75mm L = 2400mm	<b>TR10</b>	
4	 BARGE FLASHING L = 3050mm	<b>TR06</b>		2	 RIDGE CAPPING L = 3030mm	<b>TR08</b>	
2	 L FLASHING L = 3030mm	<b>TR19</b>		2	 ROLLER DOOR FLASHING L = 3030mm	<b>TR21</b>	
4	 GUTTER END STOP	<b>TR25</b>		2	 DOWNPIPE STRAP 450mmx 20x 0.35mm	<b>TR29</b>	
1	 CENTRE MULLION CAP L = 2340mm	<b>TR71</b>		2	 DOWNPIPE DROP	<b>RWG 18</b>	
16	 GUTTER BRACKET	<b>RWG 06</b>		18	 JOINER PLATE 80x 80x 1.0	<b>ZACO 180</b>	
6	 APEX PLATE	<b>ZACO 194</b>		12	 KNEE PLATE	<b>ZACO 193</b>	

## COMPONENT PACKING LIST



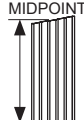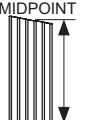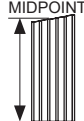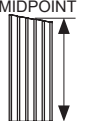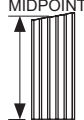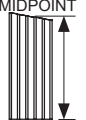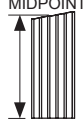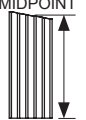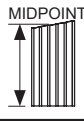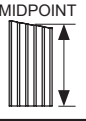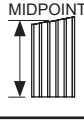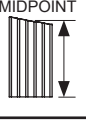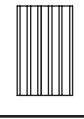





Check off all components.

SHEET PACK							
QTY	COMPONENT DESCRIPTION	PART NO.	CHK	QTY	COMPONENT DESCRIPTION	PART NO.	CHK
1	 STEEL SHEET 3318 to MIDPOINT x 773mm	<b>338L</b>		1	 STEEL SHEET 3318 to MIDPOINT x 773mm	<b>338R</b>	
1	 STEEL SHEET 3188 to MIDPOINT x 773mm	<b>325L</b>		1	 STEEL SHEET 3188 to MIDPOINT x 773mm	<b>325R</b>	
1	 STEEL SHEET 3057 to MIDPOINT x 773mm	<b>312L</b>		1	 STEEL SHEET 3125 x 773mm	<b>312R</b>	
1	 STEEL SHEET 2927 to MIDPOINT x 773mm	<b>299L</b>		1	 STEEL SHEET 2927 to MIDPOINT x 773mm	<b>229R</b>	
1	 STEEL SHEET 982 to MIDPOINT x 773mm	<b>105L</b>		1	 STEEL SHEET 982 to MIDPOINT x 773mm	<b>105R</b>	
1	 STEEL SHEET 852 to MIDPOINT x 773mm	<b>092L</b>		1	 STEEL SHEET 852 to MIDPOINT x 773mm	<b>092R</b>	
2	 STEEL SHEET 2370 x 773mm Trimming required	<b>237</b>		2	 STEEL SHEET 1313 x 773mm Trimming required	<b>131</b>	
16	 STEEL SHEET 2860 x 773mm	<b>286</b>		16	 STEEL SHEET 3030 x 773mm	<b>303</b>	
Nominal sheet dimensions are shown +/- 2mm is within tolerance							

Nominal sheet widths are shown. +/- 2mm is within tolerance.











## COMPONENT PACKING LIST

Check off all components.

FRAMING SECTIONS 40x80mm - RG60602N2FP									
FRONT FRAME see page 8 for frame identification guide									
2		FRAME SECTION L = 2755mm	C2755		2		FRAME SECTION L = 2992mm	S2992	
2		FRAME SECTION L = 2750mm	C2750		4		FRAME SECTION L = 1365mm	N1365	
4		FRAME SECTION L = 2400mm	C2400		6		FRAME SECTION L = 260mm	K0260	
2		FRAME SECTION L = 1140mm	C1140		2		FRAME SECTION L = 100mm	C0100	
2		FRAME SECTION L = 1080mm	C1080		2		FRAME SECTION L = 700mm	K0700	
2		FRAME SECTION L = 875mm	R0875		2		FRAME SECTION L = 1100mm	R1100	
REAR FRAME									
2		FRAME SECTION L = 3262mm	C3262		2		FRAME SECTION L = 2990mm	J2990	
2		FRAME SECTION L = 2970mm	C2970		2		FRAME SECTION L = 2989mm	M2989	
2		FRAME SECTION L = 2950mm	C2750		8		FRAME SECTION L = 1467mm	K1467	
2		FRAME SECTION L = 100mm	C0100						

## COMPONENT PACKING LIST

Check off all components.

FRAMING SECTIONS 40x80mm (CONTINUED)							
QTY	COMPONENT DESCRIPTION	PART No.	CHK	QTY	COMPONENT DESCRIPTION	PART No.	CHK
INTERNAL FRAMES (IN 3 PACKS)							
24	 FRAME SECTION L = 2990 mm	C2990		6	 FRAME SECTION L = 2880 mm	C2880	
12	 FRAME SECTION L = 2750 mm	C2750		9	 FRAME SECTION L = 1920 mm	C1920	
6	 FRAME SECTION L = 560 mm	C0560		12	 FRAME SECTION L = 315 mm	C0315	
PURLINS & SIDE GIRTS							
16	 FRAME SECTION L = 2960 mm	C2960		12	 FRAME SECTION L = 200 mm	C0200	
4	 FRAME SECTION L = 100 mm	C0100		16	 FRAME SECTION L = 1450 mm	K1450	

CENTURION ROLLER DOOR - RATED FOR N2 WIND LOADING							
QTY	COMPONENT DESCRIPTION	PART No.	CHK	QTY	COMPONENT DESCRIPTION	PART No.	CHK
2	WINDSHIELD ROLLER DOOR 2470W x 2400H	RD08		4	WINDSHIELD ROLLER DOOR GUIDES (2 PER BOX)	-	




## Frame Section Identification Guide


There are several types of frame section, each featuring a different combination of notches and/or holes. Frame sections are coded with a letter representing the type of frame section, followed by the length of the frame section in millimeters.

EG: C2960 = Straight cut both ends with overall length of 2960mm


C-TYPE - Straight cut at both ends

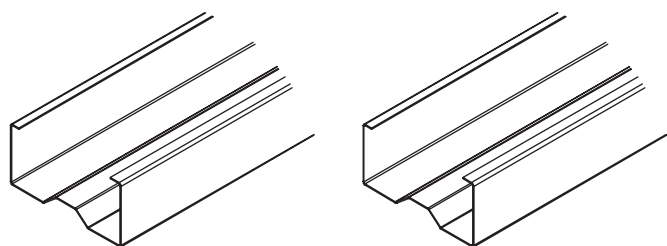


M-TYPE - 45mm lip notch at both ends

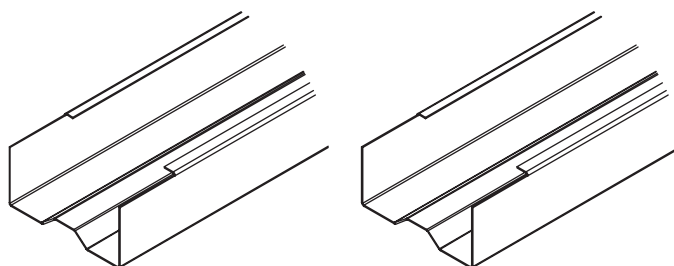


J-TYPE - Straight cut at one end: 20mm tab notch with holes at other end

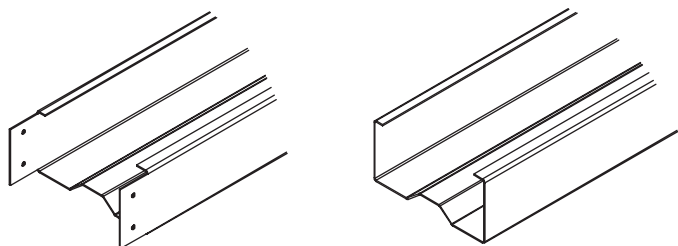


N-TYPE - Straight cut at one end: 45mm lip notch/20mm tab notch with holes at other end

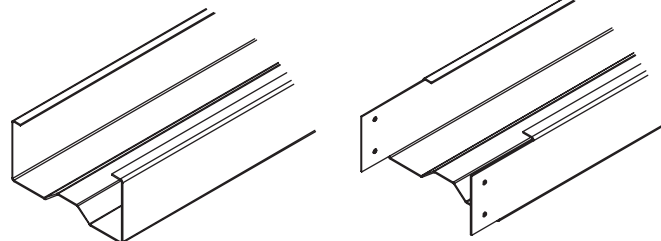


K-TYPE - 20mm tab notch with holes at both ends

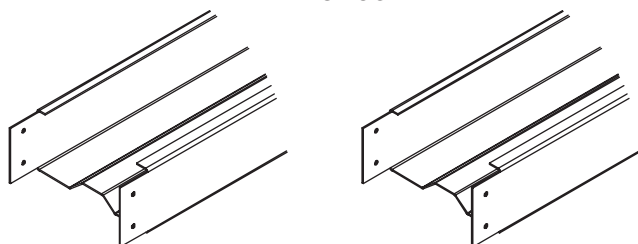


P-TYPE - 45mm lip notch/20mm tab notch with holes at both ends.

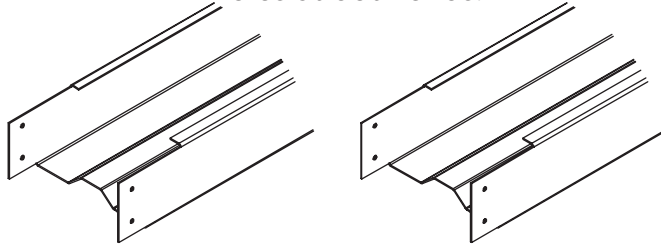

L-TYPE - Straight cut at one end: 45mm lip notch at other end.

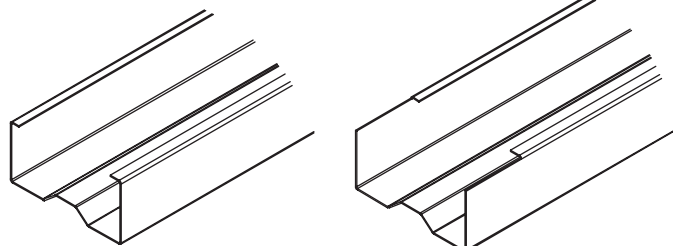


R-TYPE - 45mm lip notch/20mm tab notch with holes at one end: 90mm lip notch at other end.

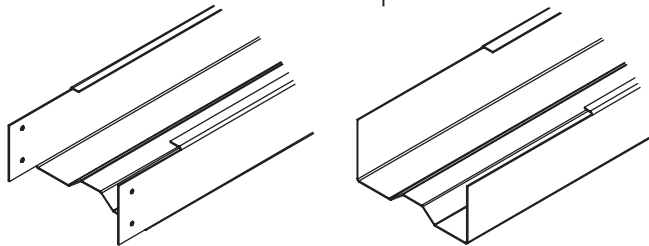

S-TYPE - Variable notching and/or holes nominated in parts checklist



## COMPONENT OVERVIEW

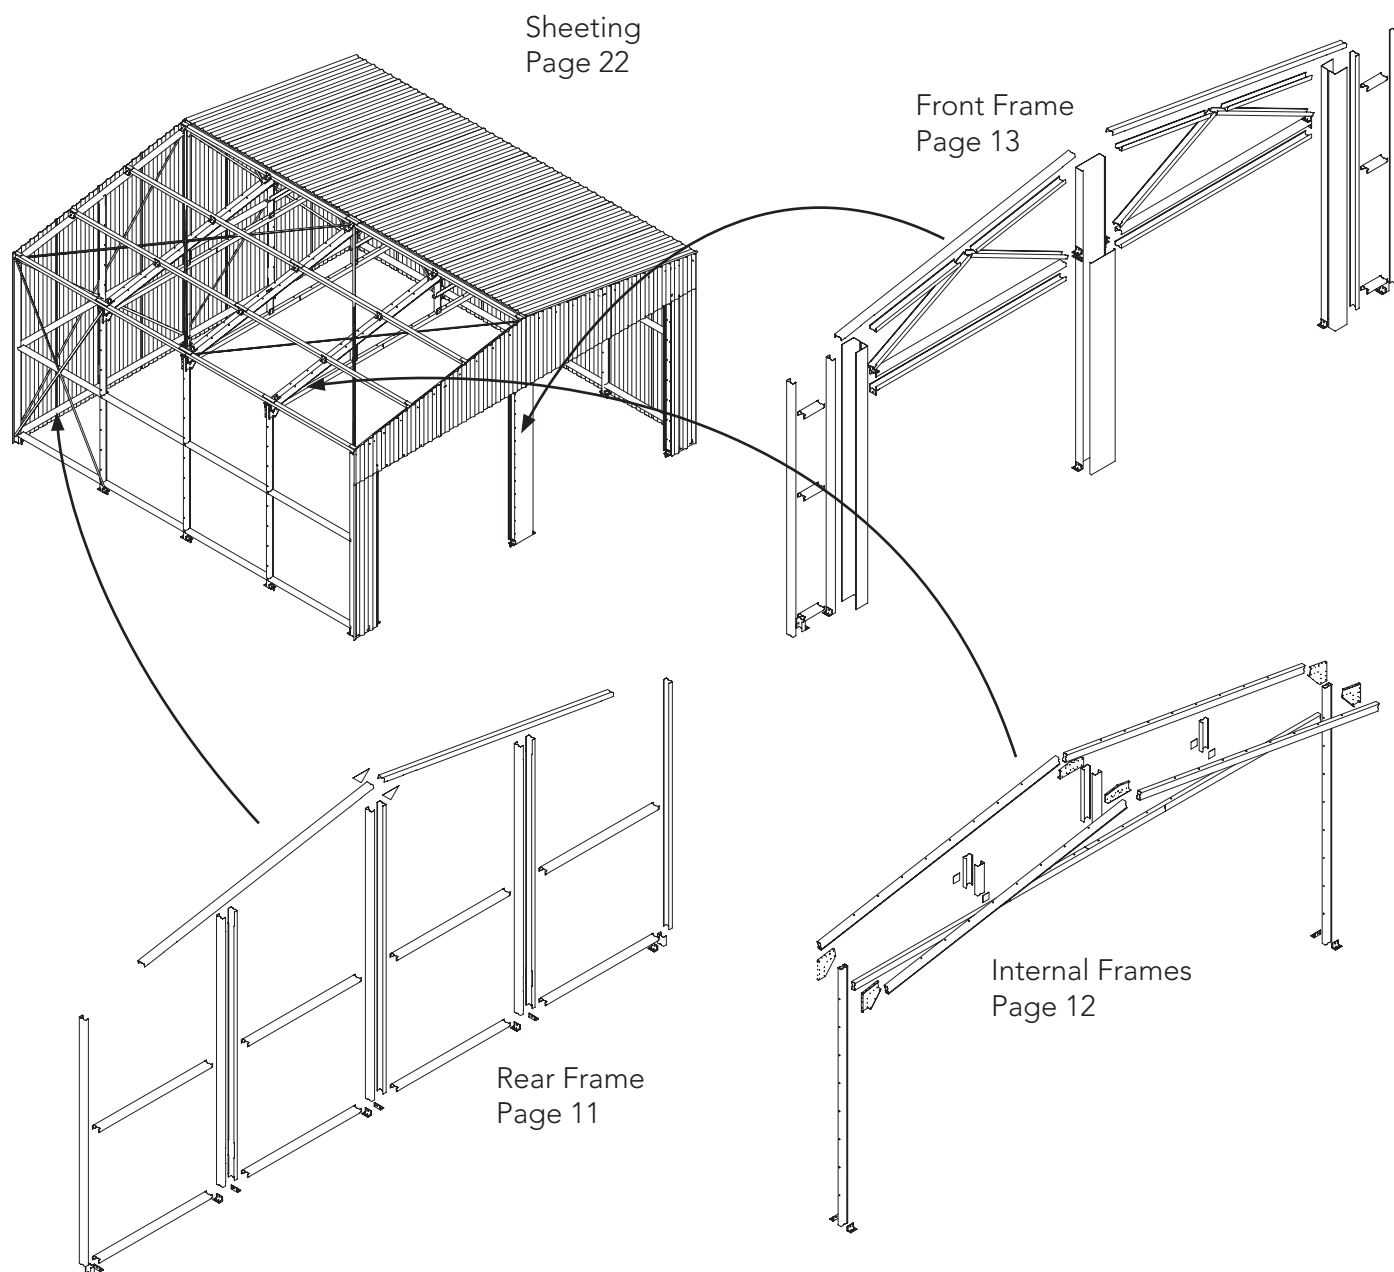

The frame is constructed from 80mm x 40mm galvanised steel channel, similar to that used in domestic steel house framing. All sections are cut to exact lengths, with channel ends pre-punched where necessary to simplify assembly.


Channel sections are secured together using 10G self drilling tek screws (supplied). Roof sheets are secured to the frame using 10G x self drilling tek screws with neoprene washers (supplied). Barge capping is secured together using 3mm pop rivets (supplied).

## Guide for Connecting Frame Sections

Absco sheds' frame assemblies are supplied with 10-16x16 self drilling wafer head phillips drive tek screws

The wafer head minimises distortion to the sheet cladding once it is fitted to the frame

Ensure that driver bits used to fasten these screws is phillips drive, as similar alternatives (EG. Pozi drive) increases the risk of stripping the head of these screws.

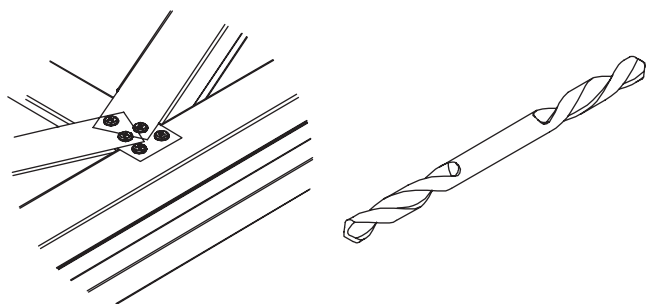


Absco sheds' frame sections are manufactured from light gauge steel, enabling for the notched ends or lengths of one frame section to be spread over the sides of another frame section, boxed frame section or H-section.

Some connections are designed to fasten more than two parts together. Connections may also not feature a defined alignment or physical stop.


For these reasons, focus on arranging all parts of a frame assembly or subassembly together (to the overall sizes and check measurements nominated) using minimal screws. This allows for easier adjustment to various connections which may be necessary to achieve the overall dimensions and check measurements that are nominated.

Fit the remaining screws once the frame assembly or subassembly is assembled as per the overall dimensions and check measurements that are nominated

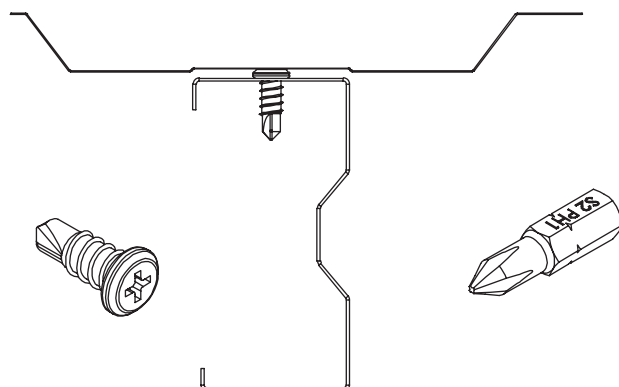

Some holes are pre-punched in Absco sheds' frame sections, however the wide range of positions that most fasteners are required for means that the remainder have to be drilled as per the connection being made


A 3mm drill bit is supplied for pre-drilling holes where self drilling screws may be more difficult to establish holes with (EG. Fitment of purlin brackets).

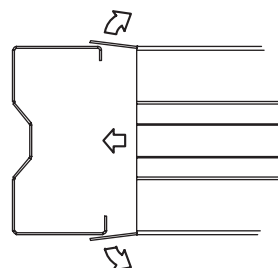

## Boxing Frame Sections



Absco sheds' frame sections are designed to nest into one another to create boxed frame sections. Boxed frame sections are only required in some parts of the entire frame assembly.

Boxed frame sections are fastened together using the fast014 tek screws supplied at 300mm centres (unless otherwise stated) along the length of each boxed frame section.

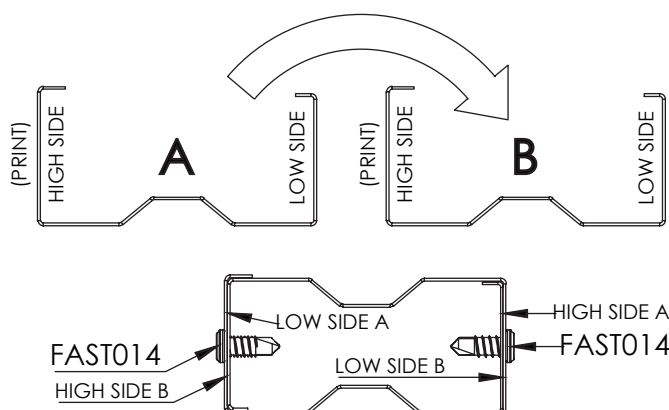

## Rear Frame

- Box these frame sections together.  
1 OFF: C3262 + C3262  
2 OFF: C2970 + J2990
- Lay the parts out on your slab or another level area as shown below.
- Check diagonals for squareness, then join all components together with tek screws. Make sure FAST014 are used on exterior side.
- Double check the dimensions and draw an outline of the frame onto the ground with chalk to use as a template for the internal and front frames.
- Use C0100 box the bottom of the two C2750 as shown.
- Turn the frame over carefully & fix the other side.

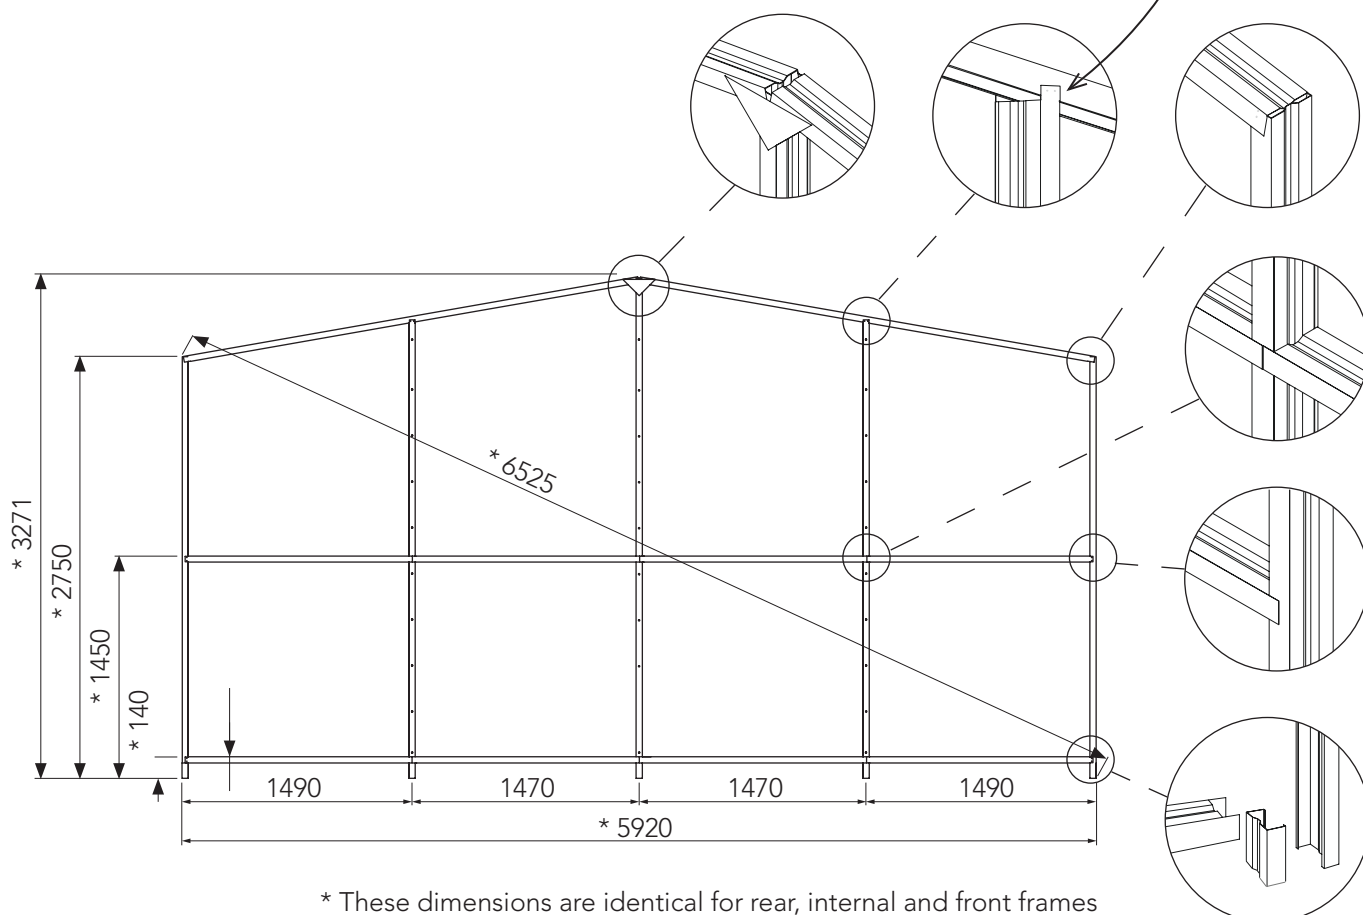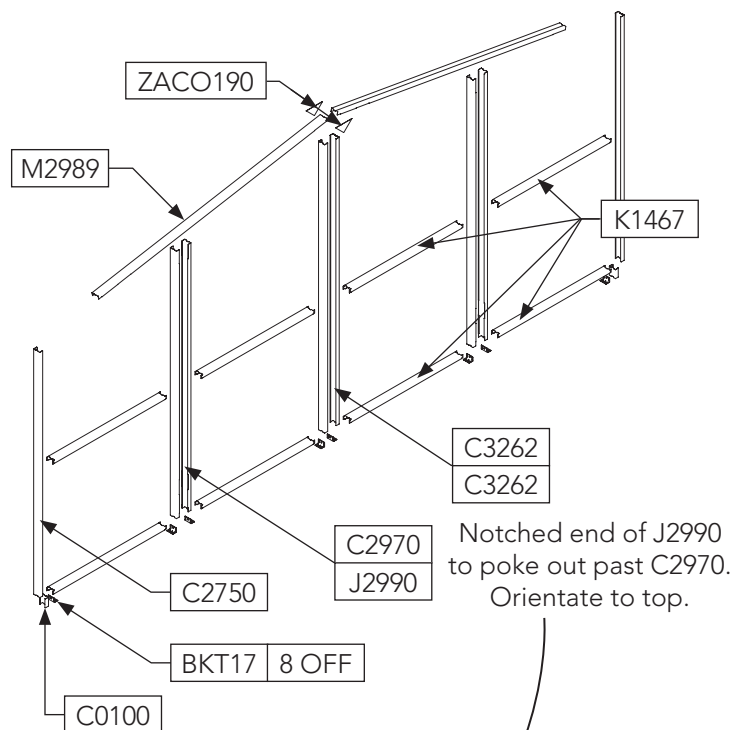

\* These dimensions are identical for rear, internal and front frames

## Internal Frame

3 Required.


1. Box the following parts with themselves

- C2750 + C2750 (x2) Uprights
- C0315 + C0315 (x2) Outer web
- C0560 + C0560 (x1) Centre web
- C2990 + C2990 (x4) Top chord


2. Make a 5760 mm beam by boxing the following

- 2x C2880 + 3x C1920

3. Attach centre and outer web with a ZACO180 plate both sides as shown.

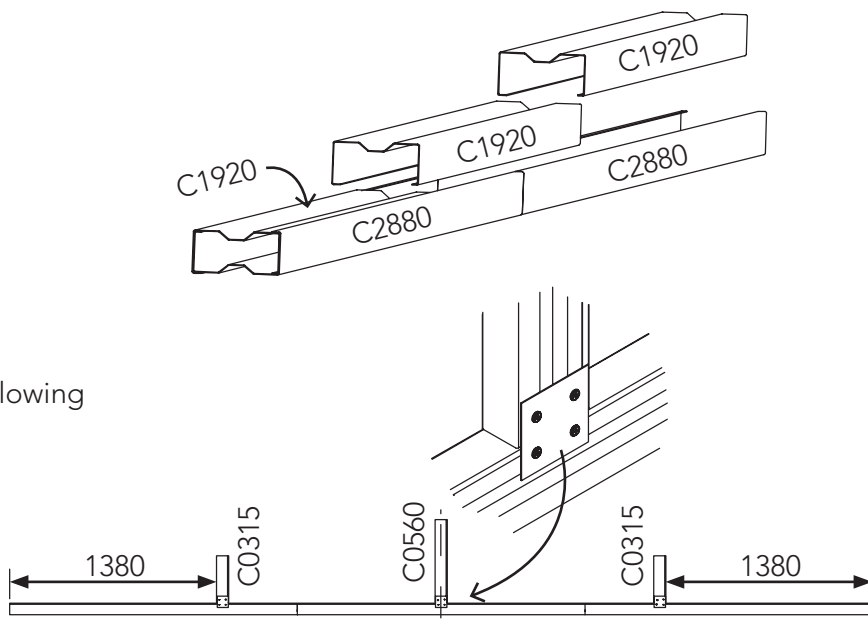

4. Fit the knee plates and apex plate over a pair of C2900 top chords. Angle is 10 degrees and width is 5920 mm.

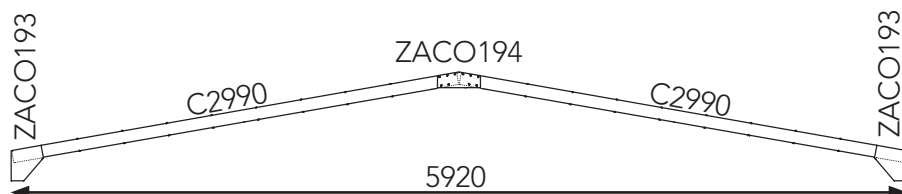


5. Take the top chord assembly, turn it over and lay on top of the other assembly.

Also add the C2750 uprights so they are flush with the outside of the knee plate




6. Carefully turn over

7. Repeat step 4 to make another top chord assembly and attach as per step 5.

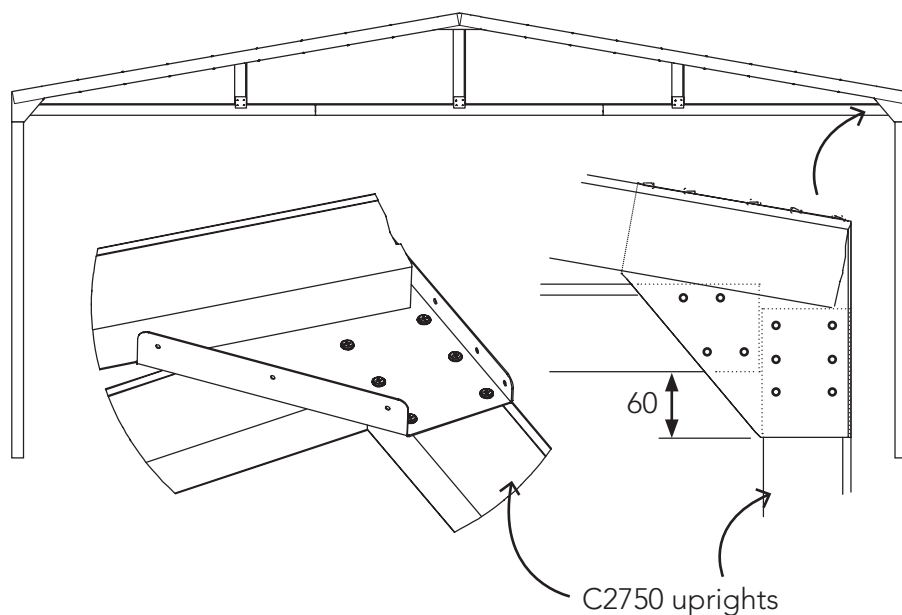

## Front Frame


- Box these frame sections together.  
2 OFF: C2400 + C2400
- Assemble the side mullions.  
2 OFF: ZACO216 + ZACO216 + C2755
- Lay the components out as shown below, using the same dimensions as the rear frame. Fix with teks in the same manner.
- S2992 have cutouts that allow it to fit over the centre and side mullions and other frame members.
- Take particular notice of the different views below to determine which way sections fit into others. Some pieces have end notching that must be orientated correctly.
- Do not fit the centre mullion trim, TR71, or the brackets BKT17, used for anchoring the frame to the slab at this stage.
- Refer to the engineering drawings for further fixing details.

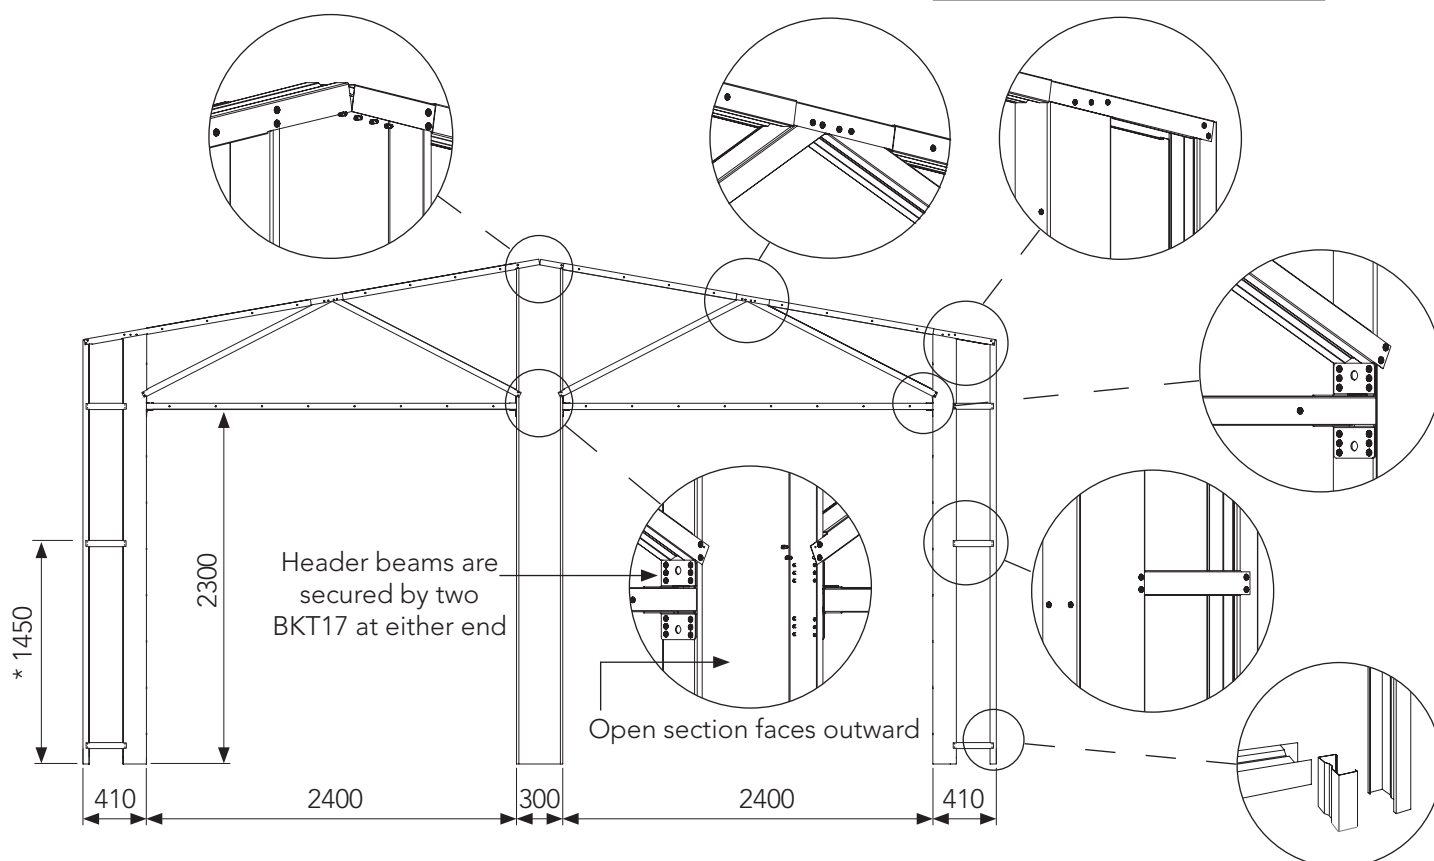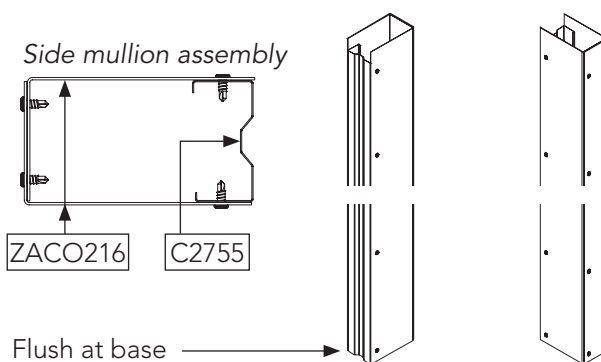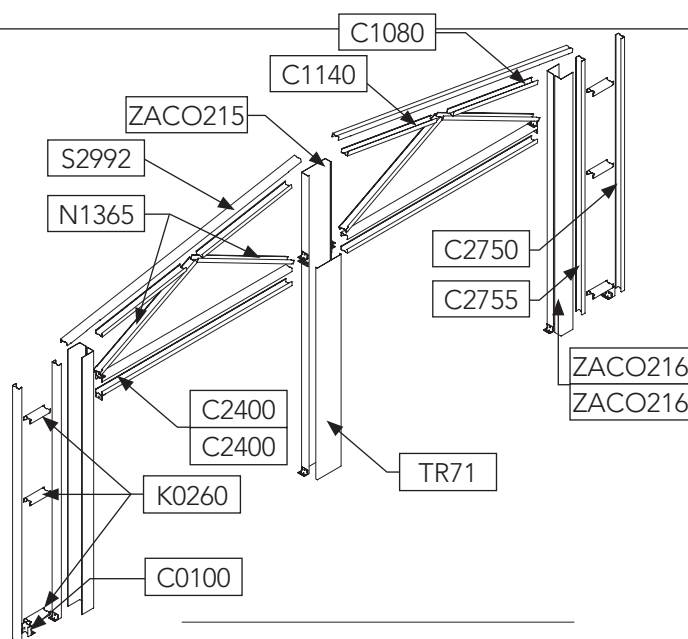

## Front Frame

Add final bracing

- K0700 end tabs go over top chord and header beam
- R0875 and R1100 end with tabs go over horizontal framing and the other end with open face notch slide into side mullion.
- Do for both sides

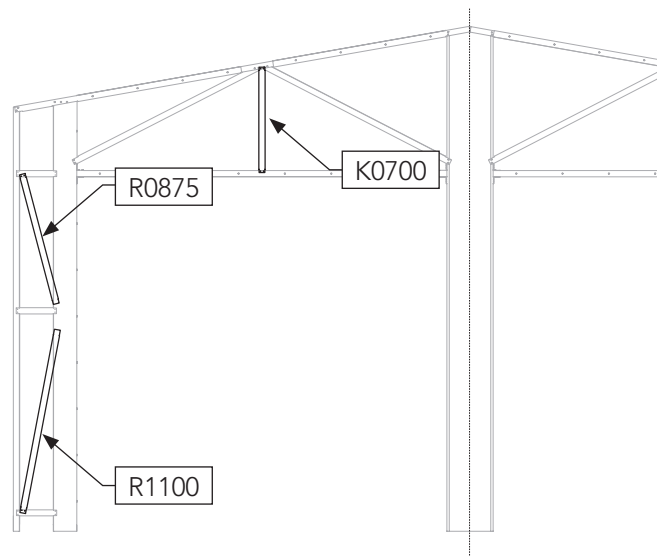


## Slab Details and Anchoring Layout

### ATTENTION

This slab detail is used for illustrative purposes and may not be suitable for your specific site.

As mentioned on page 1, you will need to contact a suitably qualified professional to specify concrete slab or footings for your site.

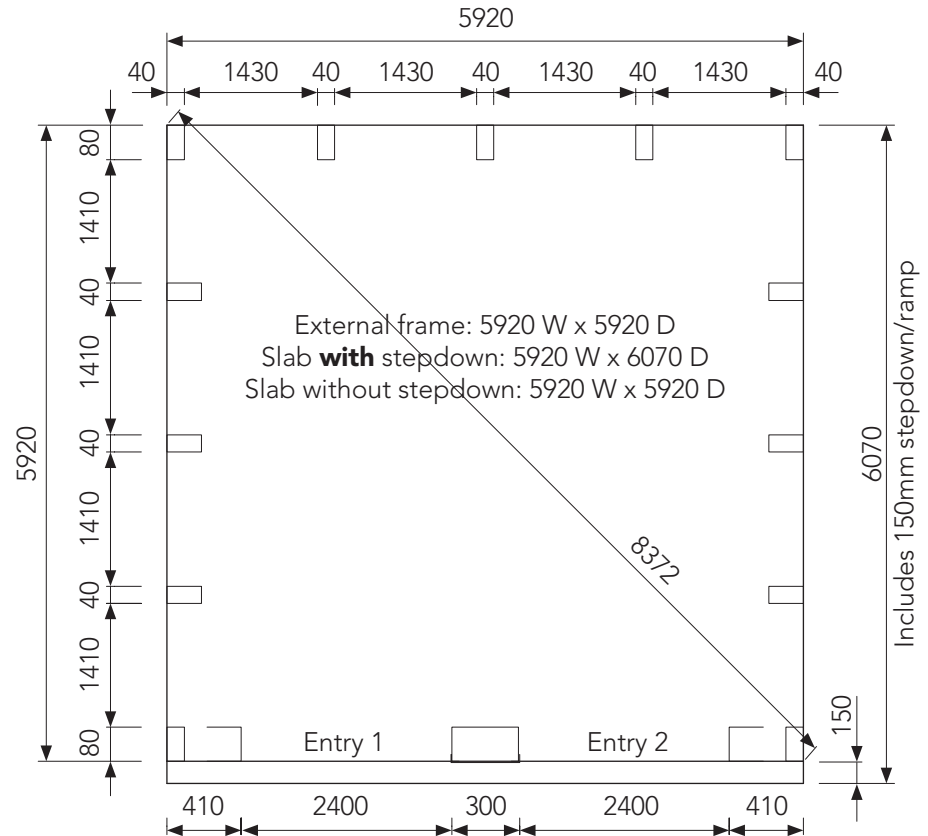


- The garage has been designed so that the slab and the external dimensions of the frame are the same. This allows the wall sheeting to overlap the top of the slab by 30mm and this prevents water entering the structure.
- If a front stepdown or ramp is added as recommended be sure to allow for the 30mm stepdown for the wall sheeting at the entrance.

### PERIMETER EDGE THICKENING

Applies to all four sides.


F72 Mesh with 30mm  
of top cover

50mm of bedding  
sand and waterproof  
member

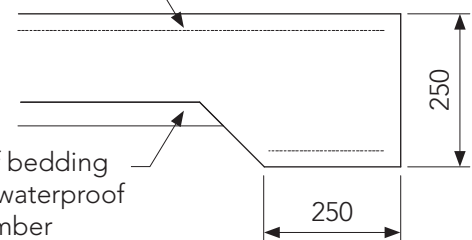


### FRONT ENTRY STEPDOWN / RAMP

Adds 150mm to slab making it 6070mm front-to-back as noted above.

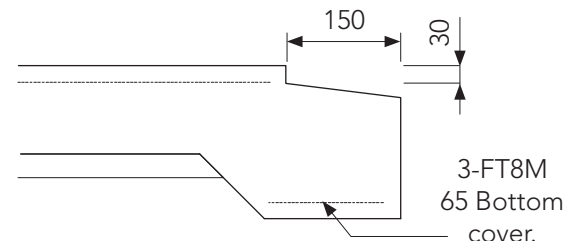




## Anchoring Layout

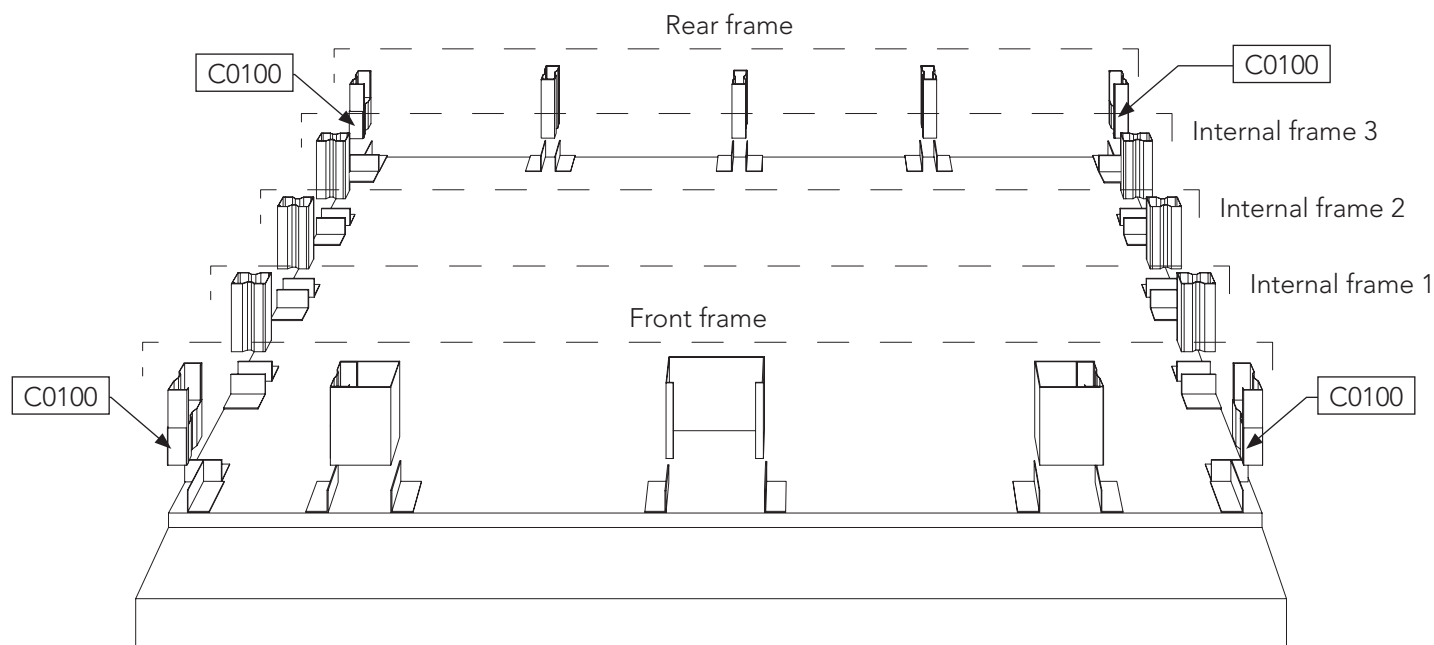

*This image only shows the bottom of the frames and is not to scale.*


- Fasten the multipurpose brackets (BKT17) to the frames as shown above while they are laying on the ground.
- Front and Rear frames will also require the C0100 be boxed into the bottom of both columns.
- Mark out the frame positions according to page 14. Misalignment between frames will result in the wall girts not fitting properly.
- Secure with tek screws, refer to the engineering drawing for the quantity of teks per bracket.
- When securing the BKT17 to the slab always use the bracket hole that is furthest away from the slab edge. This will prevent the possibility of the concrete cracking near the slab edge.

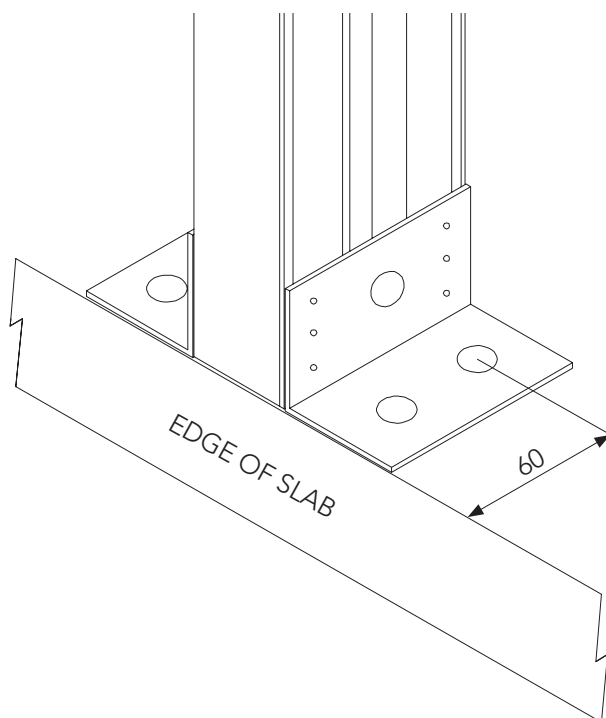

## Frame Construction


### 0. General Anchoring Method

- To secure each frame to the slab, move the frame to its marked position. One person will need to hold the frame in position while another should mark the inner holes of the anchor brackets (BKT17).
- Move the frame away enough to get tool access and drill the slab for each anchor.
- Move the frame back into position and secure with anchor.

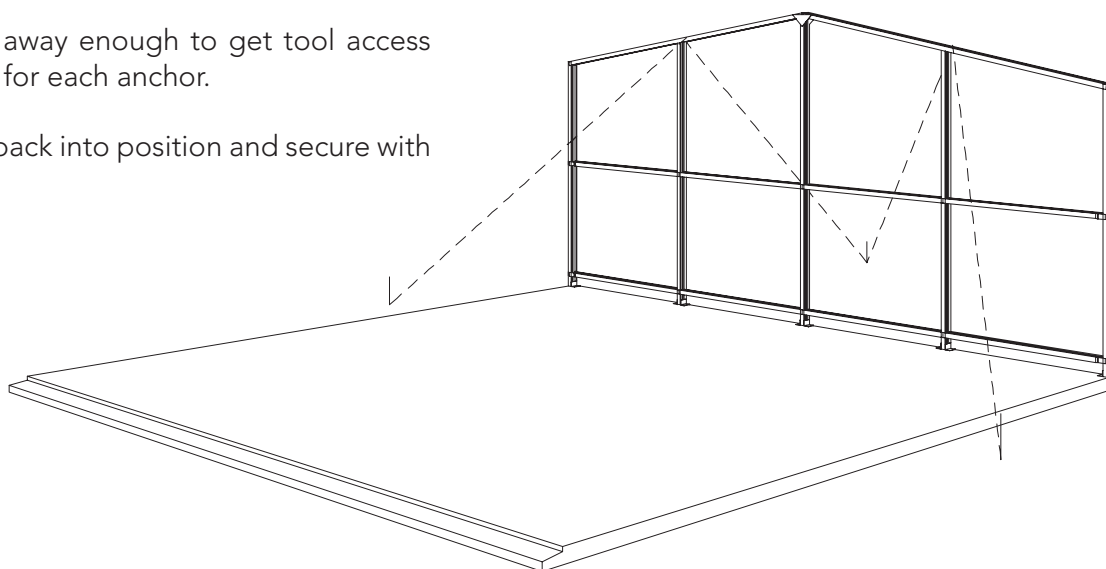

### 1. Rear Frame

- The rear frame can be supported with ropes and pegs or propped with the roof purlins (C2960) during this stage.

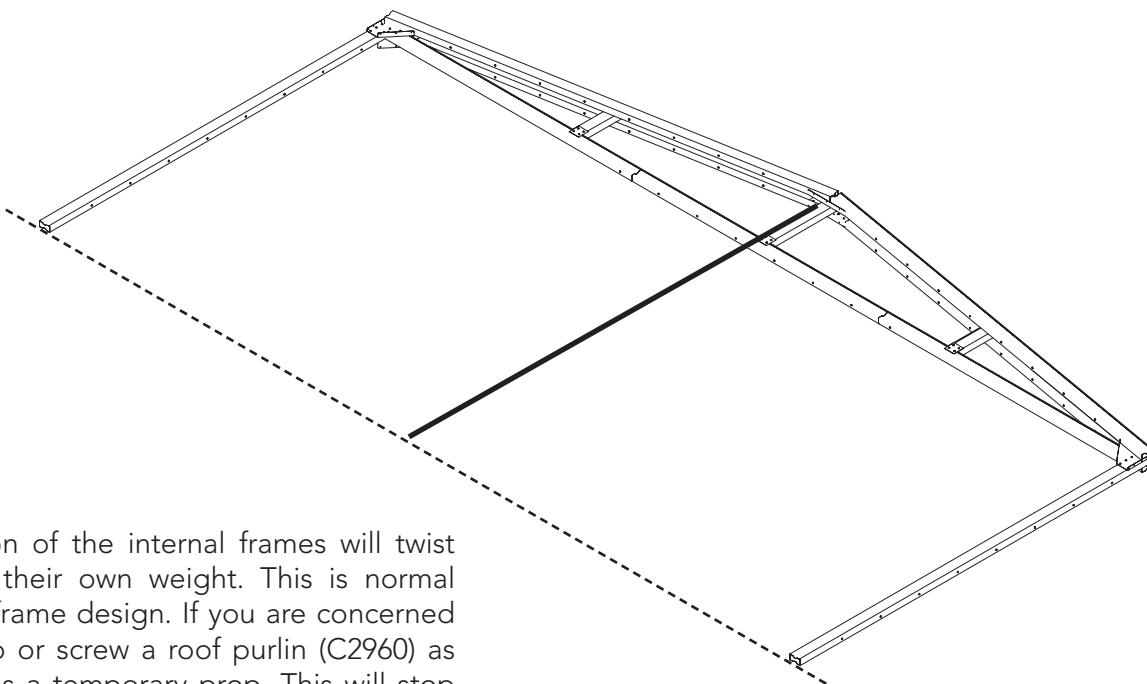


### 2. Internal Frame

- The top section of the internal frames will twist slightly under their own weight. This is normal for any portal frame design. If you are concerned with this clamp or screw a roof purlin (C2960) as shown to act as a temporary prop. This will stop any twisting until all frames are screwed together.


## Frame Construction

### 3. Internal Frames

- Secure the first internal frame to the slab
- Fit the four side wall girts (K1450) to the same height as the rear wall girts.
- Bend the inside tab of the K1450's to a right angle so it can be fixed into the rear wall girt. See detail.

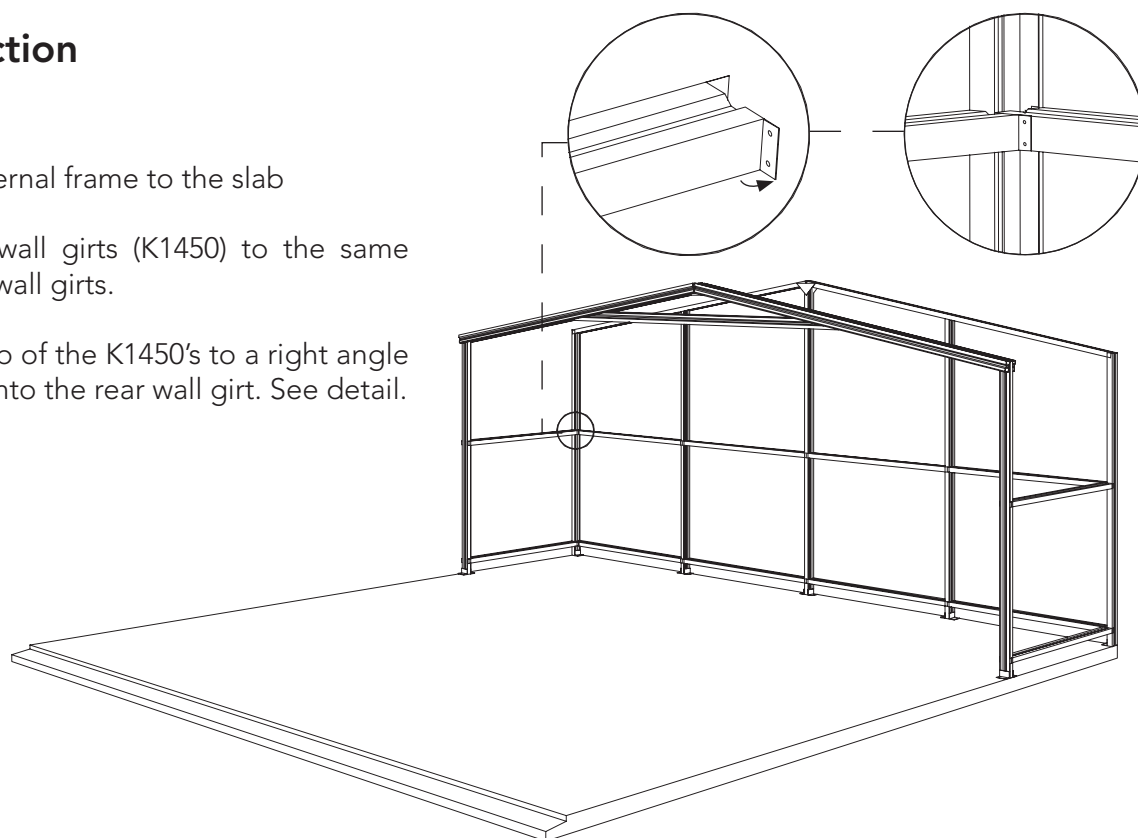

- To stabilise the structure secure two wall sheets as shown. Make sure that each wall sheet (286) overhangs the slab by 30mm and is 80mm past the top of the uprights.
- Fixings used for wall sheeting are hex head tek screws without neoprene washers (FAST035). Positioned in-line with the girts at every second sheet pan.

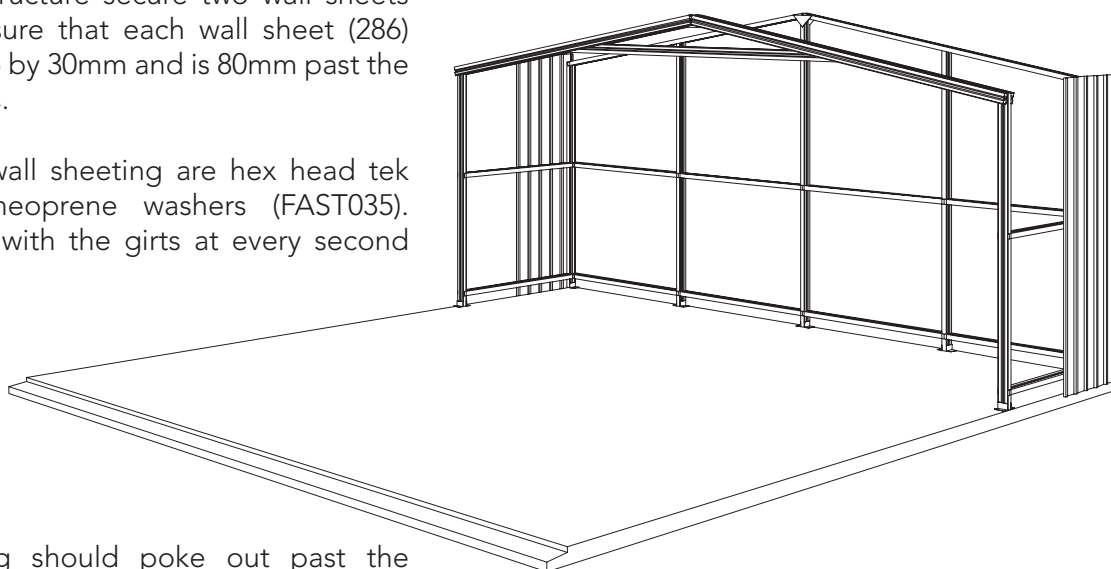


- The wall sheeting should poke out past the back frame 16.5mm to connect into the rear wall sheeting later. See page 22 for further detail.
- Use a spirit level to check that the framing is 100% vertical. Use a tape to measure and check that the diagonal dimensions across the framework are equal.

## Frame Construction

### 4. Remaining Internal Frames and Front Frame.


- Secure the remaining internal frames in the same manner as before. Checking everything is straight and square as you go.
- Connecting the side wall girts to front frame requires the tabs be bent at a right angle just like we did before with the rear frame.
- Do not fit the centre mullion cap until after the roller doors have been installed.

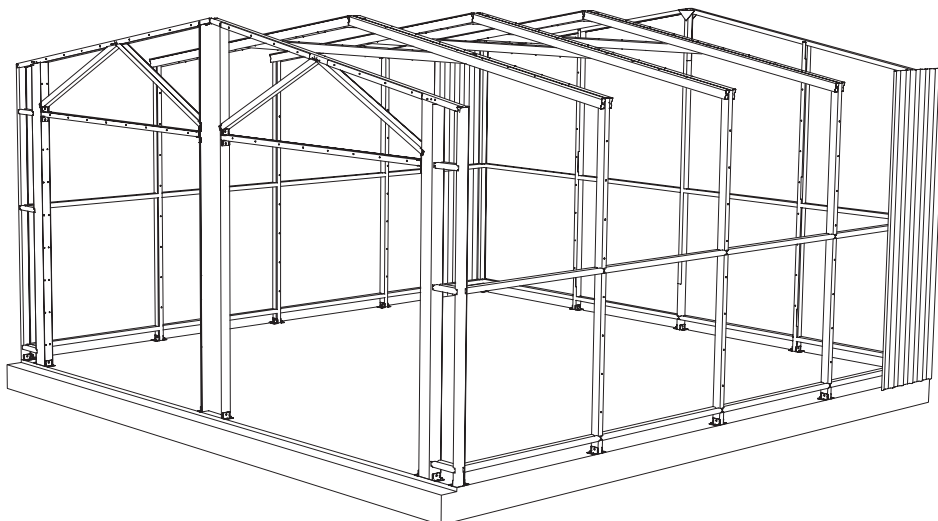

### 5. Fit Strapping


- Using a tape measure the roof diagonal dimension to make sure that the frame is exactly square.
- Fit the strapping (FAST040) diagonally over the top of the frame from corner-to-corner, pulling tightly and securing with screws at every point that the strapping crosses the internal frames.
- Do another layout across the top in a diamond
- Repeat this procedure for the rear frame
- Repeat this between the internal and front frame on both sides.

See engineering drawing for further detail.

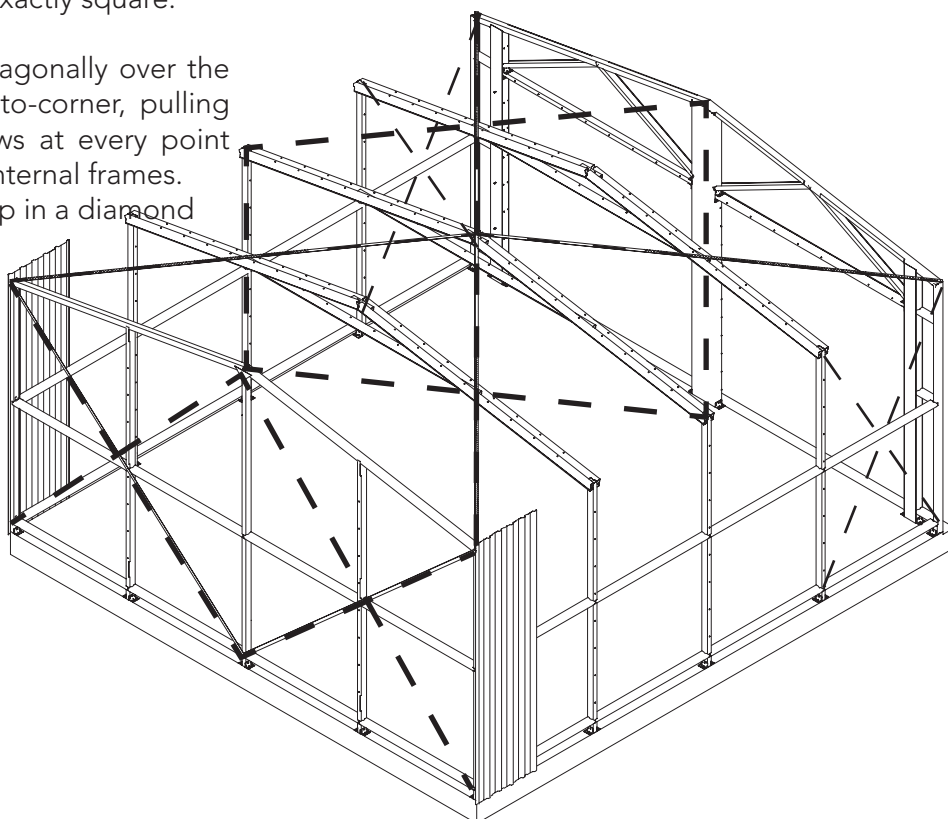

## Roof Purlins


6 required as shown below.

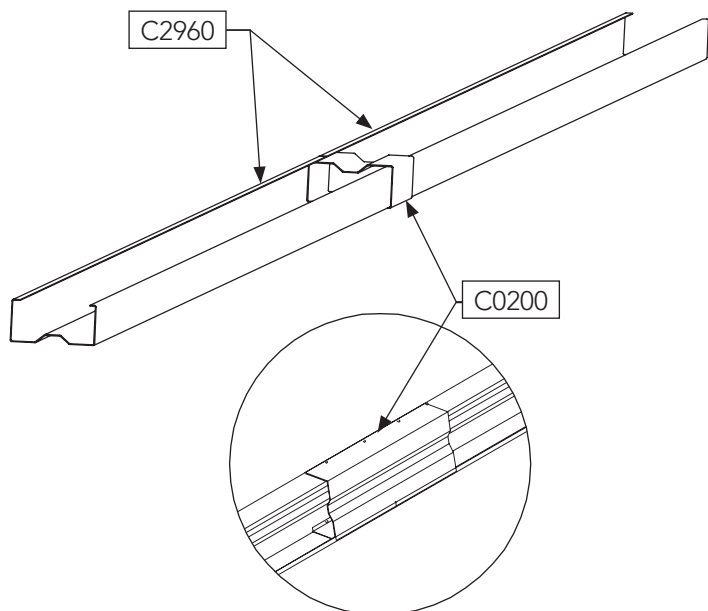

1. Take two C2960 pieces and box with a C0200 to make a full length purlin.

NOTE: These are the inner purlins, shown as 'A'



2 required as shown below.

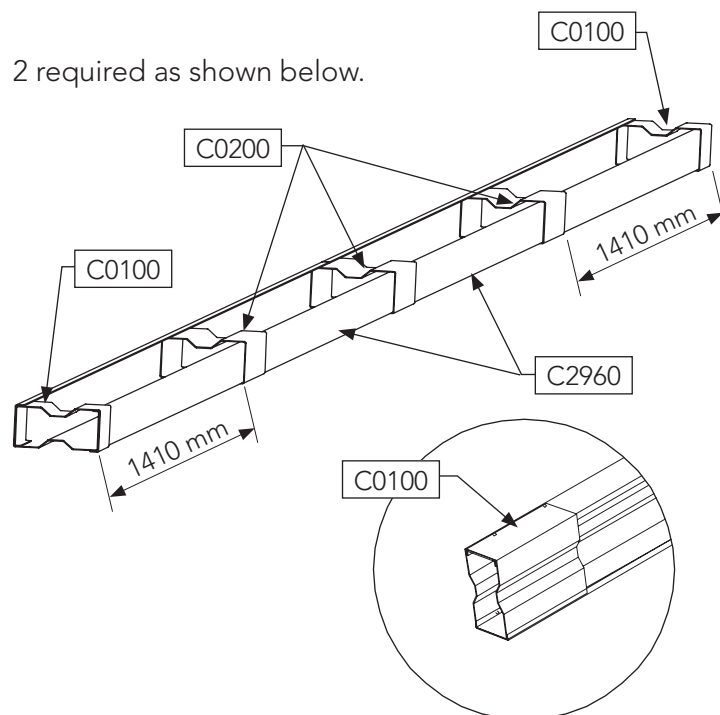

2. Repeat Step 1 and then box in a C0100 at both ends.


3. Box in a C0200 inset 1410 mm from both ends. This will align with the 1st and 3rd internal frames.

NOTE: These are the two outer purlins, shown as 'B'

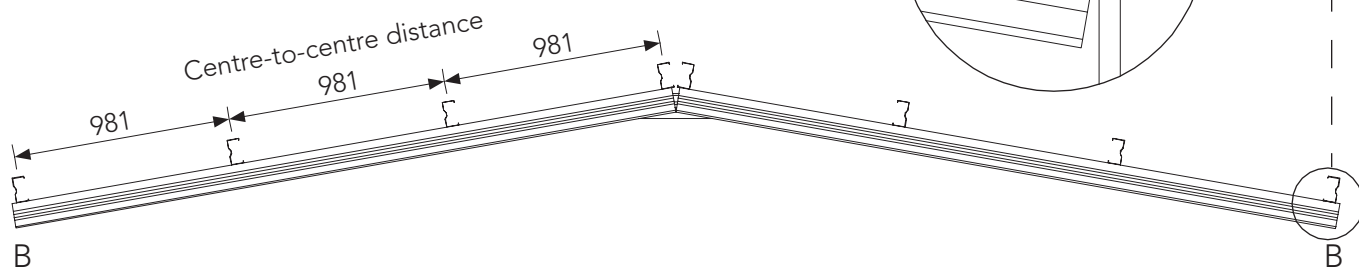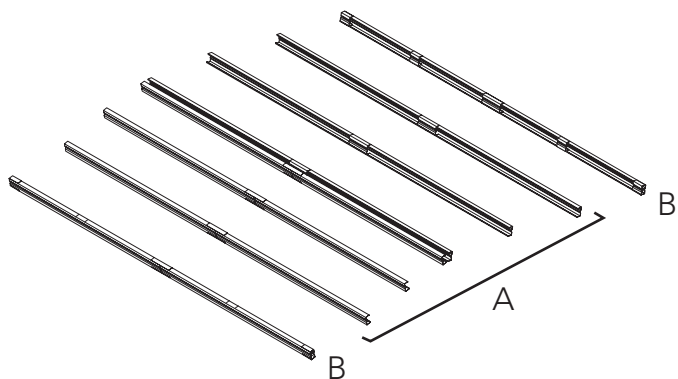

- Using a string line mark the top of the frames referencing the dimensions above.
- These two outer-most purlins are to be spaced 15mm in from the edge of the roof chords so the wall sheeting can be fixed top the purlin.


## Secure Roof Purlins

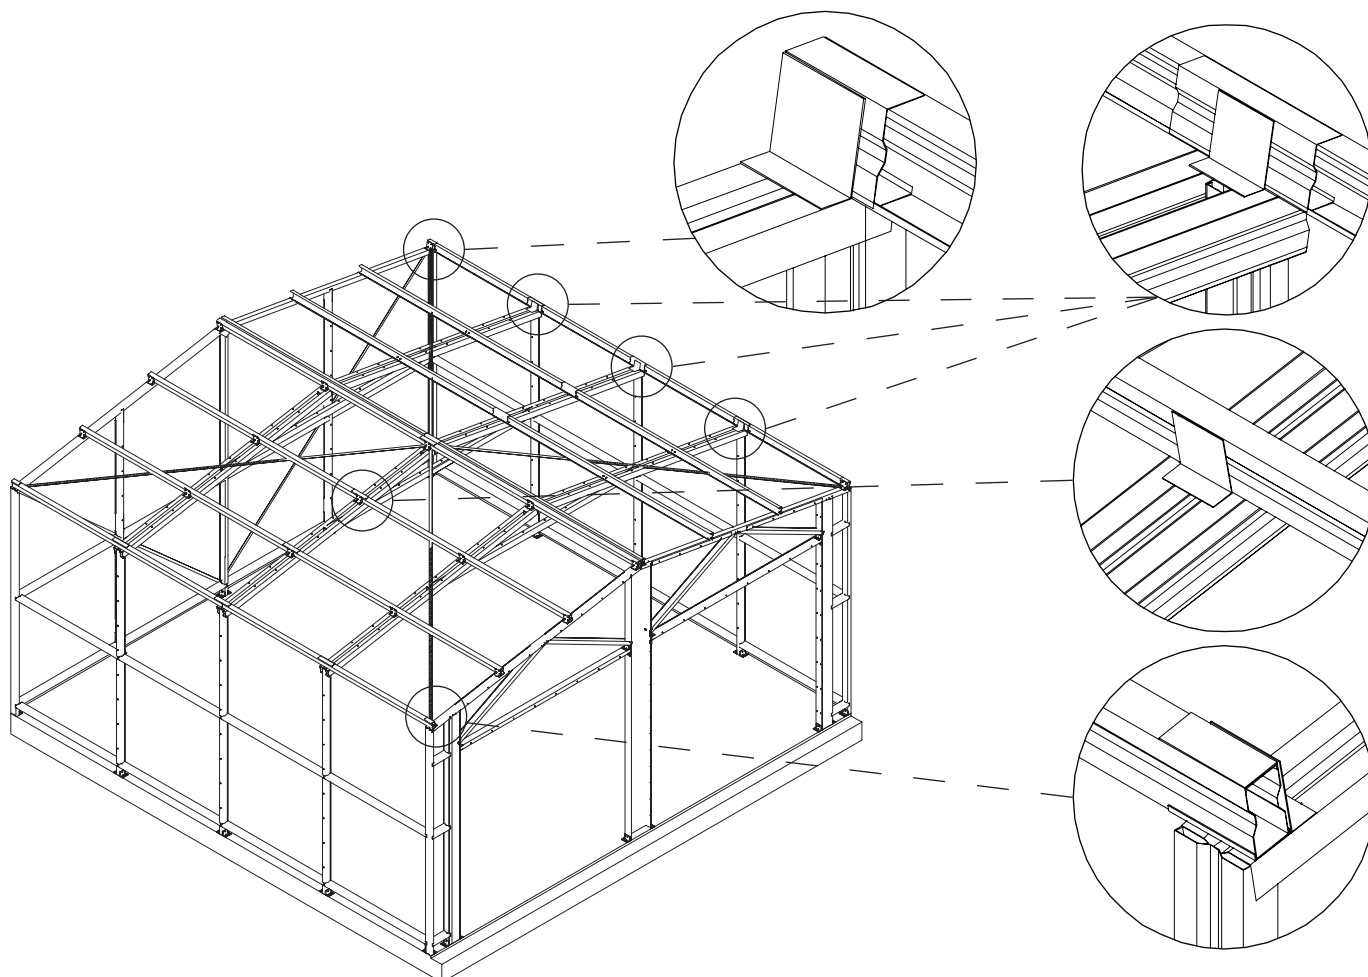


- Secure purlins to the framework as shown with one roof purlin bracket (BKT11) at each connection point.
- Front and Rear frames use 8x tek screws per connection.
- Internal frames use 12x tek screws per connection.

## Fly Bracing


- Fly braces are struts that attach both sides of the internal frame up to the centre-most purlins.
- The six fly-braces, ZACO124A, need to have one end cut.

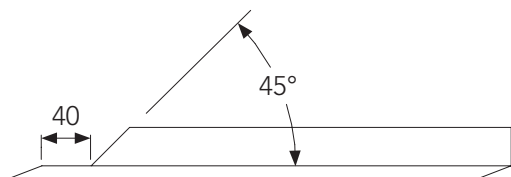

- Bend the tab as shown

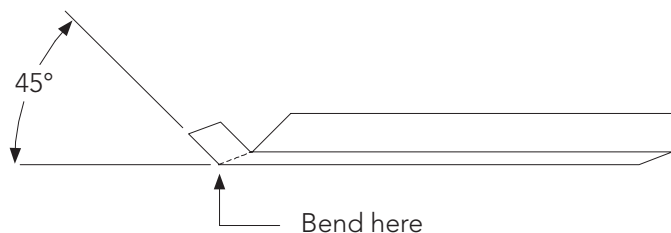


- The braces are positioned at 45 degrees from the roof purlin to the underside of each frame and fixed with tek screws.

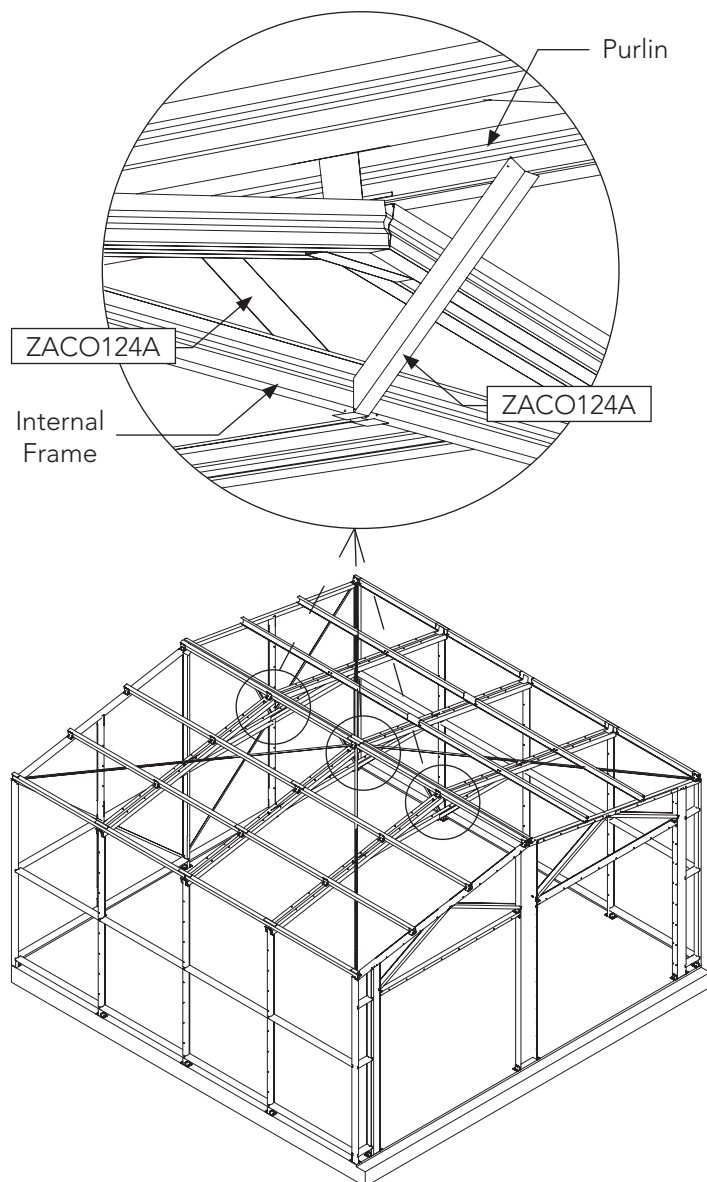



## TRIM SHEETS

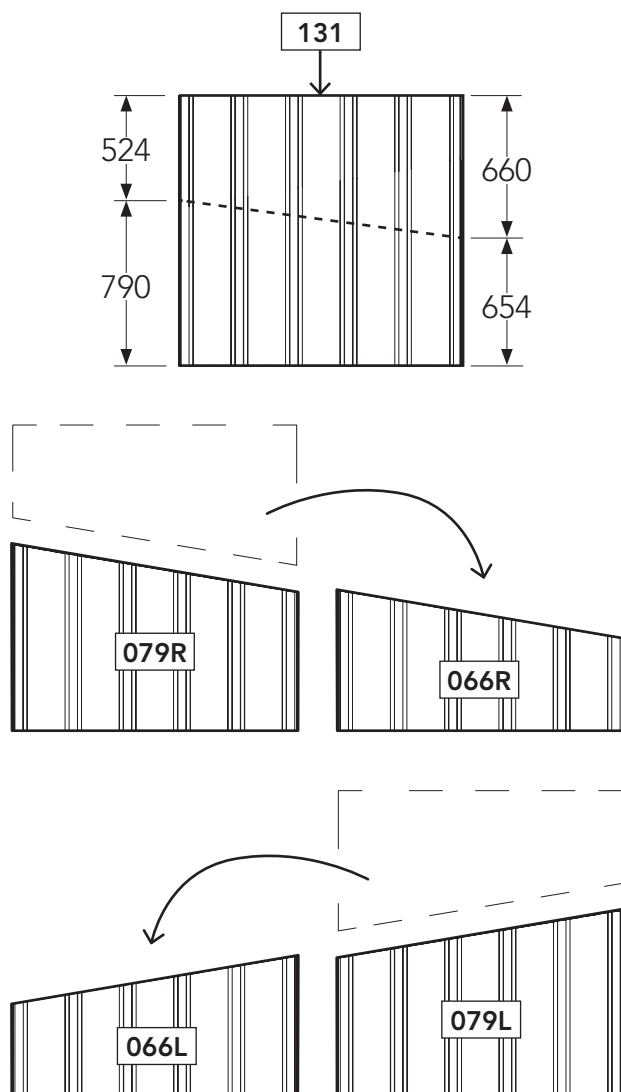


**1.** Take a **131** sheet and mark along the edges as per the dimensions shown.

**2.** Using a straight edge & marker or chalk line mark the angled line and carefully cut.

TIP: This cut edge will be covered by barge flashing.

**3.** You'll have two pieces.  
a **066R** and a **079R**

**4.** Now take the other **131** sheet and mark the angle the opposite way to make gable sheets **066L** and **079L**.

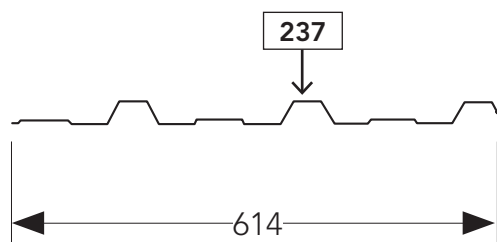

**1.** Cut off one side of the **237** sheet so final width is 614 mm.  
Do this for both sheets.

## Wall Sheeting



### Vertical Positioning

- Position each sheet flush with the top of the roof purlin so that the bottom end overlaps the concrete slab by 30mm to form a weather-tight seal.


### Horizontal Position

- A sheet width is 773mm.
- When multiple sheets are installed with the typical one rib overlap the sheet-to-sheet coverage is 740mm.
- The wall length of this garage is 5920mm and it is made up of eight sheets  
 $8 \times 740\text{mm} = 5920\text{mm}$
- This dimension is also the frame and slab size.
- As the coverage-to-coverage of a sheet and it's actual width are different the sheets on either end of the wall will extend past the framing by 16.5mm. This is used to fix into the other corner sheet neatly.

- Using a stringline and spirit level to identify and fix misalignments as you go.
- Fix through every second pan into the top and bottom girts, outermost purlin and frame uprights where possible.
- The coverage of each sheet can vary slightly so it is important to keep checking as you go.
- As stated previously the last sheet in the wall must overhang by 16.5mm. You can stretch or shrink the sheeting coverage as you lay each sheet to accomplish this.
- The short angled front wall sheets are to have their straight edge aligned with underside of the header beams.
- The narrower side sheets for the front wall (237) have a raw edge, position as shown.
- The narrower side sheets for the front wall (237) are to be placed before/behind the shorter angle sheets. Align the top edge of this sheet with the topside of the header beam, this will make a 30mm overhang of the slab edge.

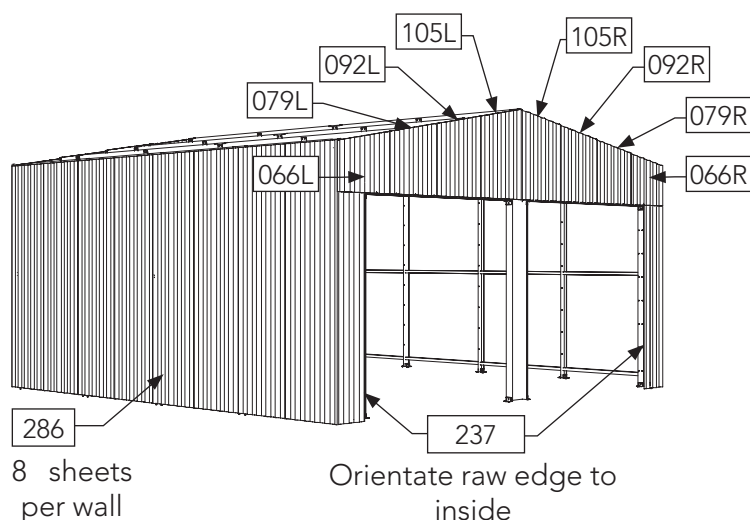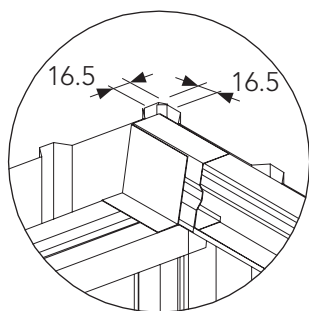


Front left view

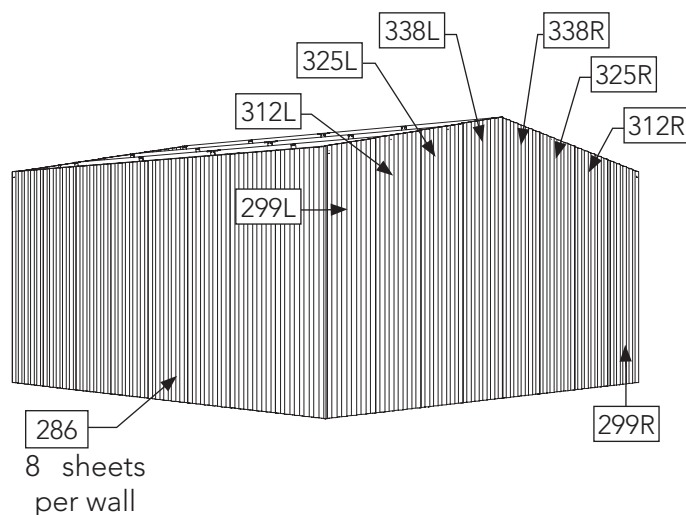

Back right view

## Roof Sheeting

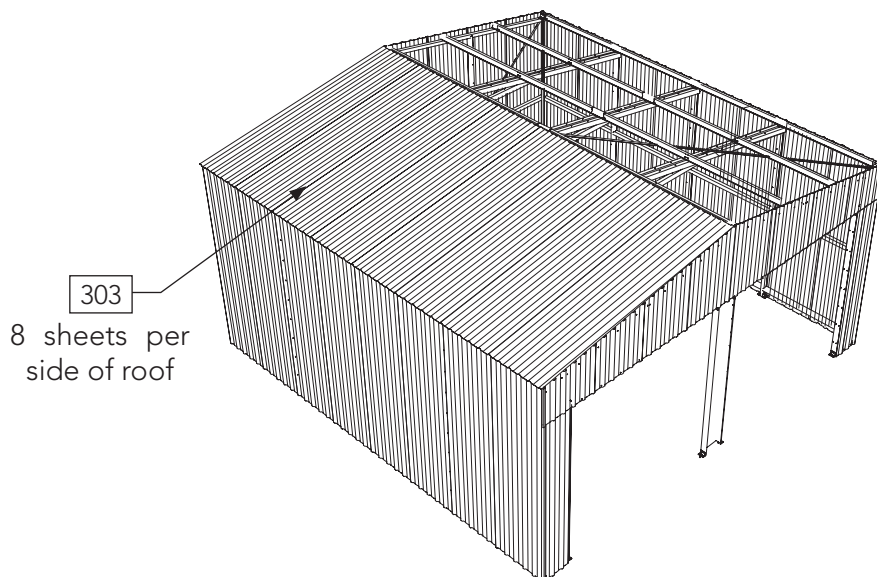



- On the ground, lay out the roof sheeting as if they were on the frame already. Using a piece of wood, as pictured, turn up the pans of each sheet at the end that's going to be at the ridge. This will prevent rainwater entering the structure during windy conditions.
- Slot roof sheet into cut in wood and bend
- Fit the roof sheets in the same manner as the wall sheets. Each sheet should line up with the side wall sheet.
- The roof sheets should overhang the side wall sheet by 30mm to allow water to run into the gutters when installed.
- Avoid walking on the roof so sheeting is not damaged. If it is necessary, walk only on the pans at purlin locations after sheets have been secured.
- Use one Hex head tek screw with neoprene washer (FAST035) at every second pan to ridge and outer purlins.
- Use one Hex head tek screw with neoprene washer at every second pan to the middle purlins.
- Lay the ridge capping (TR30) centrally on the roof, overlapping the sections to make the same length as the roof sheeting. Fix the capping to every second rib of the roof sheets beneath it.



Slot roof sheet into  
cut in wood and  
bend


## Guttering + Downpipe

- Join lengths of gutter TR22, to match the length of the shed by notching the roller edge of one to allow the other to slide into it.
- Put silicone in the joint and then use rivets, FAST009, to fasten the sections together.
- Repeat this for the other side.
- Mark the rectangular cutout to suit the downpipe drop RWG18 at the end you select.
- Remove material and fix RWG18 with silicone and rivets.
- Mark a line 110mm down from the top of the outer purlins at either end of the shed. Run a stringline between these marks. This is a reference to align the bottom position of the gutter brackets, RWG06.
- RWG06 are to be fixed to the sheeting rib at either end and spaced equally along the shed length.
- You may wish to allow for a slight fall to the downpipe position.
- Fix gutter onto brackets equally at both ends, push top of bracket into outer roll of gutter and bend small support arm down to hold the inner face.
- Rivet the brackets to the gutter through the bottom of each bracket.
- Fit downpipes to drops with silicone and rivets. Secure to wall sheeting with downpipe strap bent to suit.

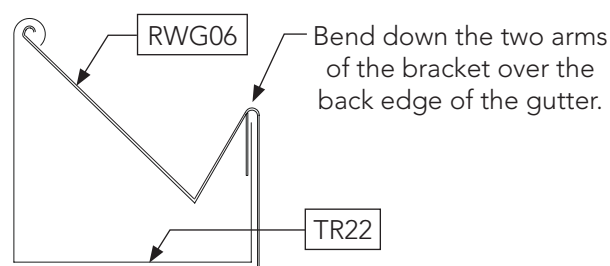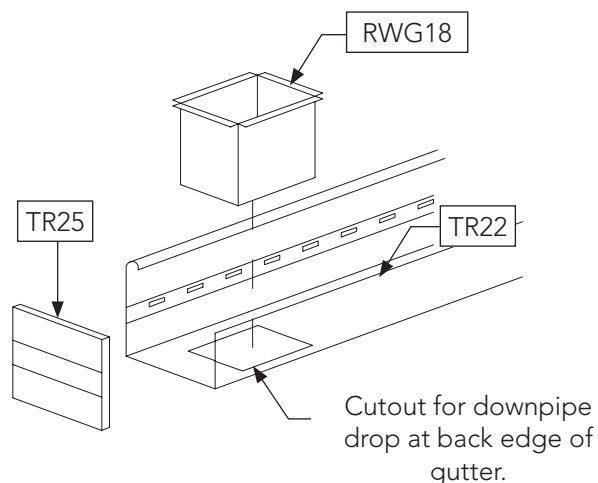

## Barge Capping and Trim


- Fit barge capping (TR06) to the front and rear gables, fixing where there is a purlin beneath it.
- Fit TR21 between sheet and frame directly above roller door. Two lengths will be required.
- Measure and cut TR19 to suit one side of each roller door opening, covering the raw edge of the two 237 sheets.
- TR71 is used to cover the front facing opening of the centre mullion. Best practice is fix in place after the roller doors (RD08) have been installed.

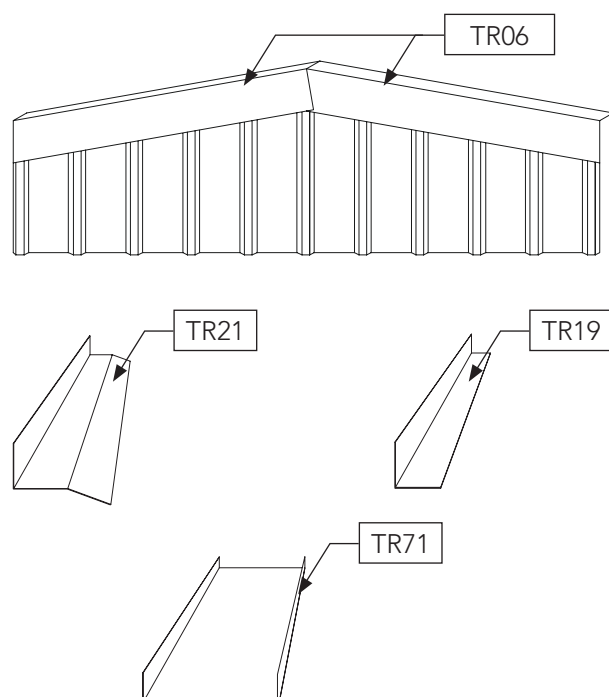


## Roller Door Installation

- These instructions and components are located with the roller door.
- FAST081 are to be used to fix roller door guides.


## Attaching Centurion WINDSHIELD Roller Doors.

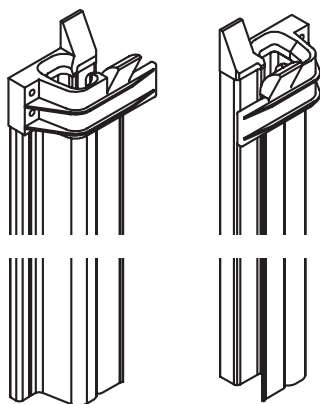


Pair of WINDSHIELD  
Guides  
(1x Left and 1x Right)

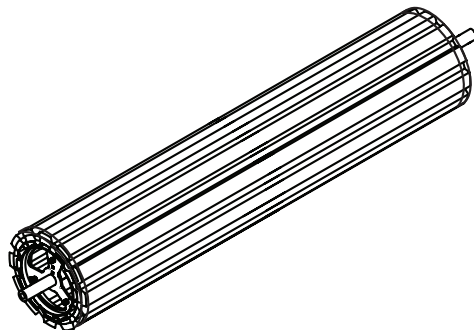


1 x  
2470 mm W x 2400  
mm H Roller Door w/  
windlock clips.

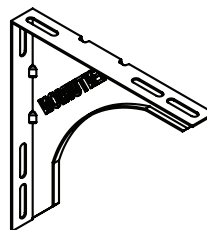


2 x  
"A" Roller Door  
Bracket

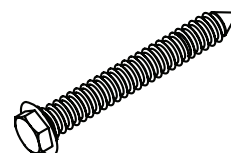


12 x  
14G 20TPI Tek screw

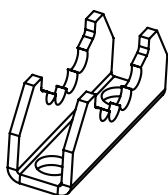


2 x  
Pressed Saddle

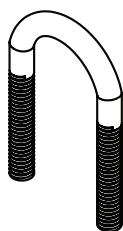


2 x  
U - Bolt  
5/16"

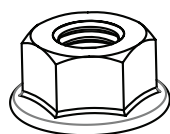

4 x  
Hex Flange Nut  
5/16"

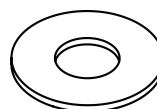

16 x  
8.2mm ID  
Washer

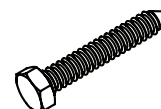


12 x  
M8 70mm Hex  
Screw

The above components are supplied by Centurion Doors, not Absco Sheds.

The quantity of components above are for ONE door only. Two doors are supplied for this product.

The process shown hereafter is for one door. Repeat it for the second door.

STEP 1. Check that you have the correct size roller door before beginning the assembly.

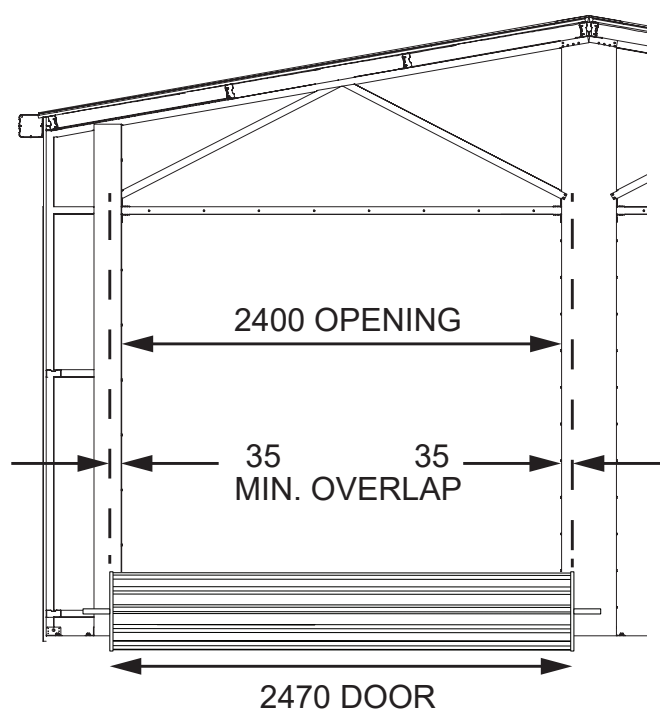




## Installing Mounting Brackets

Make sure that top of bracket is 150mm up from the underside of the header beam otherwise opening height will be reduced.

Horizontally, position outer bracket on edge of side mullion.

Ensure brackets are level using laser or water level.

Horizontally, position inner bracket 8mm in from the middle of the centre mullion.

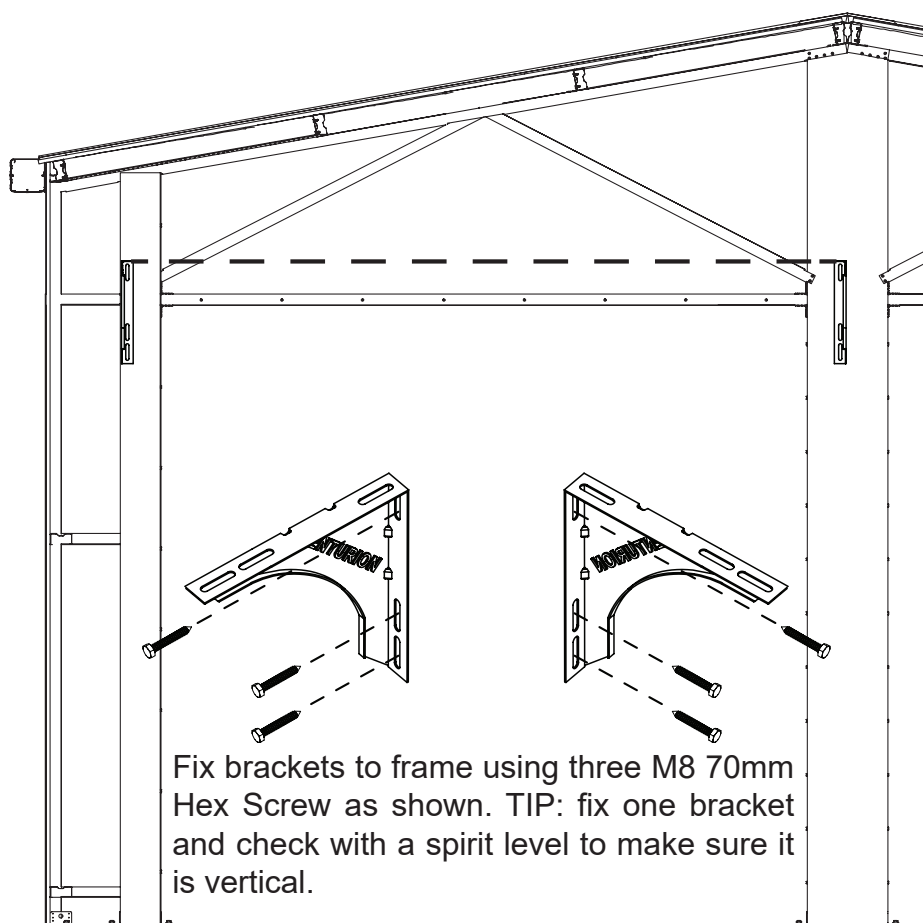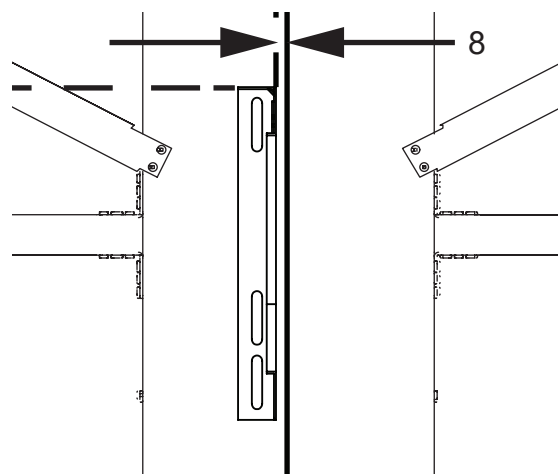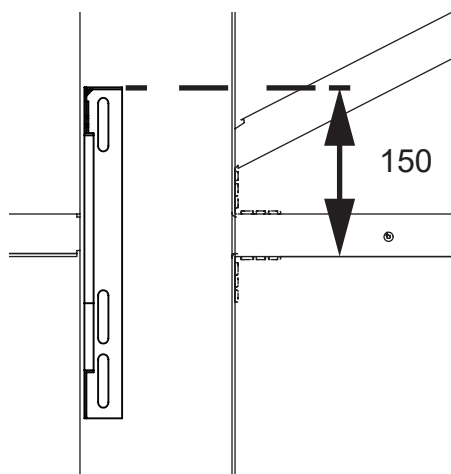

## Centralise and Lift Door

Place the door on the ground inside the opening and make sure it is orientated the right way around.

When standing outside the garage “CENTURION” on the handle should be the right way up.

Centralise the axle of the roller door by both twisting and pushing it at the same time.

Wipe grease and mark axle with a permanent marker on both sides to make sure you can tell it has remained centred on after the lift

Safely lift the door onto the brackets.

Place shaft onto saddles and hand tighten Hex Flange Nut 5/16” onto the U-bolt.




Make sure that it is not overtightened, we need to check that the door is centred over the opening.

Centre the door in the opening by adjusting the axle position on the brackets.

**DO NOT ADJUST BY MOVING THE DOOR CURTAIN ON AXLE.**

Check it is still centralised on the axle by seeing the markings on axle.

Now fully tighten U-bolts on both sides.

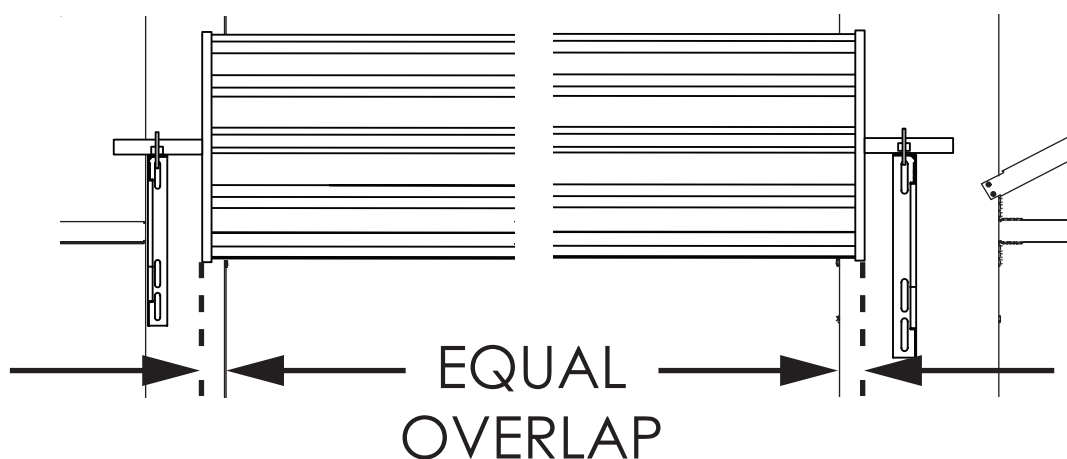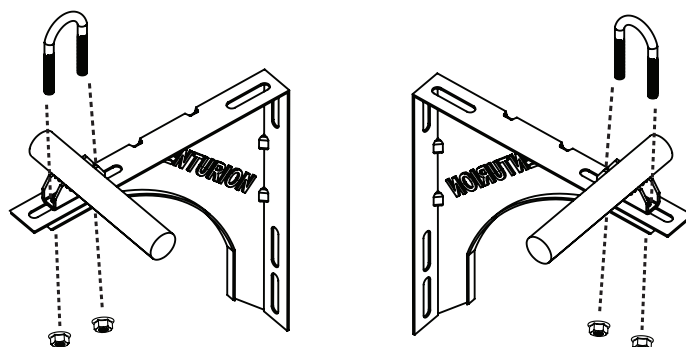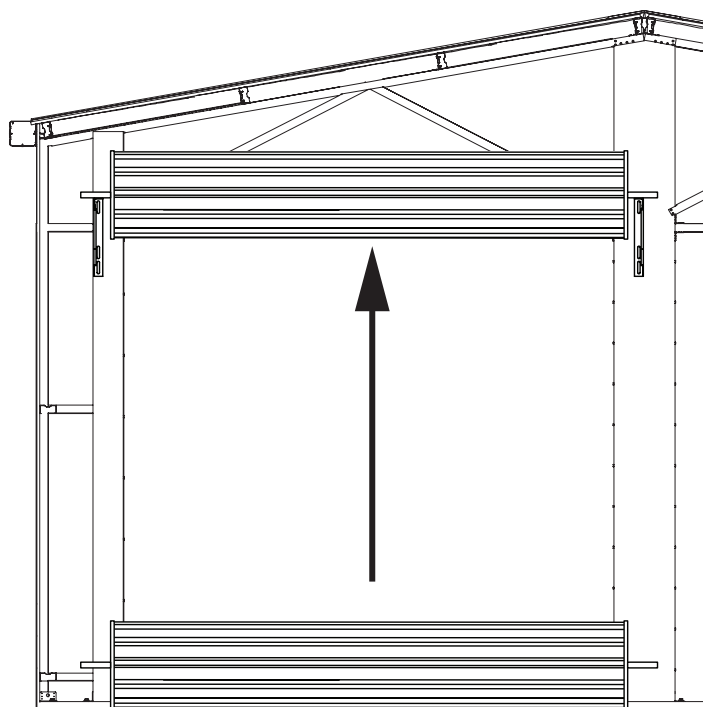




## Apply Tension To Door

1.

With the door now fixed to the brackets we need to apply tension. This can be done by rotating the door assembly 2 turns.

Be sure to turn it the direction indicated.


Now the door is tensioned additional care must be taken, don't let it go.

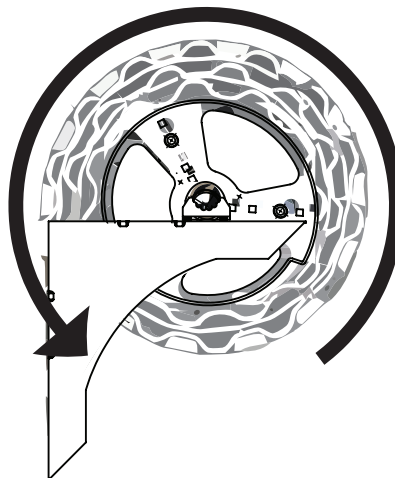

2.

Pull down the door and remove all plastic wrapping, cardboard and other protective coatings.


Be sure to remove them from both sides,

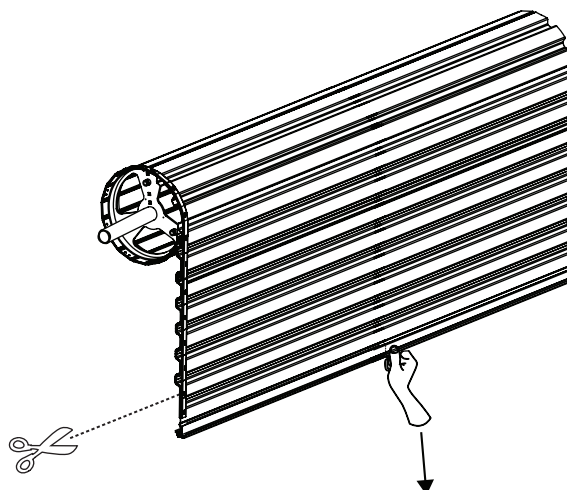


3.

The door can be held in position by placing a soft wood chock as shown.


300 mm is a good distance to work with.

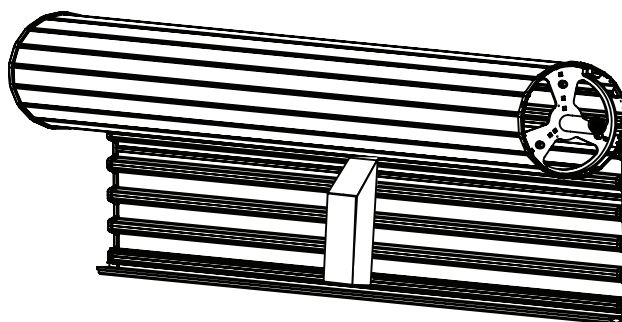


## Install Guides

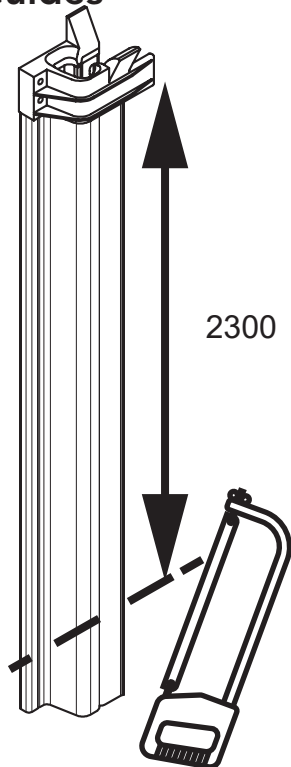


1. Cut tracks to suit opening. Measure and mark 2300 mm from the **UNDERSIDE** of the end cap as shown. Then cut using a hacksaw or angle grinder. Do this for both the Left and Right Guide.

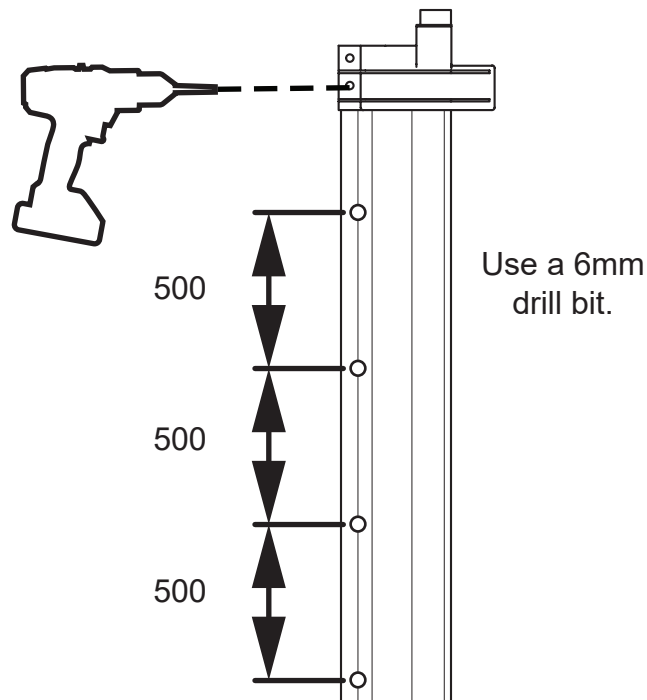


2. Using a 6mm drill bit, pre-drill holes to fix the guides to the framing. Start 25mm from the bottom then measure upward and mark at 500mm increments. Also drill the hole lower hole in the end cap.

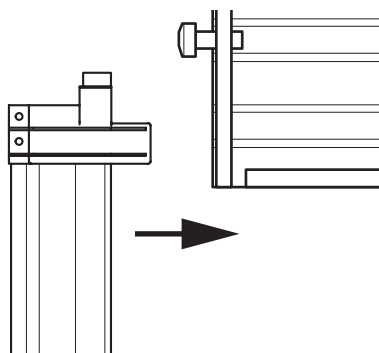

3. Locate the guides over the hanging door. Be careful not to dislodge the wood chock holding the door in position.

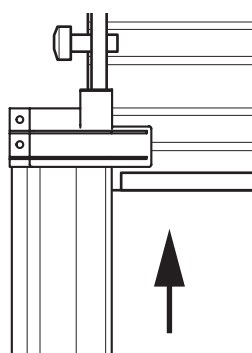



4. Next the guide will have to be moved along the door so the windlock knob slides inside it's specialised channel in the guide.

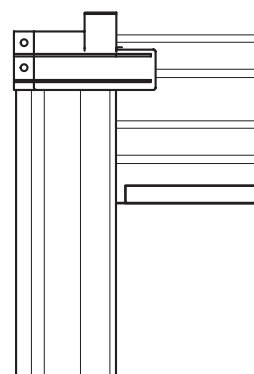


5. Now it is aligned push the bottom of the guide against the frame and work on the other side.

The guide can be slid over the edge of the door before the windlock.

## Install Guides - Continued

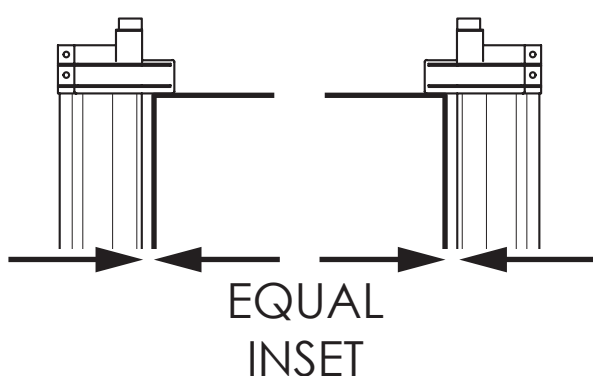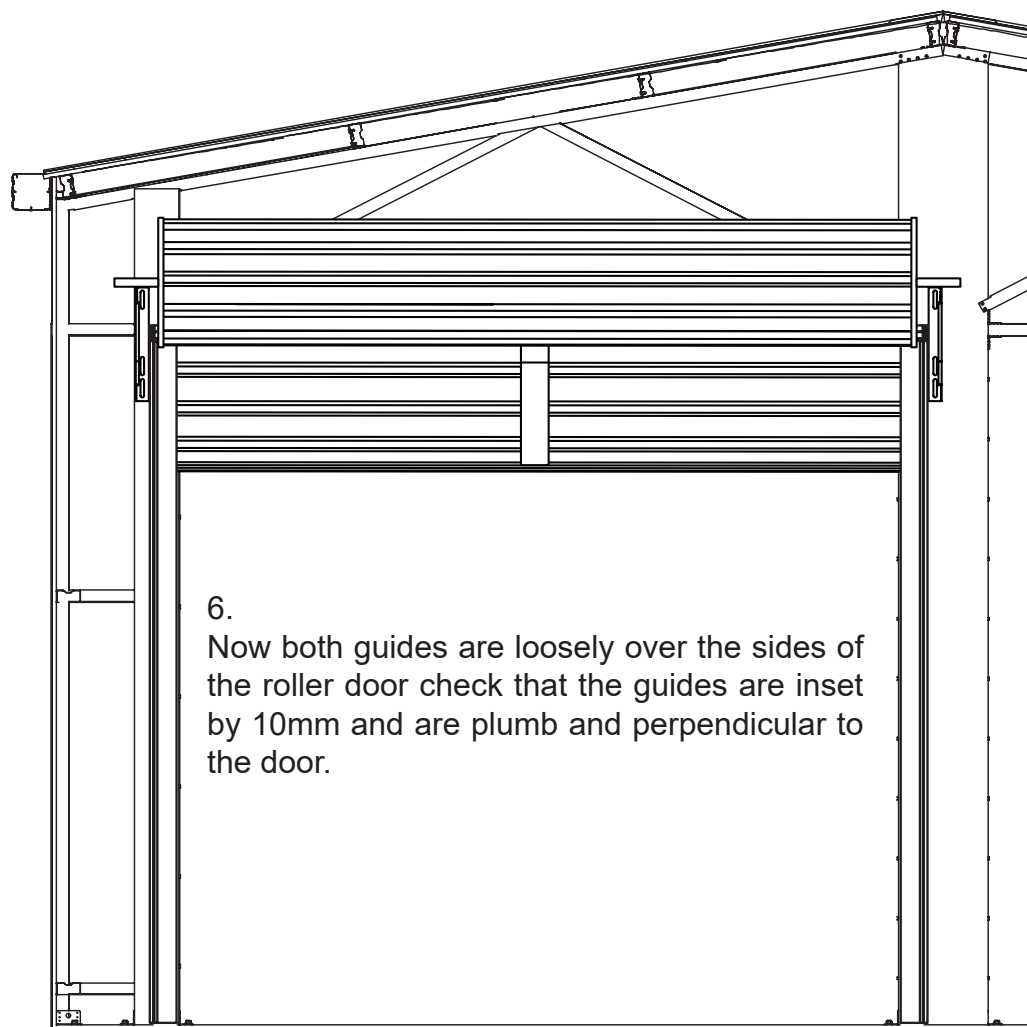


7.  
The underside of the end cap protrusion should be level with underside of the header beam. Next fasten the guides with 14G 20TPI Tek screw as described next.

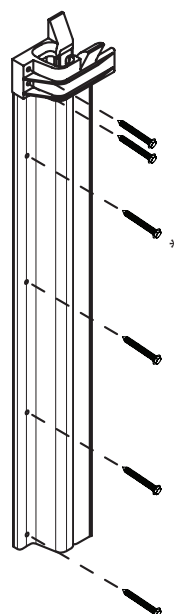

8.  
Secure the indicated fixing through the pre-drilled hole of both the left and right guides. Next pull the door all the way down. Taking note if the door catches at any point. If so alter the angle or spacing of the guide until it moves freely.

9.  
Apply the rest of the fixings constantly checking door moves freely,


## Drill Locking Bar Holes

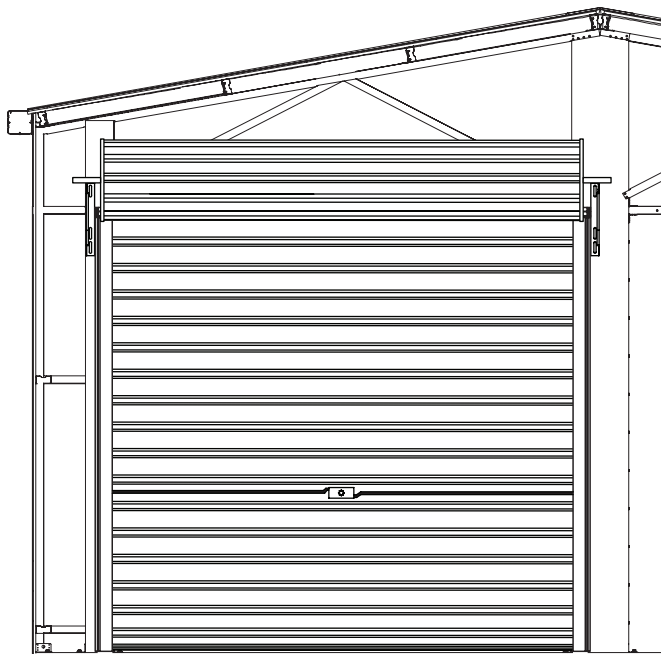

1.  
Close the door so that the weather seal compresses onto the floor.
2.  
Mark the position of the locking bar inside the left and right guides.
3.  
Drill holes on both guides. You will need to make a slot shape so multiple holes will need to be made per side.
4.  
Lock the door and adjust hole size with a file to obtain a satisfactory fit between weather seal and floor.


### TIP:

Make sure the weather seal compresses onto the floor before marking lock holes.

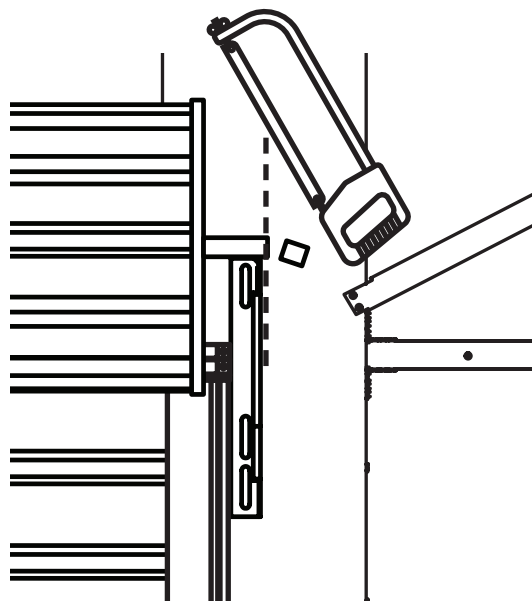


**NOTE:** Before attaching the second door be sure to trim back the axle so it does not protrude past the centreline of the centre mullion.

Also after lifting the the second door onto the brackets the axle will need to be trimmed in the same manner after it has been centrally located over the opening.

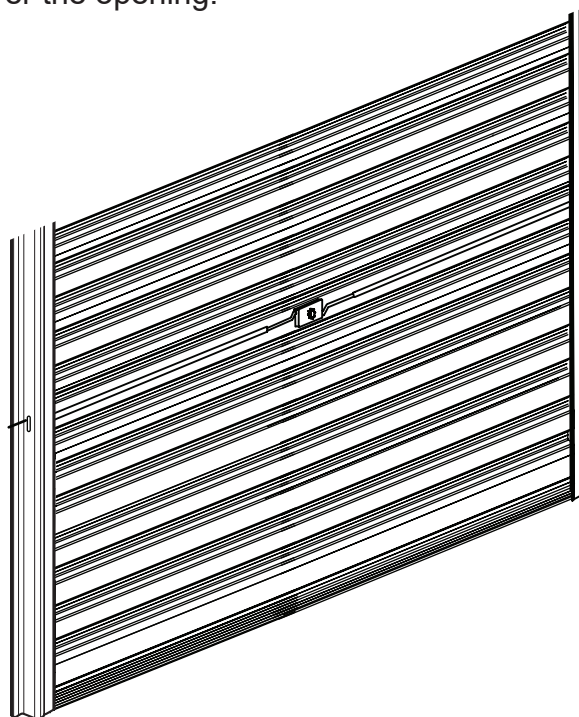

**NEXT ATTACH THE SECOND DOOR IN THE SAME MANNER.**

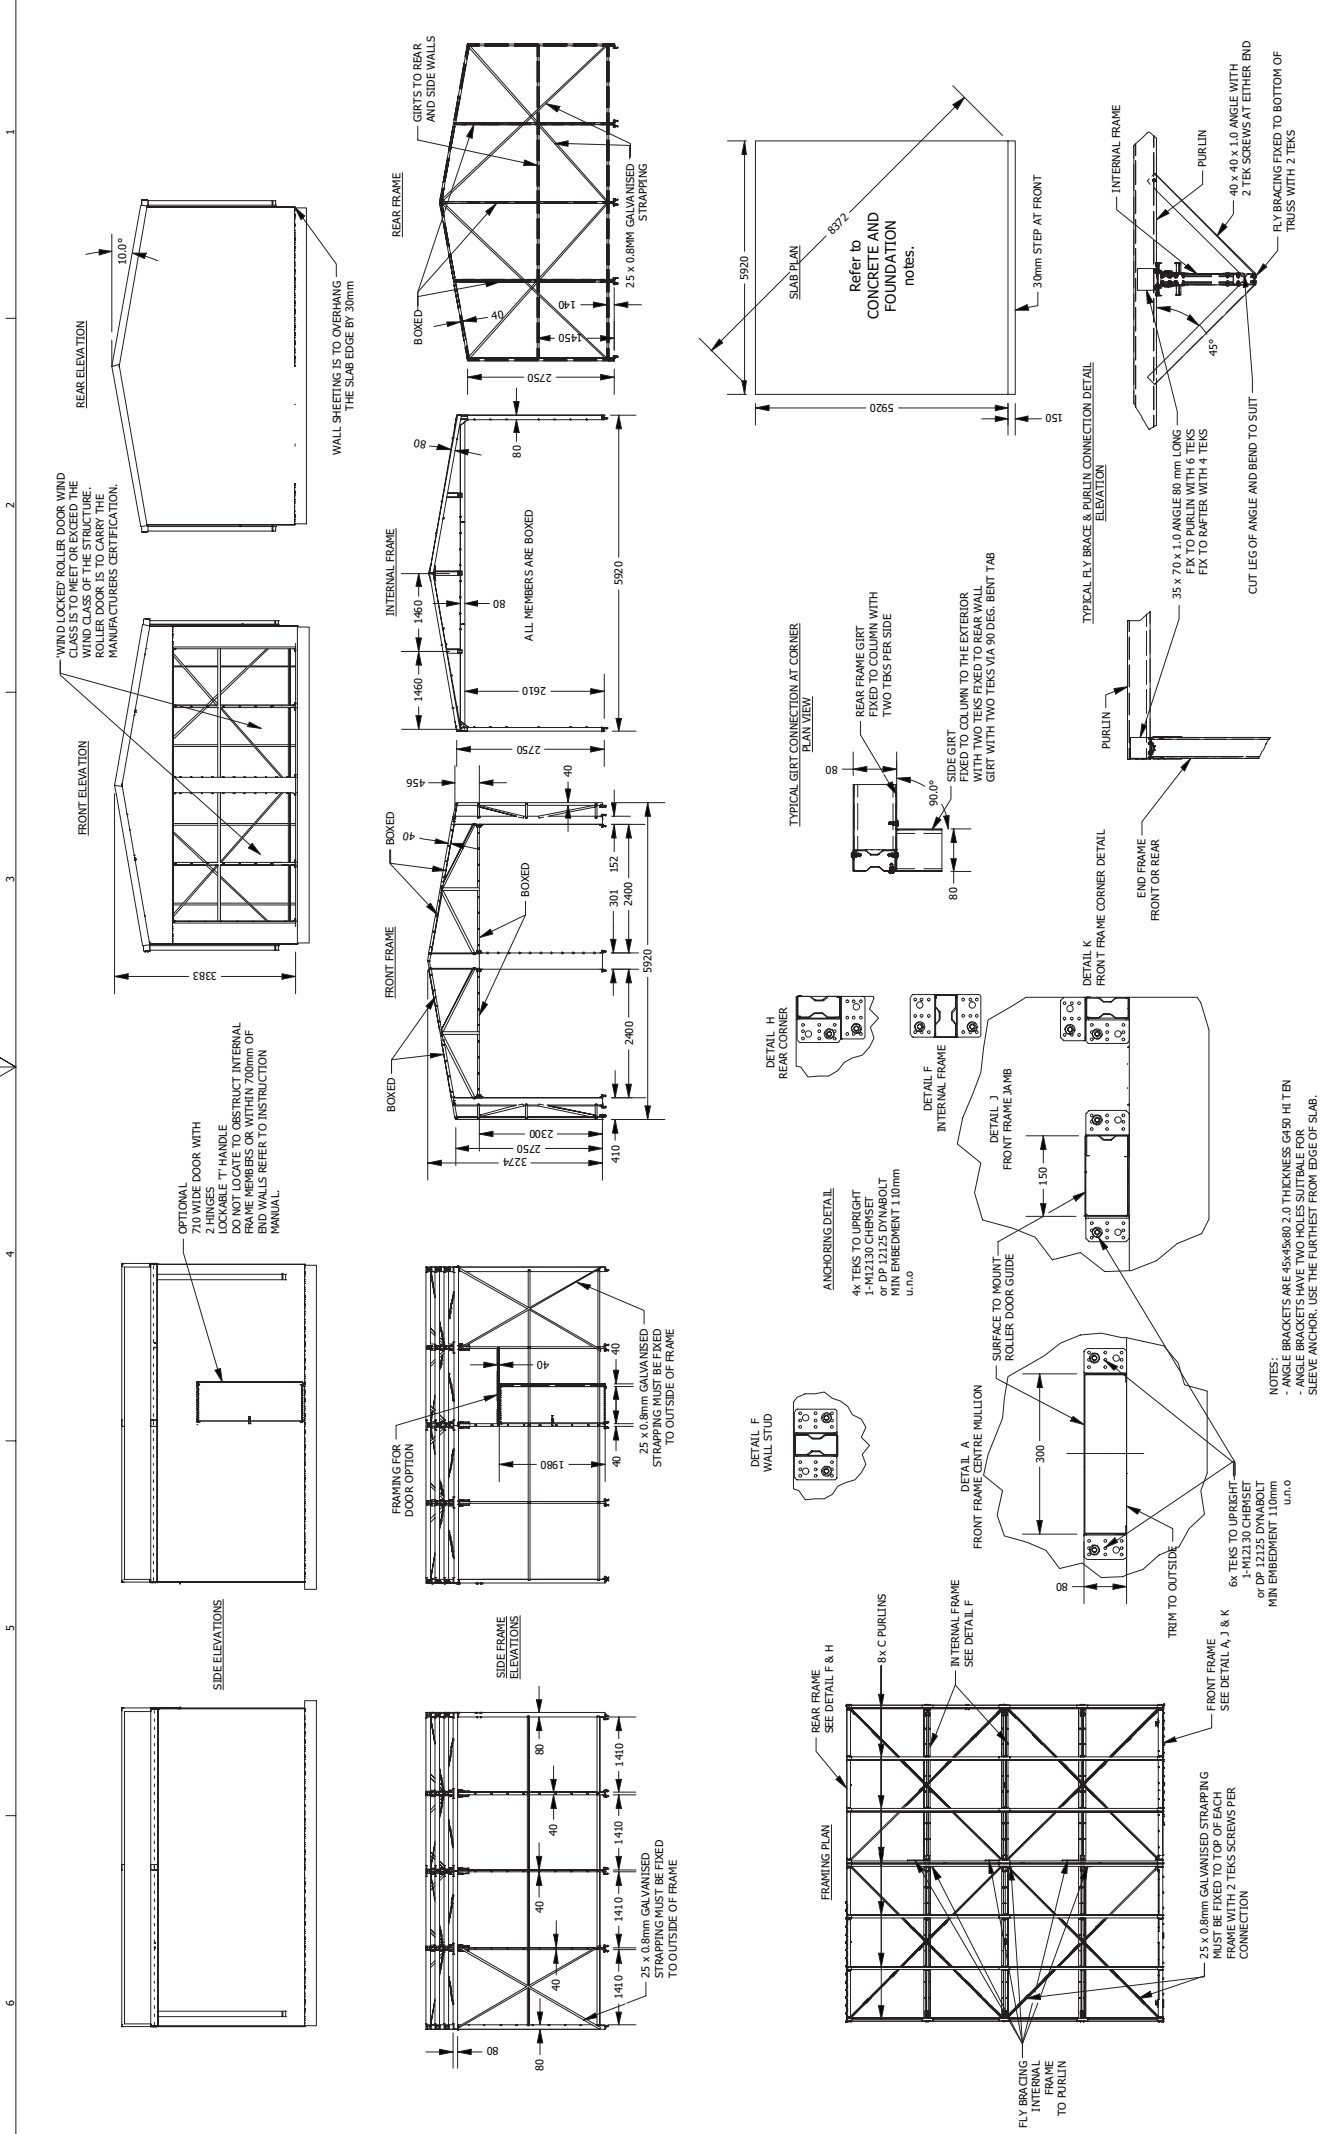

DRAWN SJC 10/07/2024		ABS-GR210		6.0m x 6.0m x 3.4m GARAGE WITH ROLLER DOORS WIND CLASS N2	
CHECKED MZ					
TECH APPROVED	MZ				
SIZE		A3	SCALE	1 / 80	REV
				2024-1	SHEET
					1 OF 2



## Absco Sheds Storage Guidelines

- Absco Sheds are designed to be weatherproof for normal weather conditions. In the event of extreme weather conditions such as heavy rain, combined with high wind gusts, the ridge capping, sheeting joints, screw fixings etc., may exhibit minor deformations which may allow some water entry. These areas should be checked regularly to ensure that maximum strength and protection is maintained.
- Other weather conditions such as extreme heat and extreme cold, moist or dry air can influence the effects of concrete floor moisture and/or condensation on the underside of the roof sheets.
- Absco Sheds and storage units are primarily used for storage of garden equipment such as lawnmowers, wheelbarrows, garden tools etc. Storage items that might be adversely affected by any of the above conditions may require additional protection such as being sealed or covered by plastic sheets and/or stacked above the concrete floor on timber slats.
- Waterproof sealants may be used to offer further protection where required around joins and screw fixings, as can rubber door seals and other products which are available from most hardware outlets.
- Placement of waterproof sealants (silicone) between the base of the shed and concrete slab is not recommended, as this process can have a reverse effect, preventing excess water from escaping, resulting with water accumulating and being trapped inside the shed.
- Absco accepts no responsibility for water entry, floor moisture, condensation or the condition of the Contents inside your Absco steel building arising from any of the pre-mentioned weather conditions.
- Absco accepts no responsibility for structural damage if doors were left open and/or not secured during a weather event.

### Post-Installation Care

Clear final product of steel fillings (swarf) caused by drilling holes and tek screws.

Failure to do so may cause discolouration of surfaces and promote corrosion.

Refer to warranty for more details



# Lifetime Warranty Statement



## 1. DEFINITIONS

In this document, capitalised terms have the following meaning:

- (a) "ABSCO" means John Scholtes Investments (No. 1) Pty Ltd trading as Absco Industries.
- (b) "Authorised Purpose" means for storage (other than storage of corrosive materials), and other activities typically expected of a non-habitable structure.
- (c) "Defect" means a defect in the design, workmanship, materials, or any other defect caused by the manufacturing process of the Product (including damaged or missing parts).
- (d) "Excluded Environment" means land located within 1km of:
  - (i) salt marine locations or other areas of marine influence;
  - (ii) severe industrial or other abnormally or highly corrosive environments;
  - (iii) areas not washed by rain;
  - (iv) a recognised flood, bushfire or earthquake zone; or
  - (v) areas with uncontrolled fill, unless an engineered foundation is constructed.
- (e) "Lifetime Warranty Period" means the period of 35 years, commencing on the day after the date of purchase of the Product.
- (f) "Lifetime Warranty Statement" means this 'Lifetime Warranty Statement' document.
- (g) "Parties" means ABSCO and You.
- (h) "Product" means any of following unless stated otherwise in the product description and/or the Product Guide for the Product:
  - (i) products which utilise ABSCO 'SNAP-TITE' technology, including but not limited to garden sheds, chicken coops, bike sheds and bin covers; and
  - (ii) all non-insulated large structures such as carports, awnings, shades and garages,but does not include any product stated to be in the "ABSCO Economy" range.
- (i) "Product Guide" means the guide for installation and maintenance of the Product produced by ABSCO.
- (j) "You" / "Your" means the customer who purchased or installed the Product, or the person who owns the land upon which the Product is installed but does not include a subsequent purchaser of the Product where the Product is moved to a different location to that originally installed.

## 2. ABSCO'S STRUCTURAL WARRANTY

- 2.1. ABSCO provides this warranty to You in relation to the Product. The warranty applies to all colours and finish variants of the Product manufactured by ABSCO and sold by authorised sellers of the Product in Australia or New Zealand.
- 2.2. Subject to the terms of this Lifetime Warranty Statement:
  - (a) ABSCO warrants that the Product will be free from Defects for the duration of the Lifetime Warranty Period; and
  - (b) where the Product contains a Defect, ABSCO will either repair or replace the Product, or provide You with monetary compensation for the Defect in accordance with clause 3.

## 3. WARRANTY CLAIM PROCEDURE

- 3.1. If, during the Lifetime Warranty Period, You believe the Product has a Defect, You must comply with the procedure set out in this clause 3.
- 3.2. Within 30 days of becoming aware of the Defect in the Product, You must notify ABSCO in writing of the alleged Defect ("Defect Notice") by email to [admin@absco.com.au](mailto:admin@absco.com.au).
- 3.3. The Defect Notice must include:
  - (a) Your name, address and contact details;
  - (b) proof of purchase of the Product, including the colour and finish of the Product;
  - (c) the date and location of the installation of the Product and details of the contractor or installer of the Product;
  - (d) details of the alleged Defect in the Product, including but not limited to:
    - (i) a clear description of the alleged Defect;
    - (ii) the date the alleged Defect was first identified; and
    - (iii) any photographs and/or video footage of the alleged Defect.
- 3.4. As soon as reasonably practicable after receipt of the Defect Notice, ABSCO will contact You to investigate the alleged Defect. You must make the Product available to ABSCO and/or its authorised representatives for inspection and testing if so required.
- 3.5. A travel fee may apply if ABSCO and/or its authorised representatives are required to inspect the Product outside a capital metropolitan city area.
- 3.6. If ABSCO's investigations reveal a genuine Defect in the Product, ABSCO may elect to either:
  - (a) repair the Product;
  - (b) replace all or part of the Product; or
  - (c) refund all or part of the purchase price paid by You as compensation for the Defect in the Product.
- 3.7. ABSCO's election in clause 3.6 is at ABSCO's sole discretion.
- 3.8. If ABSCO elects to repair the Product, ABSCO will arrange for a qualified tradesperson to attend to the rectification of the Defect as soon as reasonably practicable. The cost of the repair will be borne by ABSCO.
- 3.9. If ABSCO elects to replace the Product:
  - (a) ABSCO will arrange for the replacement Product to be available for collection by You from the nearest ABSCO authorised reseller as soon as reasonably practicable;
  - (b) You may be required to return the alleged Defective parts or components to ABSCO; and
  - (c) You will be liable for the cost of disassembly and removal of the Product and assembly of the replacement Product.
- 3.10. If ABSCO elects to repair or replace the Product and the necessary parts or components are no longer manufactured or supplied by ABSCO, ABSCO may repair or replace the parts or components with parts or components of a similar quality, grade, composition and colour. You cannot object to such an alternative.
- 3.11. If ABSCO's investigations do not reveal a genuine Defect in the Product (including a defect which is not covered by this warranty), You agree to pay ABSCO's reasonable investigation costs.

#### 4. WARRANTY LIMITATIONS / EXCLUSIONS

- 4.1. To the extent permitted by law, this warranty will not apply where:
- (a) the Product has been installed or used for a purpose that is not an Authorised Purpose;
  - (b) the Product has not been installed, assembled, maintained and/or operated in complete compliance with ABSCO's Product Guide;
  - (c) the Product has been used to store corrosive materials such as fertiliser or chlorine;
  - (d) the Product was installed in excess of 12 months after the purchase of the Product;
  - (e) the Product has not been installed in accordance with the relevant standards, codes and statutory regulations;
  - (f) the Defect is determined to have been caused by storm, wind, rain, earthquake, fire, snow or poor foundations;
  - (g) the Defect is, or is the result of, surface deterioration of panels caused by 'swarf' (tiny particles of steel debris left from cutting, grinding or drilling operations);
  - (h) the Product has been installed in an Excluded Environment;
  - (i) the Product has been subject to accident, negligence, alteration, abuse or misuse;
  - (j) the Defect is determined to be the result of overloading; or
  - (k) ABSCO determines that the Defect is the result of a failure of a third-party product.
- 4.2. You acknowledge that:
- (a) dimensions and colour of the Product are subject to normal manufacturing variations and tolerances, and that reasonable variances are not considered a Defect under this warranty; and
  - (b) this warranty is limited to the repair or replacement of Defects in the Product and does not extend to any other product or any other consequential or indirect damage incurred as a result of the Defect.
- 4.3. For the purpose of this warranty, the following matters are excluded from the definition of Defect:
- (a) general wear and tear which is reasonably expected to occur over the life of the Product;
  - (b) surface deterioration of panels caused by 'swarf' (tiny particles of steel debris left from cutting, grinding or drilling operations);
  - (c) condensation caused by weather conditions such as extreme heat or cold;
  - (d) defects in any fastening apparatus (screws, nuts, bolts, rivets, hasps or bolts);
  - (e) leaks caused by driving rain;
  - (f) improper installation, maintenance or handling of the Product;
  - (g) movement, distortion, collapse or settling of the ground or the supporting structure on which the Product is installed; or
  - (h) staining from foreign substances (including mould, mildew, dirt, grease, oil and any other substance).
- 4.4. To the extent permitted by law, ABSCO is not liable to compensate You for any:
- (a) increased costs or expenses;
  - (b) loss of profit, revenue, business, contracts or anticipated savings;
  - (c) loss or expense resulting from a claim by a third-party; or

- (d) special, indirect or consequential loss or damage of any nature whatsoever, arising from a Defect in the Product or ABSCO's repair or replacement of the Product under this warranty.

#### 5. CONSUMER LAW

##### Australian Consumer Law

- 5.1. Clauses 5.2 to 5.3 apply where the Product was purchased in Australia.
- 5.2. The Product comes with guarantees that cannot be excluded under the Australian Consumer Law. You may be entitled to a replacement or refund for a major failure of the Product and compensation for any other reasonably foreseeable loss or damage. You may also be entitled to have the Product repaired or replaced if the Product fails to be of acceptable quality and the failure does not amount to a major failure.
- 5.3. The benefits of this Lifetime Warranty Statement are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this Lifetime Warranty Statement is to be interpreted as excluding, restricting or modifying any State or Federal legislation applicable to the supply of goods and services which cannot be excluded, restricted or modified.

##### New Zealand Consumer Law

- 5.4. Clauses 5.5 to 5.6 apply where the Product was purchased in New Zealand.
- 5.5. This warranty is subject to the laws of New Zealand, including but not limited to the New Zealand Sale of Goods Act, the Consumer Guarantees Act and the Fair Trading Act.
- 5.6. The benefits of this Lifetime Warranty Statement are in addition to any rights and remedies imposed by New Zealand legislation that cannot be excluded. Nothing in this Lifetime Warranty Statement is to be interpreted as excluding, restricting or modifying any New Zealand legislation applicable to the supply of goods and services which cannot be excluded, restricted or modified.

#### 6. NO REPRESENTATIONS / ENTIRE AGREEMENT

- 6.1. You agree and acknowledge that this Lifetime Warranty Statement contains the entire agreement between the Parties regarding the warranty provided by ABSCO to You in relation to the Product.
- 6.2. To the full extent permitted by law, this Lifetime Warranty Statement supersedes all other warranties of any kind, including whether express or implied by representations, statement, correspondence or other conditions such as merchantability or fitness for purpose.

#### 7. REGISTRATION OF WARRANTY

- 7.1. Please ensure that You keep this Lifetime Warranty Statement in a safe place along with your proof of purchase of the Product.
- 7.2. To ensure ABSCO has a record of your warranty, You can register Your warranty online at <http://absco sheds.com.au/warranty-details/>.