



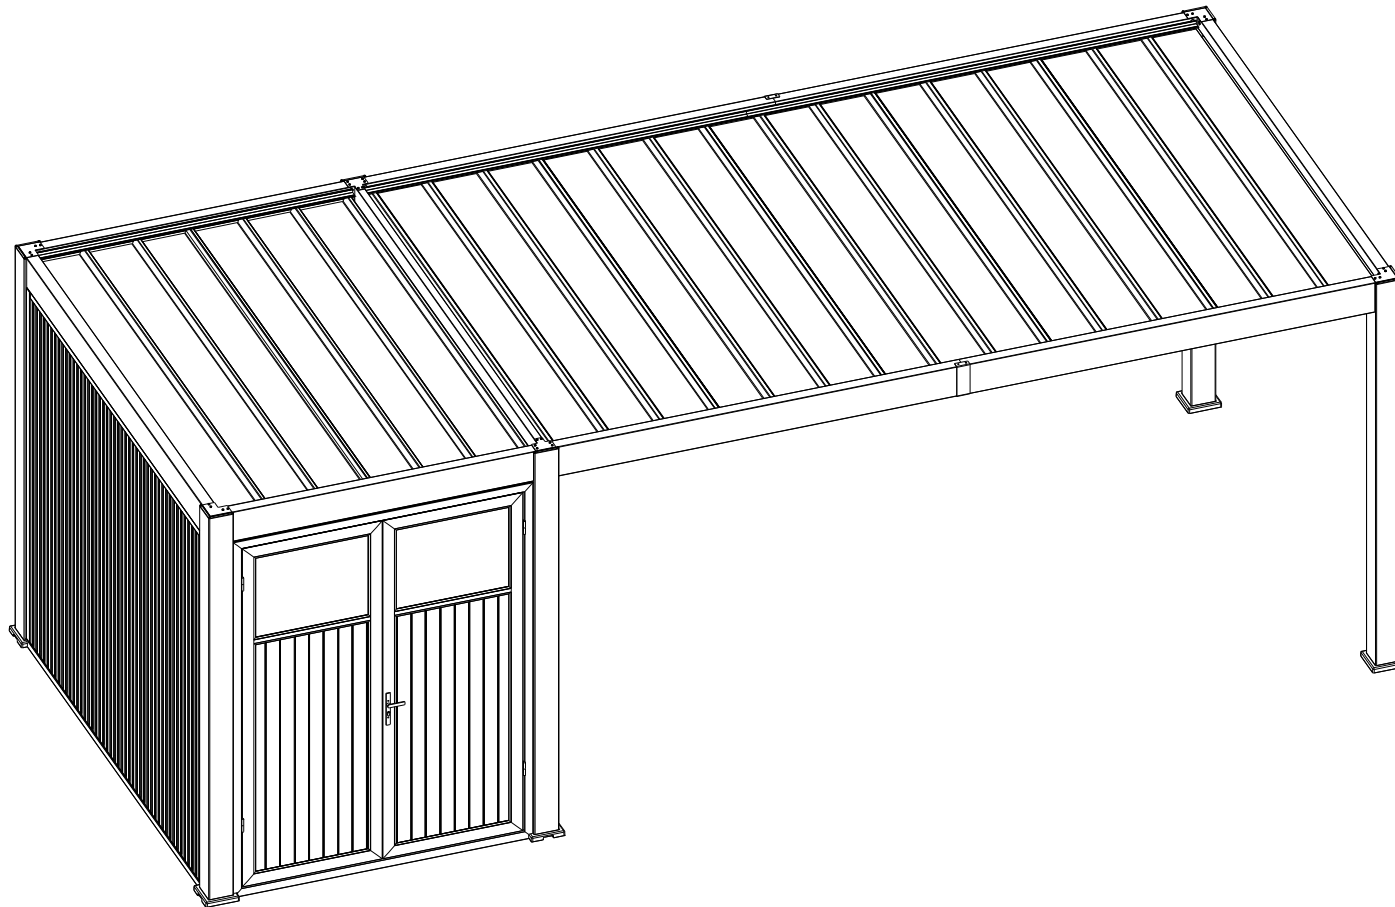


CARPORT + STORAGE

Assembly Instructions

Carport Spare Part List A

1/6

REF	PICTURE		QTY
A1		 150X150-2550	2
A3		 150X150-2550	2

REF	PICTURE	QTY
N1		4
N2		4

REF	PICTURE	QTY
S2	 6x35  4mm	16
S6	 10x80	16

2/6



REF	PICTURE		QTY
B2		 120X195-2910	2
D2		 120X195-2517.5	2
F1		 25X45-2494	4

REF	PICTURE	QTY
N3		2
N4		4


REF	PICTURE	QTY
P1		24
P2		12

2/6

REF	PICTURE	QTY
S1	 6mm 	24
S3	 5x19	42

REF	PICTURE	QTY
Z1	 4mm	1
Z2	 4mm	1
Z3	 6mm	1
Z4	 6mm	1


REF	PICTURE	QTY
S4	 5x100	32
S5	 4x16	4

REF	PICTURE	QTY
Z5	 PH2	1
Z6		1
Z7		1

3/6


REF	PICTURE		QTY
D1		 120X195-2517.5	2

4/6

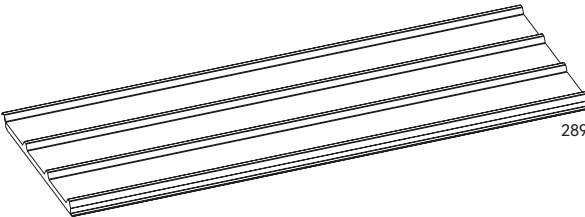
REF	PICTURE		QTY
W1		 2895-1080	2

Carport Spare Part List A

5/6

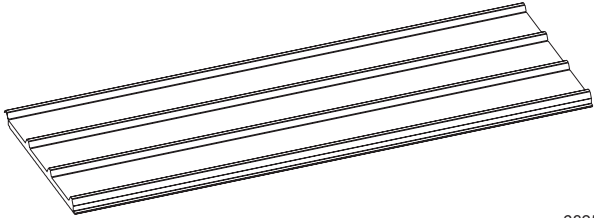
REF	PICTURE		QTY
W1		 2895-1080	2

6/6

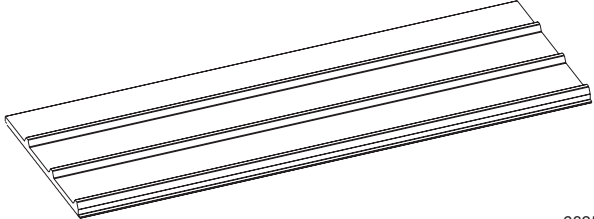REF	PICTURE		QTY
W2		 2895-1023	1

The above mentioned part is included in the CP-F-C-3052-ANT.

1/10

REF	PICTURE		QTY
A2		 150X150-2550	2
B3		 120X195-1929	2

Carport Spare Part List B

1/10

REF	PICTURE	QTY
N1		2
N2		2
N5		2

REF	PICTURE	QTY
S1	 6mm	12
S2	 6x35 4mm	8
S3	 5x19	15
S4	 5x100	12
S5	 4x16	20
S6	 10x80	8
S7	 4x60	12
S8	 8x100	15

REF	PICTURE	QTY
P1		28
P2		3

2/10

REF	PICTURE		QTY
E1		 120X195-2910	1
F2		 25X45-1910	2
K1		 32X40-2701	2

Carport Spare Part List B

2/10

REF	PICTURE		QTY
K2		 32X40-2323	3
K3		 32X40-1719	1
K4		 40X60-2790.	2
K5		 40X60-1809	1
K6		 34X50-2323	3
K7		 6X50-2323	3

3/10

REF	PICTURE		QTY
L1		 188X28-2316	7

4/10

REF	PICTURE		QTY
L1		 188X28-2316	7

5/10

REF	PICTURE		QTY
L1		 188X28-2316	7

6/10

REF	PICTURE		QTY
L1		 188X28-2316	7

7/10



REF	PICTURE		QTY
L1		 188X28-2316	7

8/10



REF	PICTURE		QTY
L1		 188X28-2316	4
L2		 100X28-2316	2
L5		 180X28-2316	1

Carport Spare Part List B


9/10

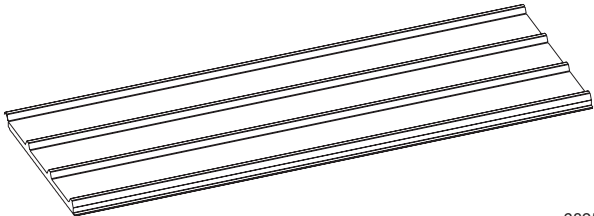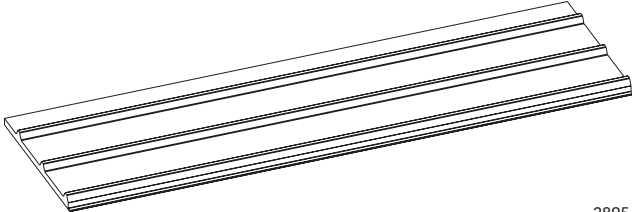REF	PICTURE		QTY
W1		 2895-1080	1
W3		 2895-932	1

10/10

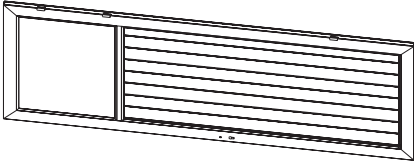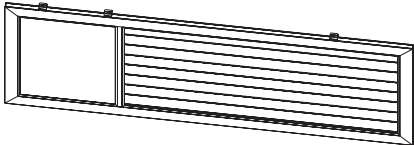
REF	PICTURE		QTY
M1			1
M2			1
M3			1
M4			1
M5			1
M6			1
T1			4
T2			4
T3			1
T4			1

NECESSARY TOOLS AND SAFETY GEAR (NOT SUPPLIED)




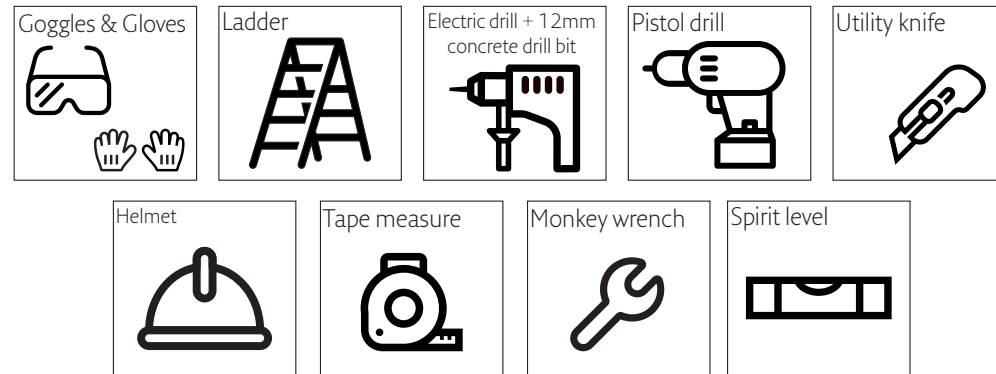


These instructions have to be saved during the whole product life cycle. We advise you to read these very carefully before proceeding to the assembly. The user will be reliable for any damages or injuries caused due to incorrect or improper installation.

There is a Product Tracking Number in the inner side of the carton(see below diagram). For better and efficient after-sales in the future, when tear down the carton box, please take a photo of the Tracking Number and save the photo.




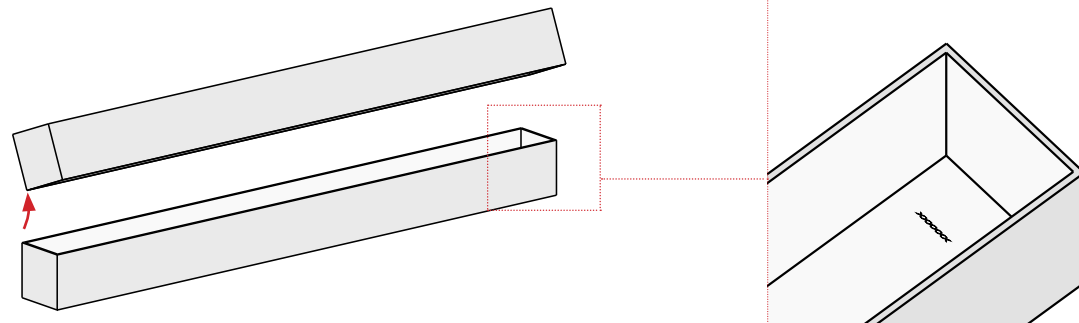


Combination A+B

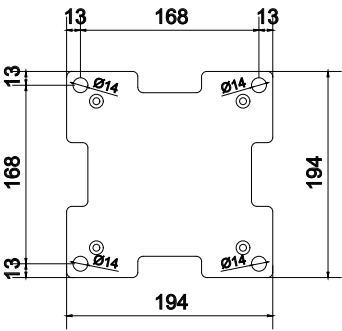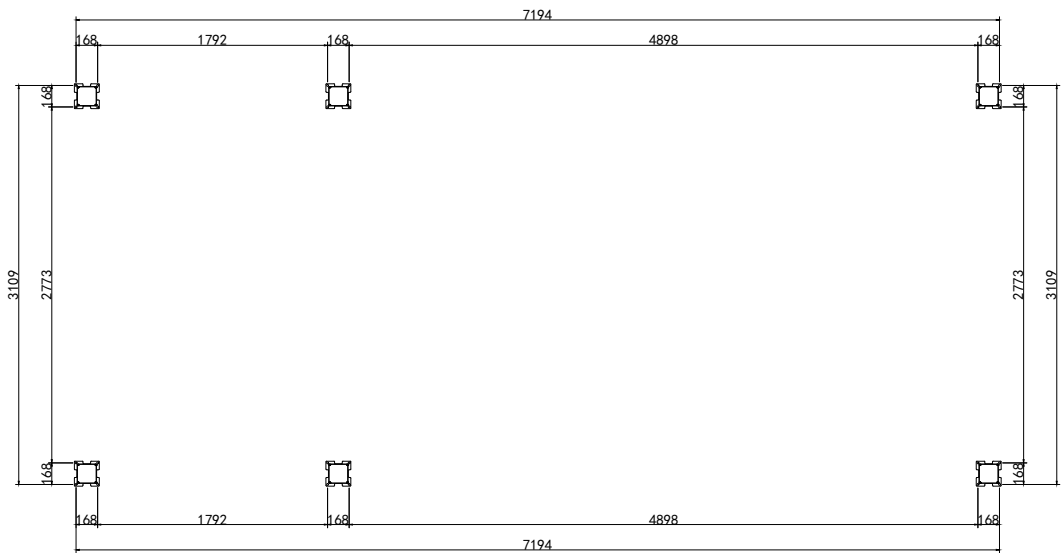
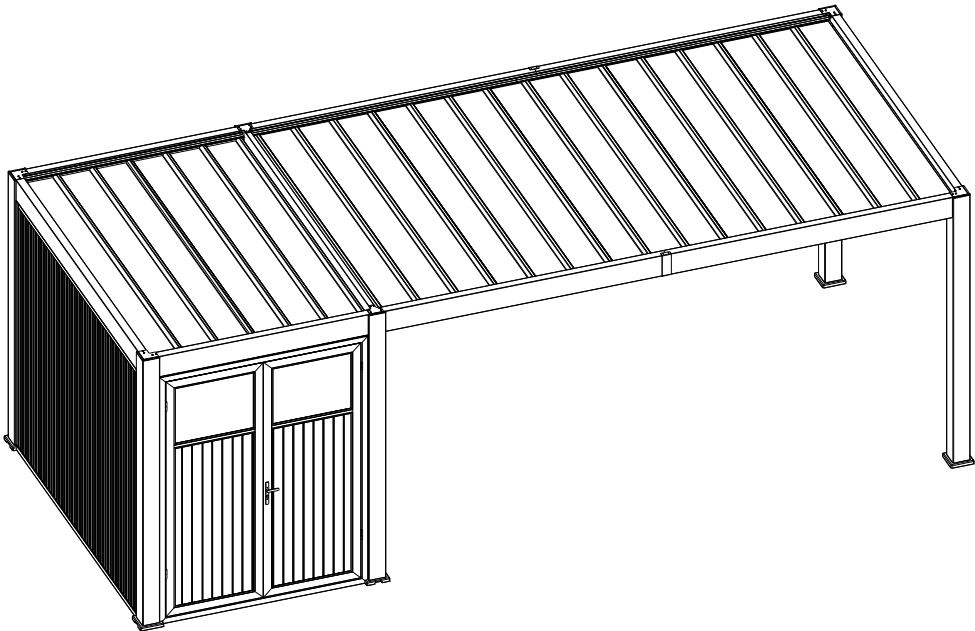
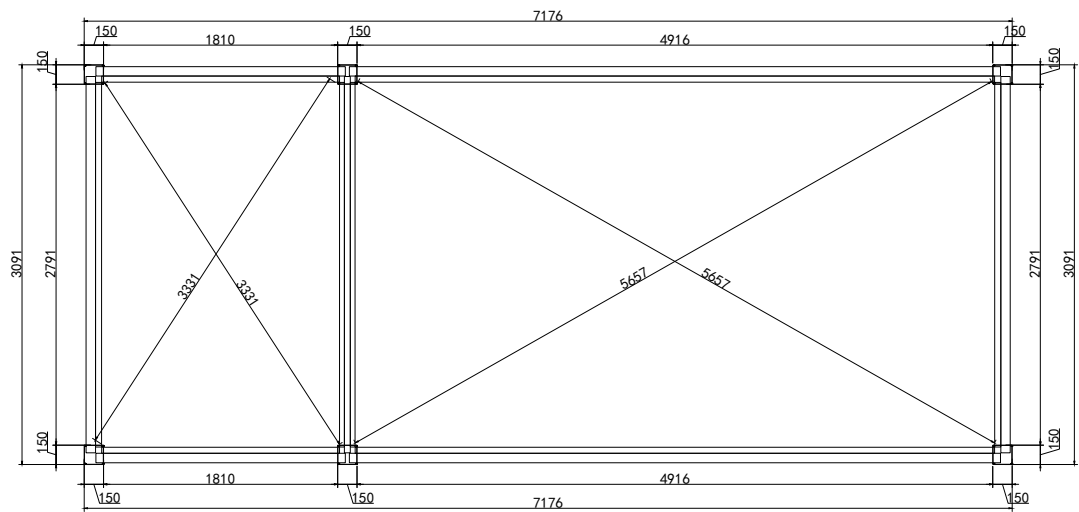


Combination A+B

S3	 5×19	24
S5	 4×16	4
N3		2






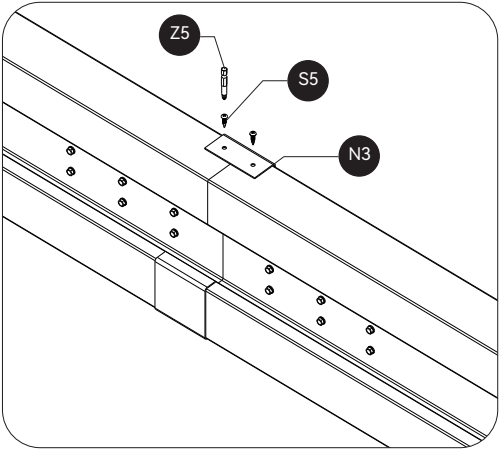
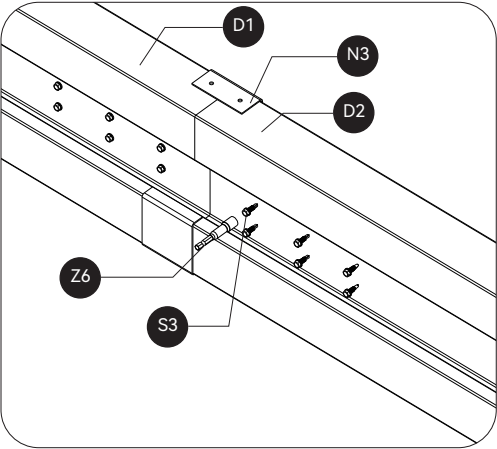
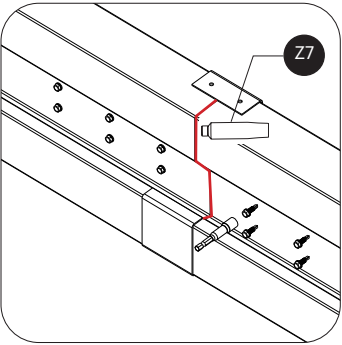
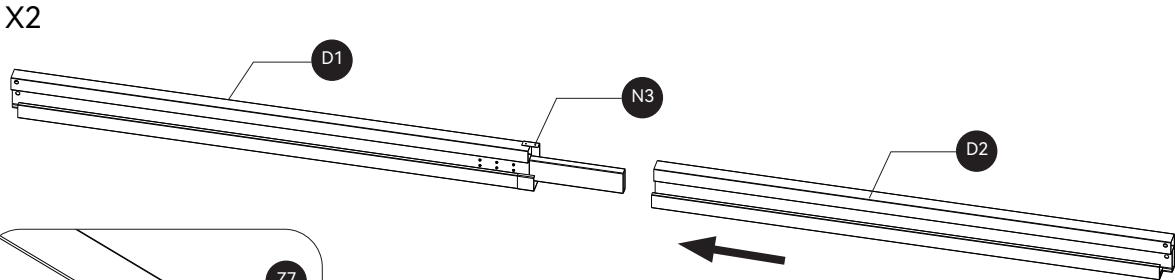


S2	 6×35	24
N1		6
N2		6

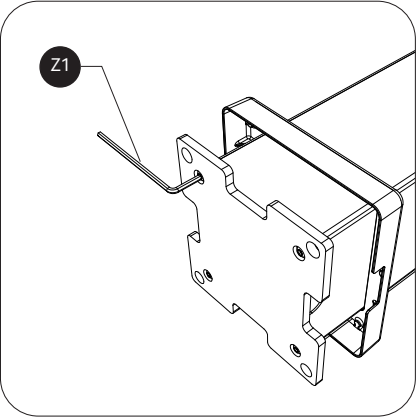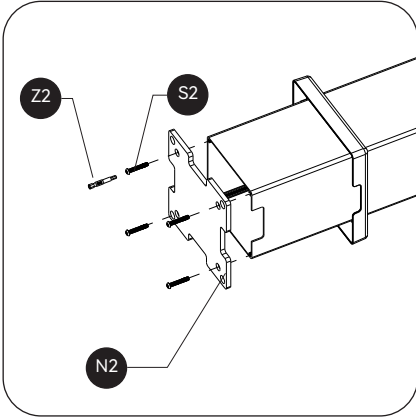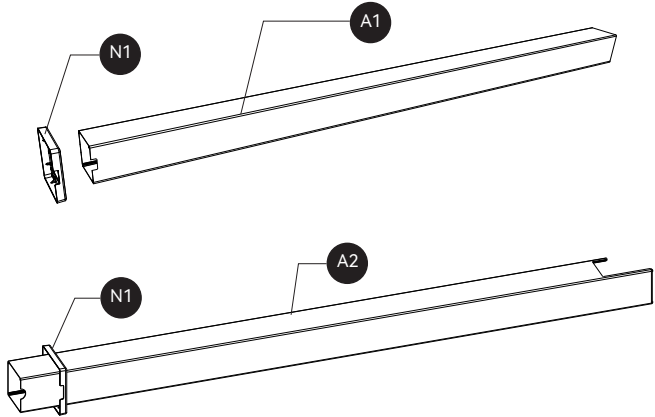

Combination A+B









S1		36
----	---	----

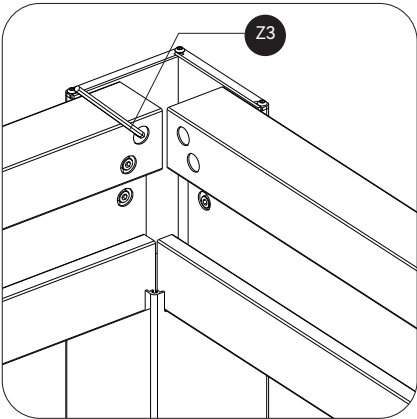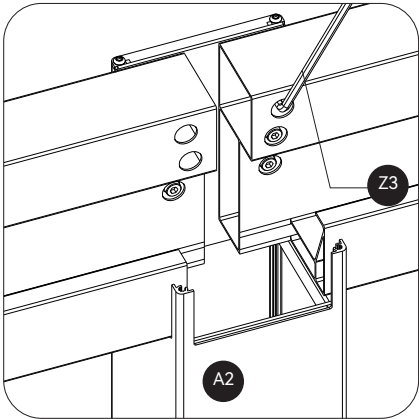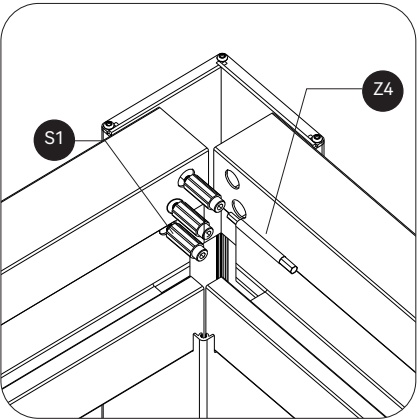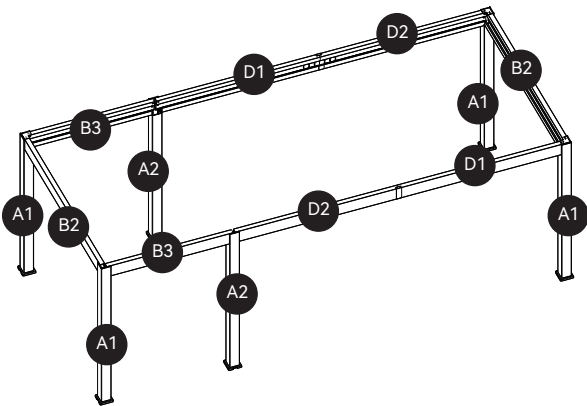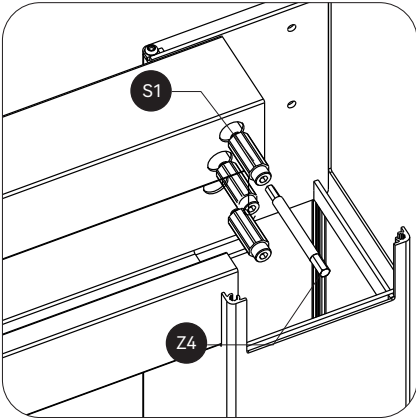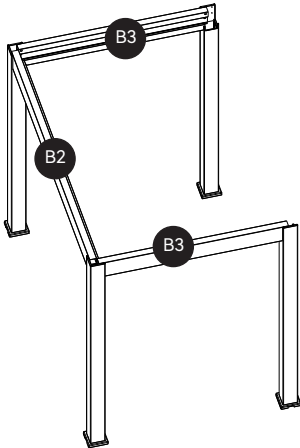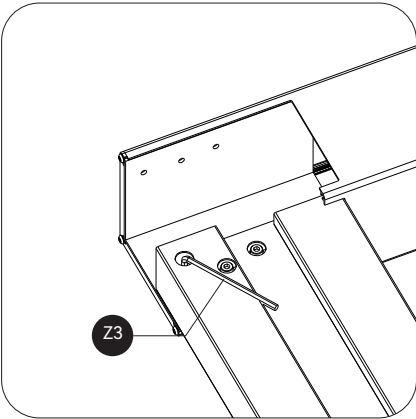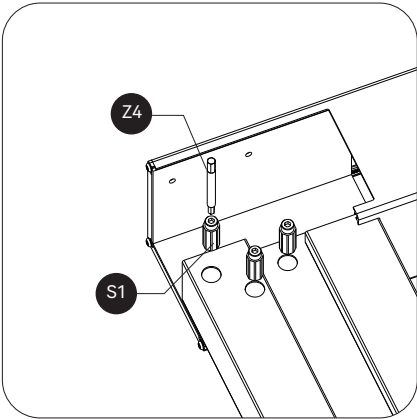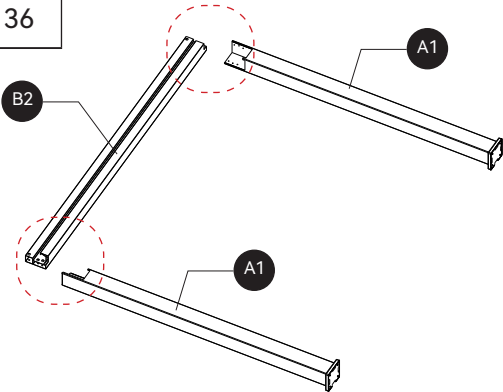

Combination A+B










S3	 S3	28
N4		4
N5		2

P1		36
----	---	----

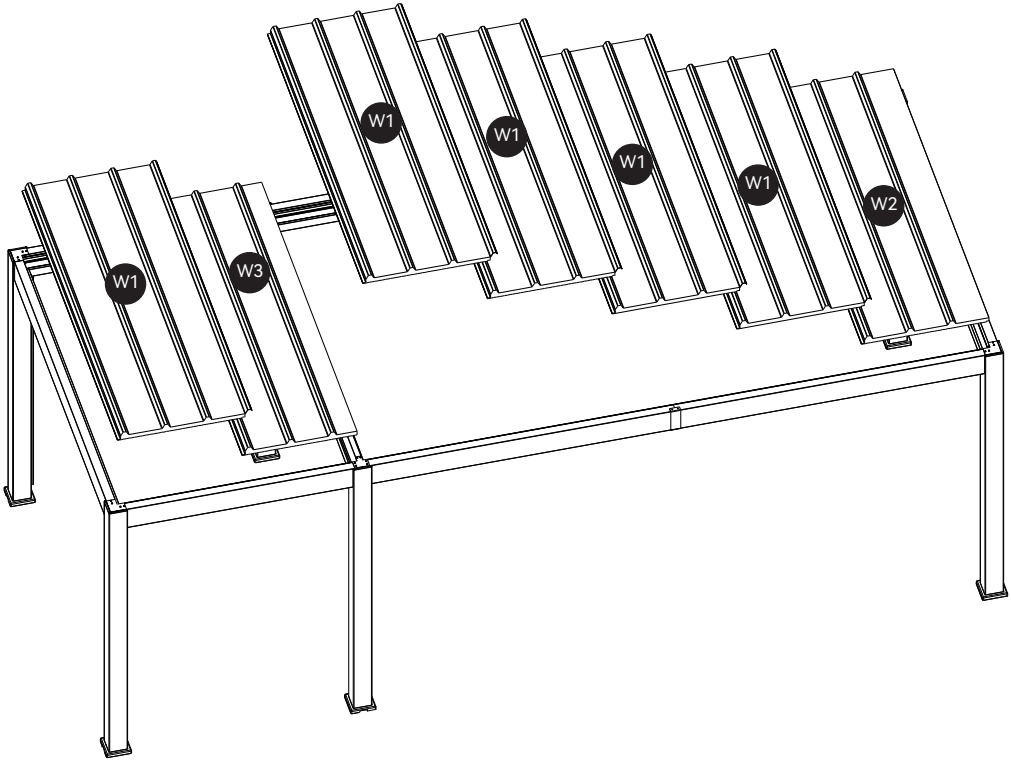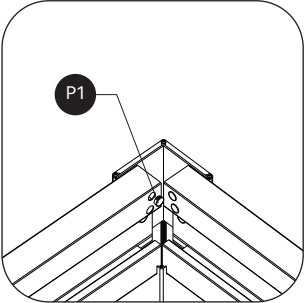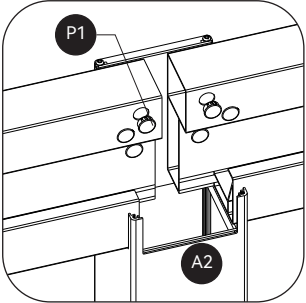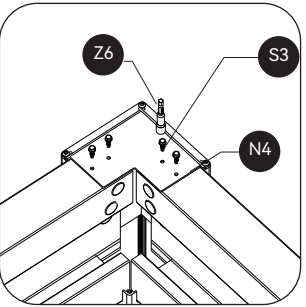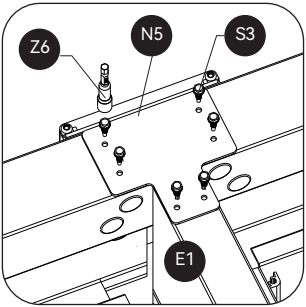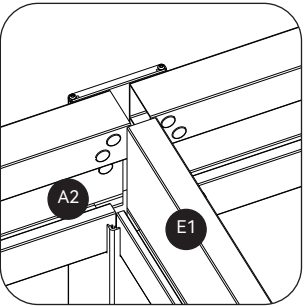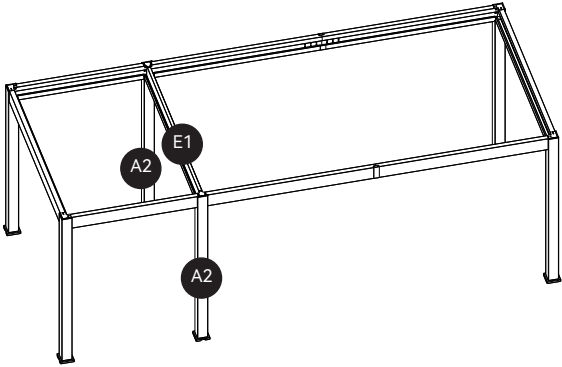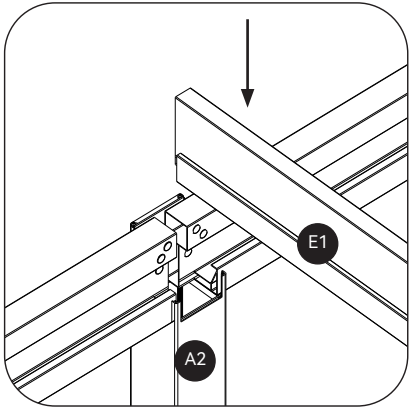





Combination A+B

S4		44
----	---	----

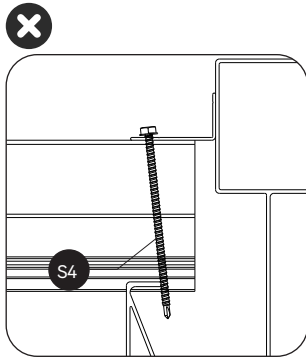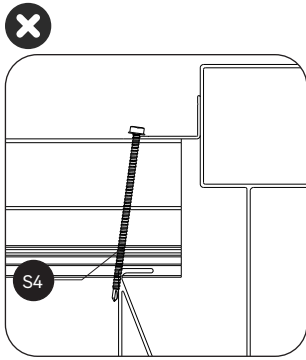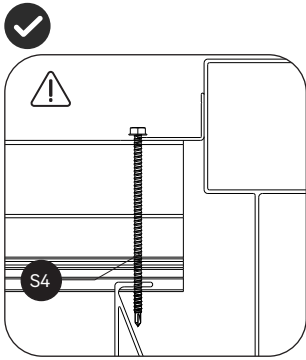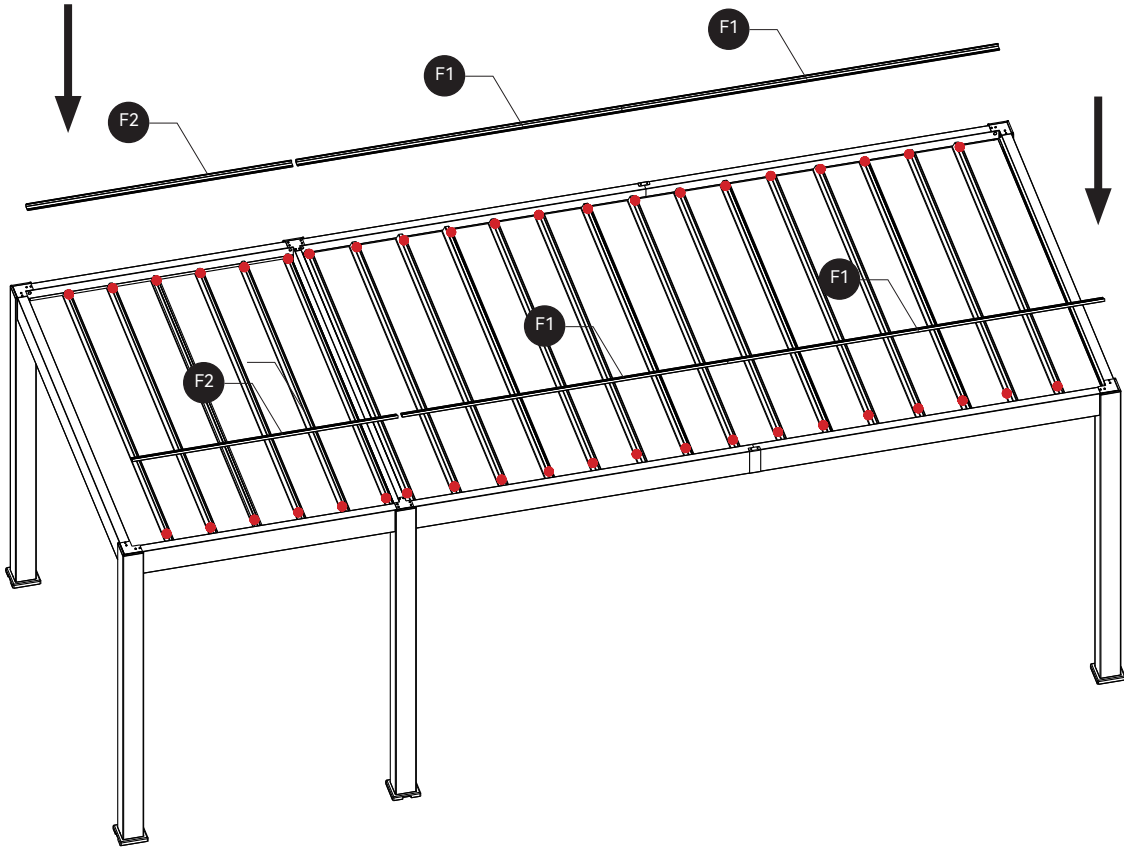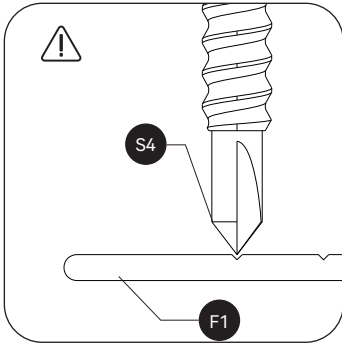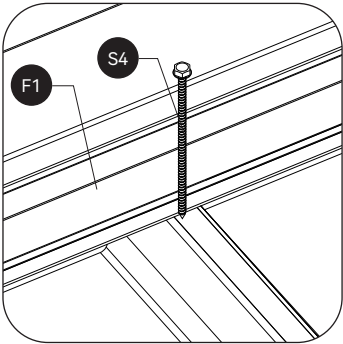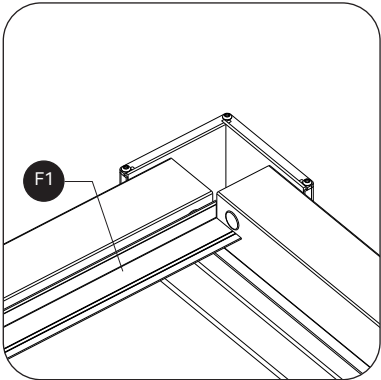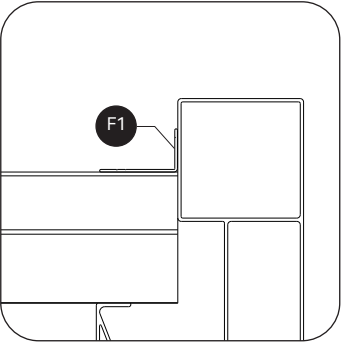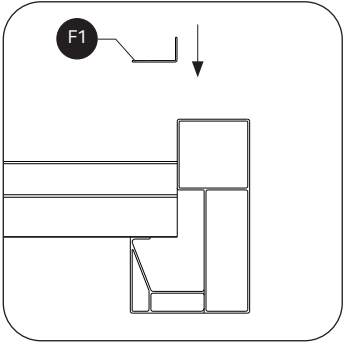




Combination A+B

S3	 5x19	15
P2		15

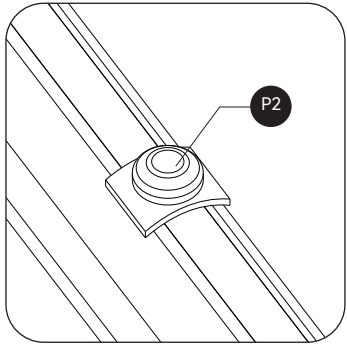
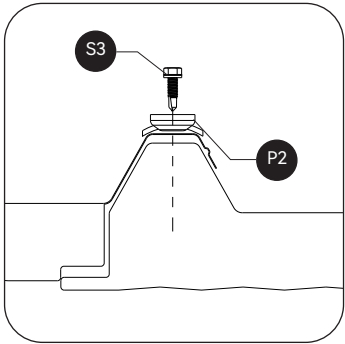
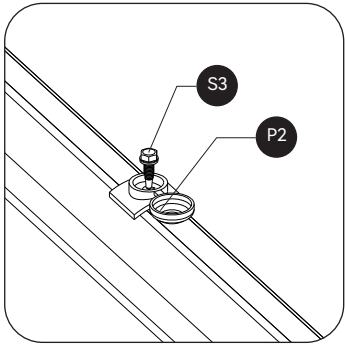
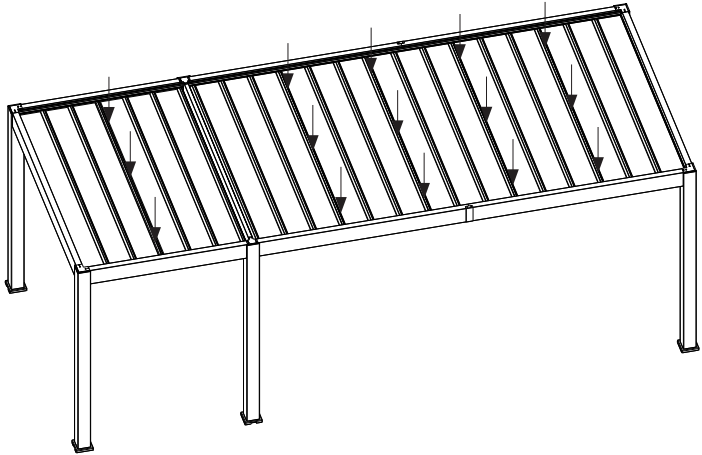


Combination A+B






S6		24
----	---	----

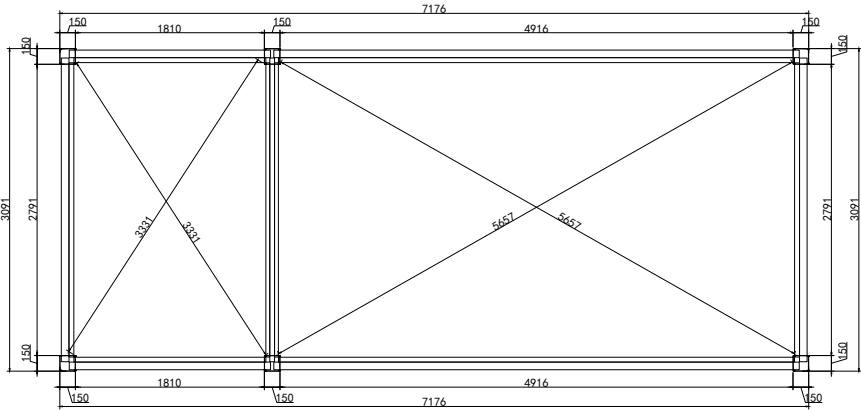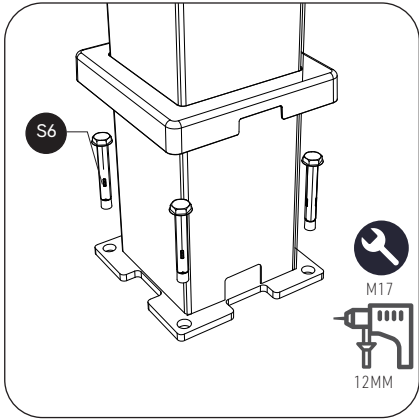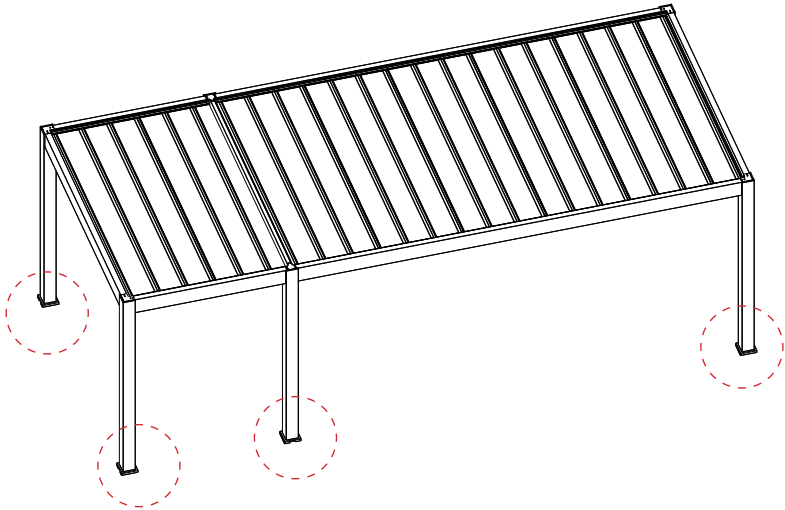

Combination A+B


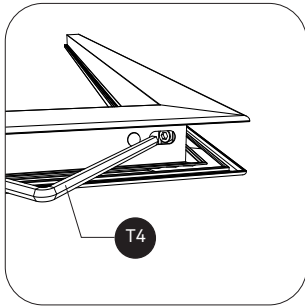
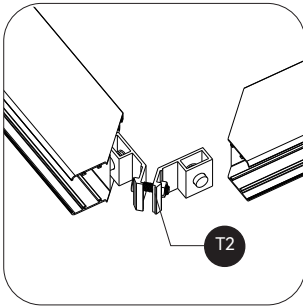
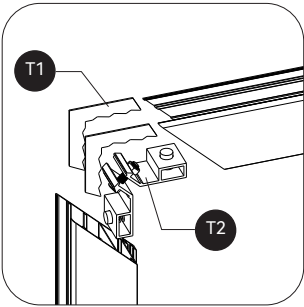
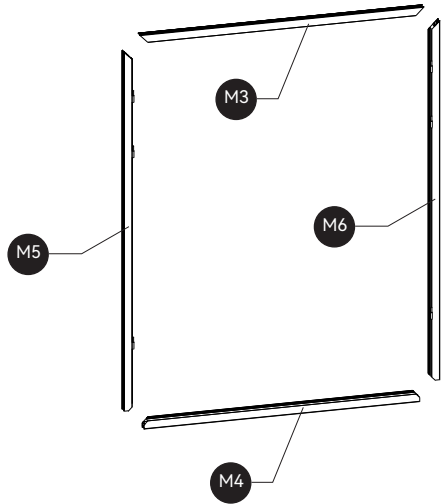


P1		12
S7		12

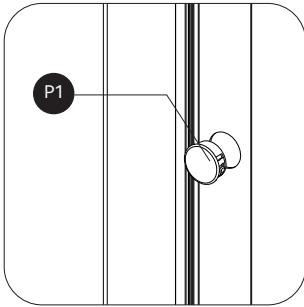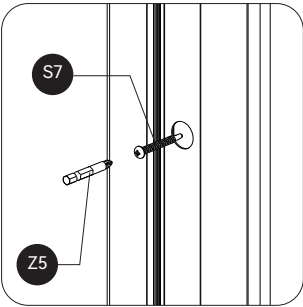
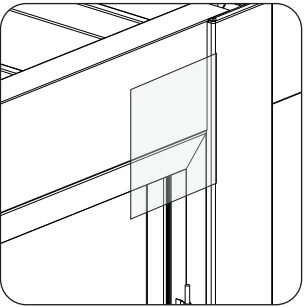
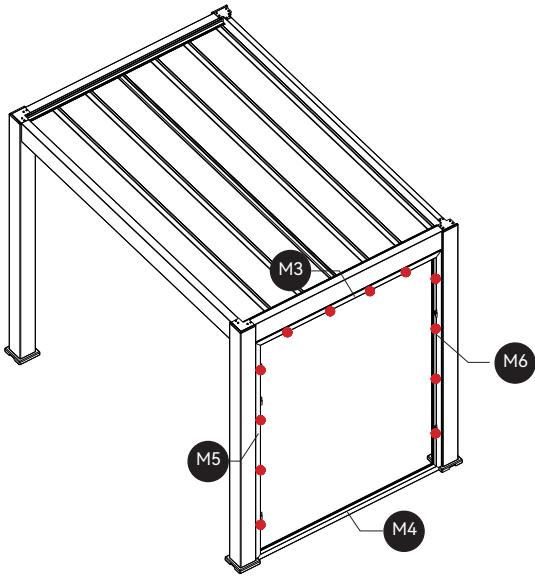
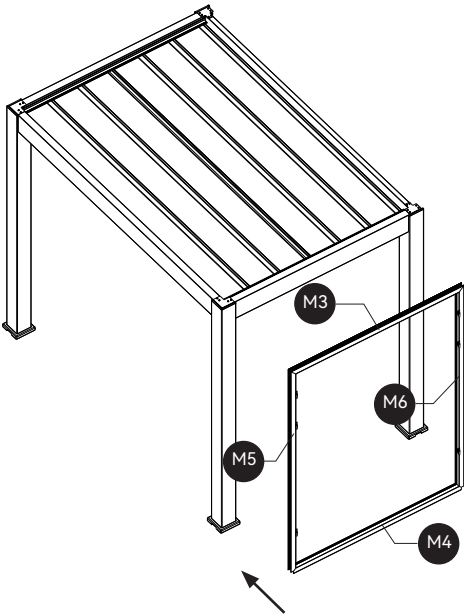


Combination A+B

P1		4
S8	 8x100	4

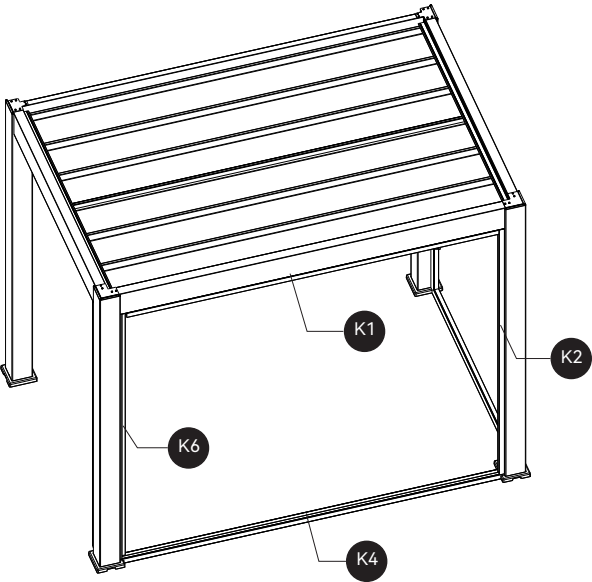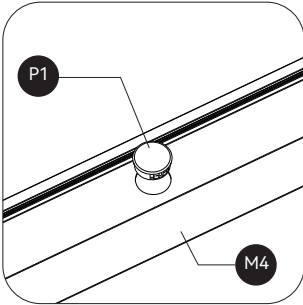
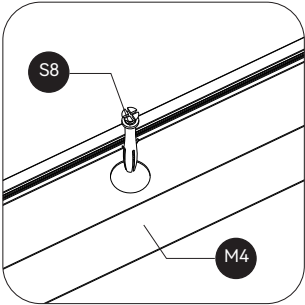
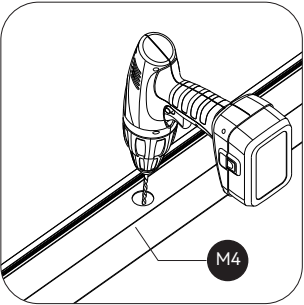
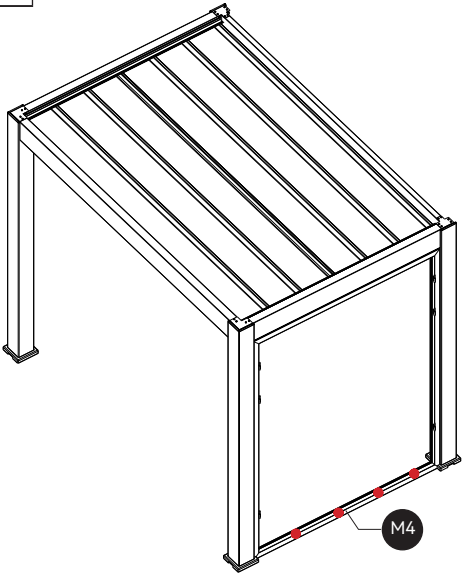


Install K2 and K4 first, taking care that K2 is flush with the outside of the beam.

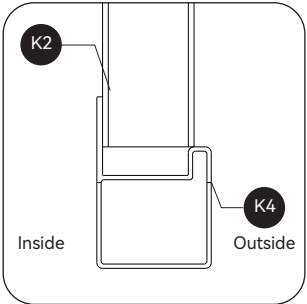
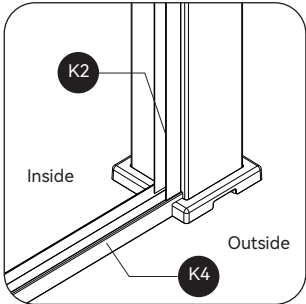
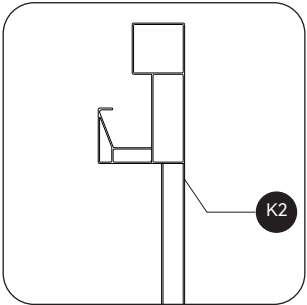
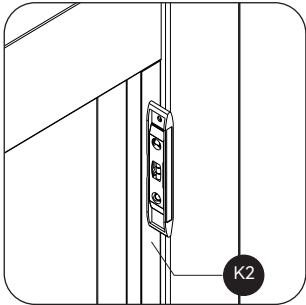


Combination A+B

S8	 8x100	4
----	--	---

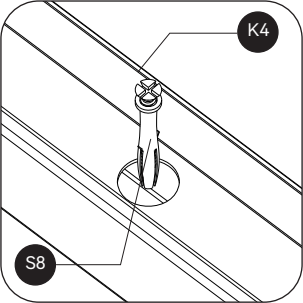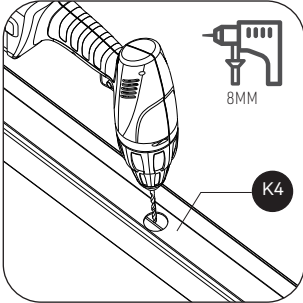
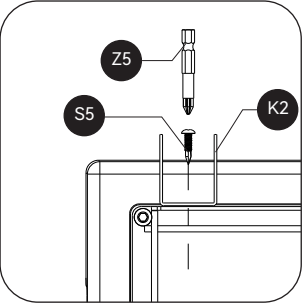
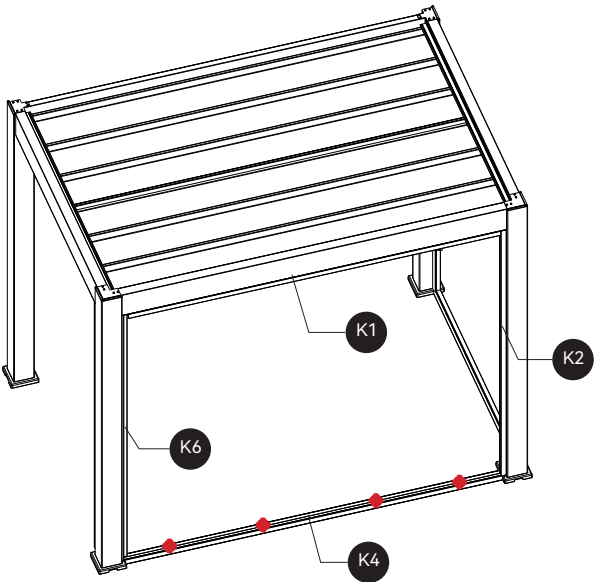


S5	 4x16	12
----	---	----

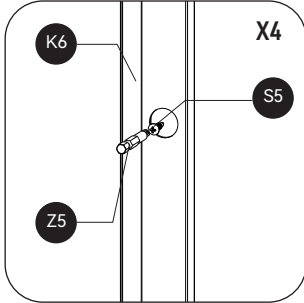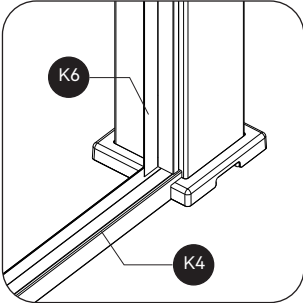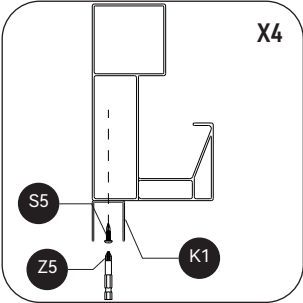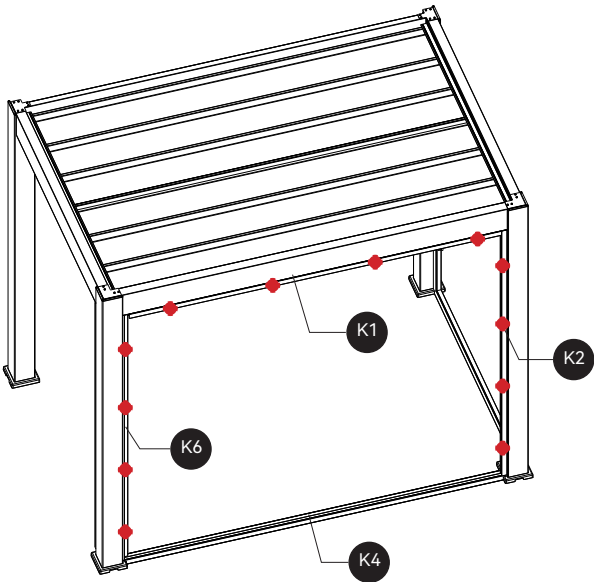

Combination A+B

Install the front mounting to complete the framing of the other two walls, need to pay attention to the location of the bottom beam to prevent screws from striking the gutters.

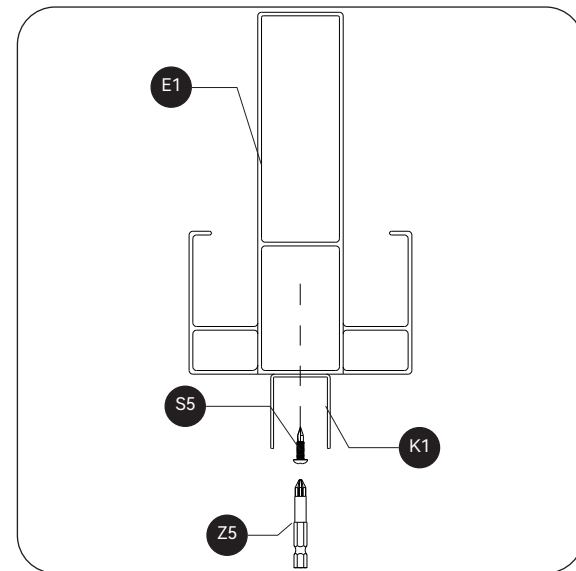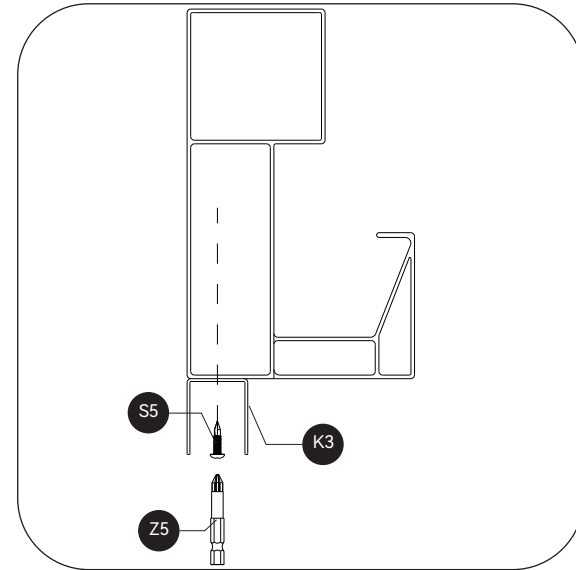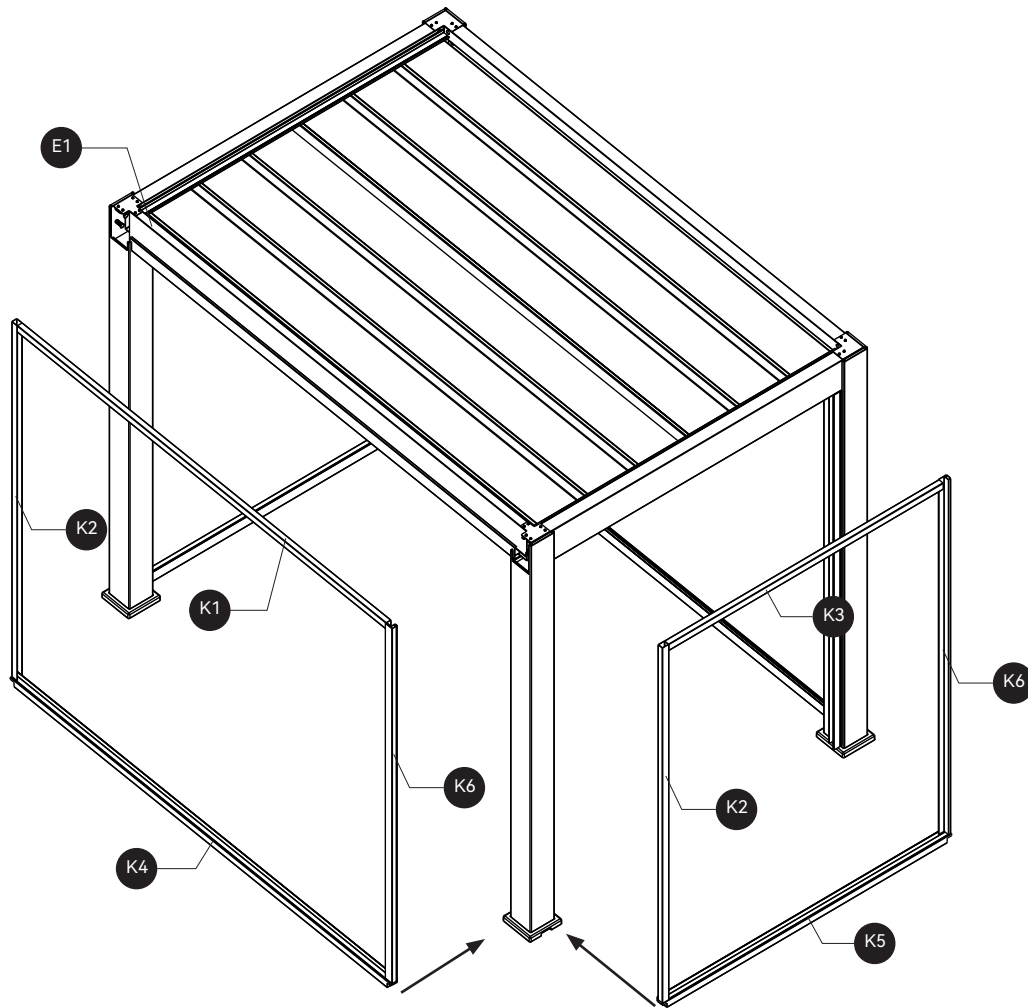

Combination A+B

S5



8





After frame assembly, install the WPC boards as shown below.

a. Insert L1 diagonally into K2.



b. Install the remaining WPC boards (all L1 type) sequentially.

c. The final board is L2. After the installation, cover K6 with K7 and secure it with screws.

Note: The boards interlock via tongue-and-groove joints.



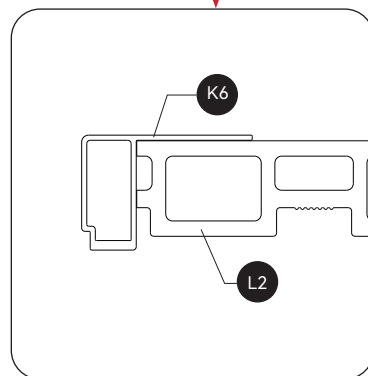
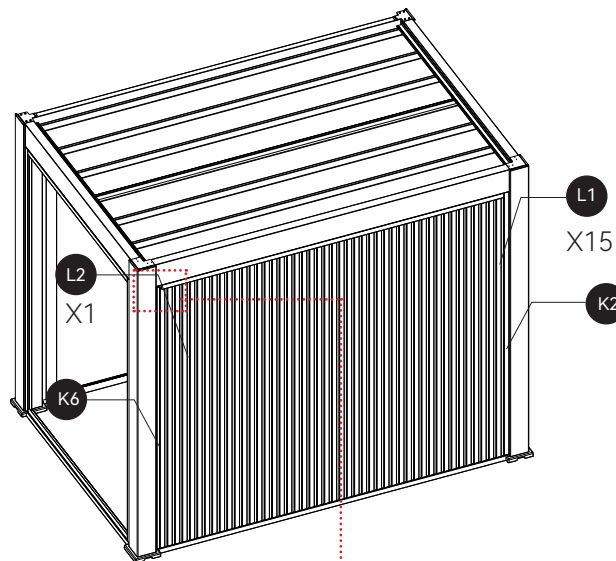
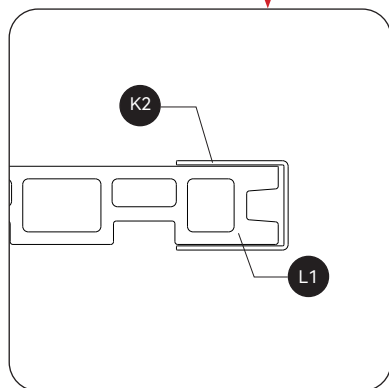
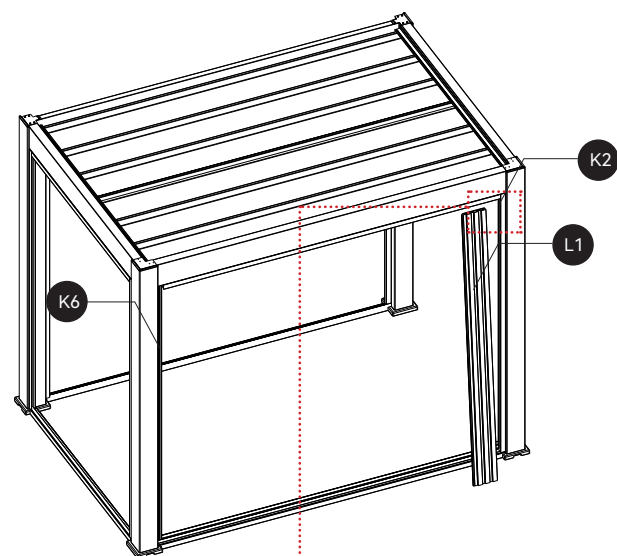


All installation steps are identical.


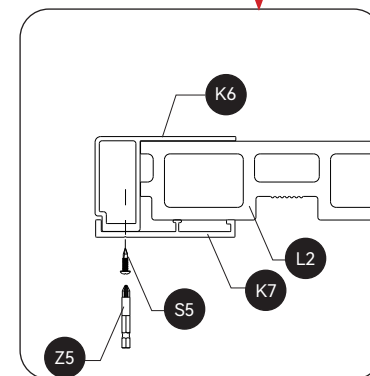
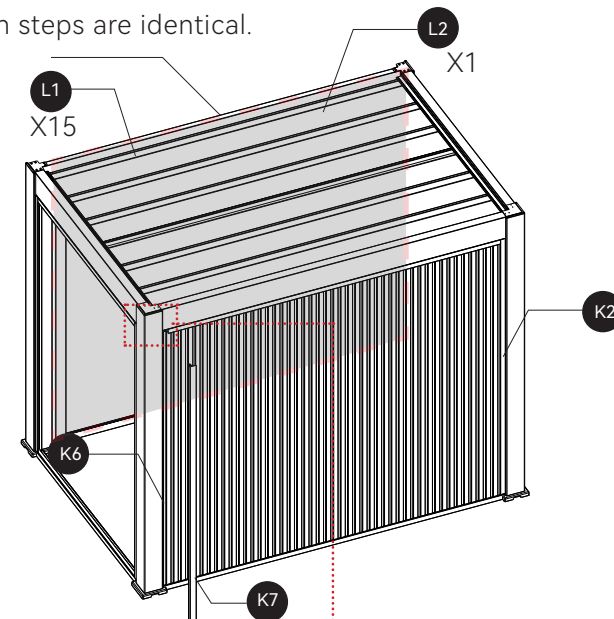




Combination A+B

S5	 4x16	4
----	---	---

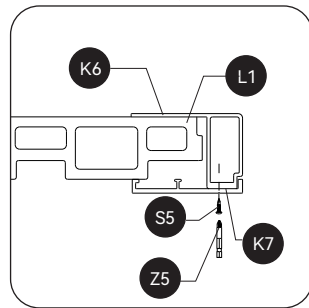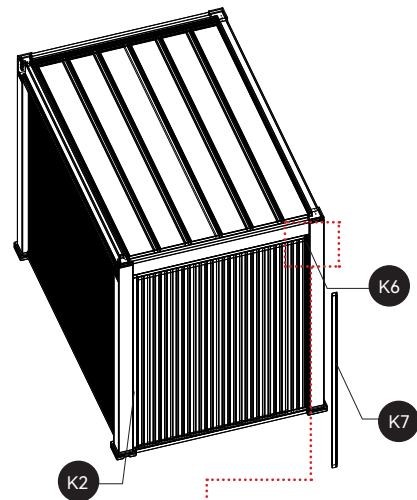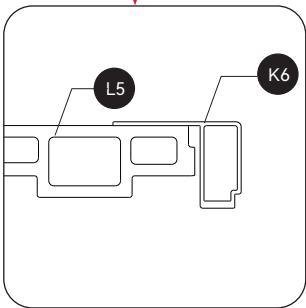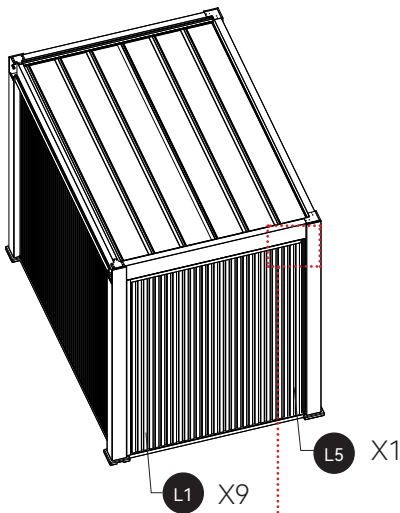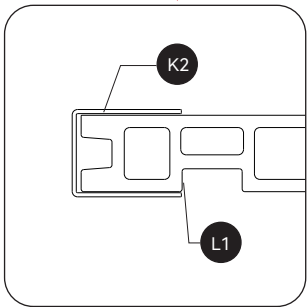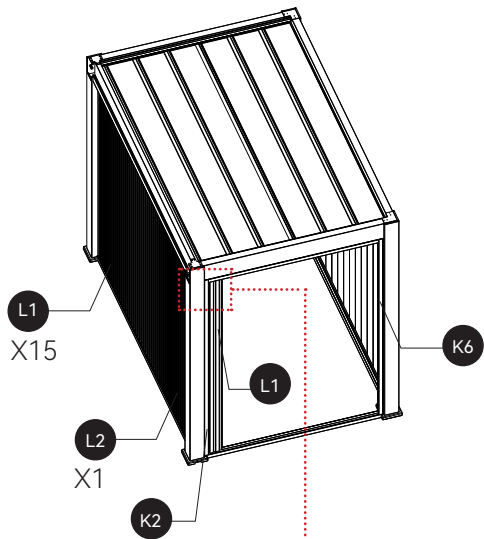

Combination A+B

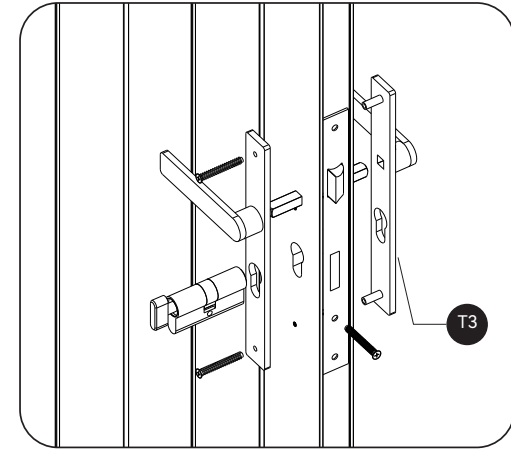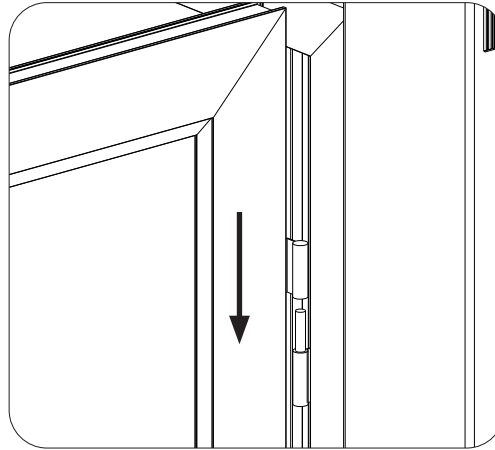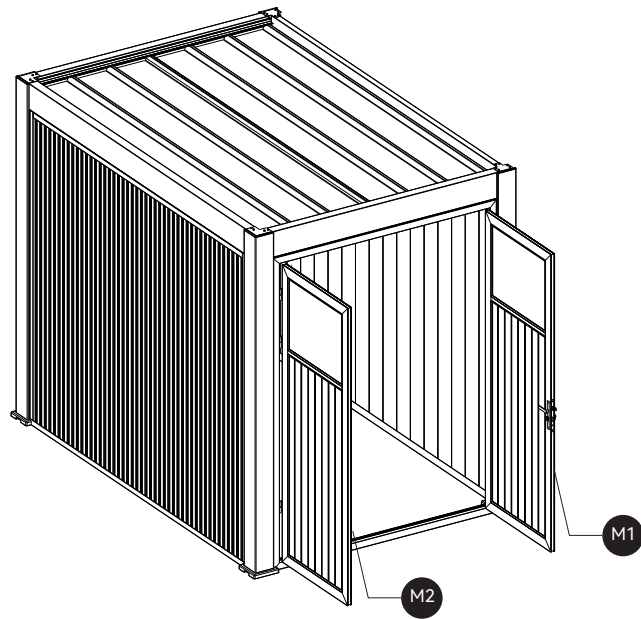

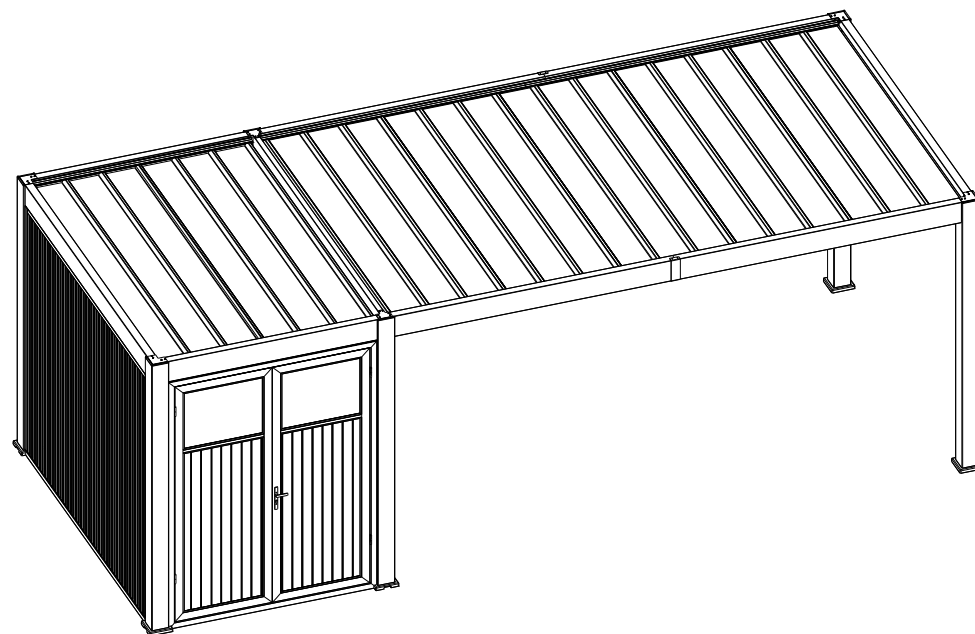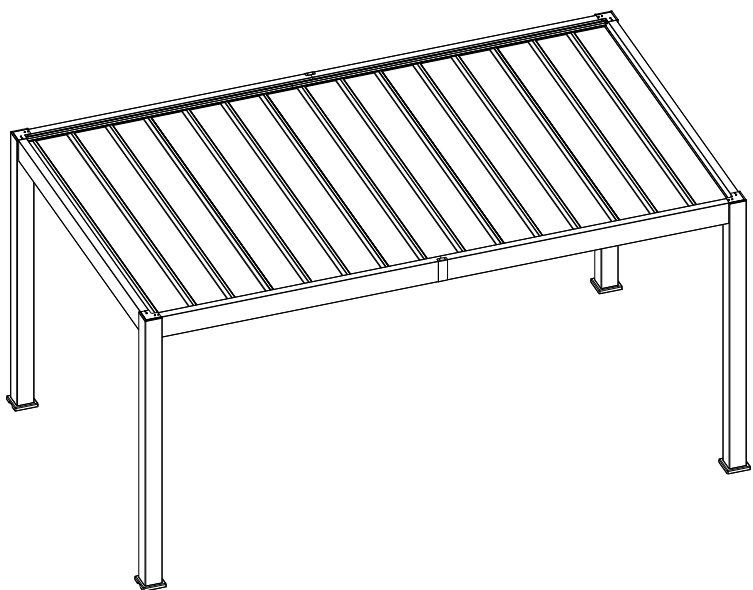

CARPORT + STORAGE