


Modular Raised Garden Bed 200cm X 100cm X 41cm

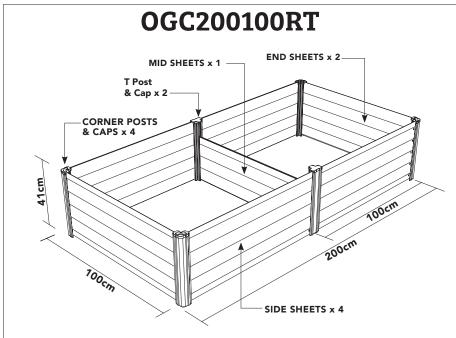



PART NUMBER		QTY	CHECK
P. Control of the Con	Side Sheet	4	
P. C. S. C.	End Sheet	2	
	Mid Sheet	1	
	Corner Post & Cap	4	
	T Post & Cap	2	

FIRST STEPS

Using safety gloves, unpack your carton. Check off the parts using the correct packing list.

IMPORTANT Install your garden bed on a flat/even surface to avoid leakages and maintain an even weight distribution. Incorrect installation will void the warranty.


INSTRUCTIONS

When assembling, most parts should slide together with minimal effort. Use a rubber mallet to gently tap components into position.

Any questions? See videos or call us 1800 029 701.

SLIDE SHEETS INTO POSTS

Organic Garden Co garden beds use the SNAPTiTE Assembly System. Ensure that the lugs in the steel sheet click into the posts correctly, see below diagram.

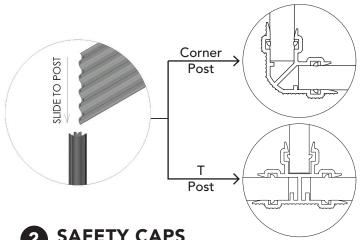

SAFETY CAPS

Clip on the safety caps to each post Use a mallet to tap into place if necessary.

