

For construction in non-cyclonic areas
Wind rating: N2 as per AS4055-2012.
If you require a higher wind rating please contact
us: admin@absco.com.au or 1800 029 701

When laying concrete slab, ensure there is a rebated edge. 75mm wide x 25mm tall to the sides and rear, *the front is 105mm wide to allow for the track.



**DOWNLOAD
OUR APP FOR
ASSEMBLY
VIDEOS**



LEAVE A REVIEW

Tell us about your experience and
receive a \$20 Coles Gift Card.
Visit www.absco.sheds.com.au/review

GENERAL INSTRUCTIONS

- Before commencing any assembly, read through these instructions in detail to gain a thorough understanding of assembly methods and associated details.
- Unpack the carton and carefully identify and check off all the parts against the parts described and illustrated on "COMPONENTS PACKING LIST" pages.

SITE PREPARATION

- The site for the shed must be level. An uneven surface may result in misalignment of parts.
- The shed shall be erected on top of a reinforced concrete slab and anchored down appropriately illustrated on "FINAL CONSTRUCTION" page.


TOOLS REQUIRED







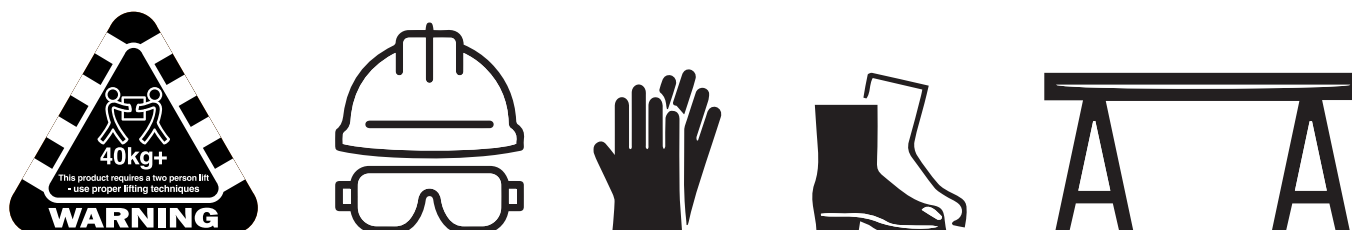

















SAFETY NOTES

- Some parts may have sharp edges. It is advisable to wear gloves when handling these items and safety glasses if drilling holes. Sensible shoes are highly recommended.
- Do not erect your shed in windy conditions.
- Ensure that the shed is securely anchored to a solid foundation immediately after construction is completed.
- It is highly recommended to erect the shed with two or more people.

RECOMMENDED



COMPONENT PACKING LIST























QTY	DESCRIPTION	PART #	CHK	QTY	DESCRIPTION	PART #	CHK
2	 SNAPTITE SHEET STRAIGHT 1915x773mm	SH43B		4	 SNAPTITE SHEET STRAIGHT 898x773mm	SH43G	
2	 SNAPTITE SHEET STRAIGHT 1915x773mm	SH43C		2	 SNAPTITE SHEET STRAIGHT 1785x773mm	SH30D	
1	 SNAPTITE SHEET LEFT ANGLE 1915x773mm	SHX4L		2	 SNAPTITE SHEET STRAIGHT 1740x773mm	SH43F	
1	 SNAPTITE SHEET RIGHT ANGLE 1915x773mm	SHX4R		2	 HAT SECTION 1496.5mm LONG	CO95GS	
1	INSTRUCTIONS & FITTINGS PACK					INSTP##30082E	
INSTP##30082E INSTRUCTIONS & FITTINGS PACK							
4	 DOOR ROLLER	OTCO22		8	 CHANNEL JOINER 200mm LONG	ZACSJ	
2	 C-HANDLE 32mm	FAST048		4	 M4 x 25mm PAN HEAD SCREW	FAST047	
2	 38x25mm DOOR STOP	FAST053		1	 SBS43E POP RIVET x100	PACK13	
2	 DOOR TRACK BRACKET 150x150x20mm	BKT260		1	BRUSH SEAL SELF ADHESIVE BACKING 3m ROLL	OTCO23	
1	INSTRUCTION MANUAL	IM		1	PSTKSGL SINGLE DOOR FITTINGS PACK		
PSTKSGL - SINGLE DOOR FITTINGS PACK							
1	 PADBOLT 115mm LONG	FAST006		1	 PADBOLT HASP	FAST007	
1	 8G x 3/8 SELF TAPPING SCREWS x 220	PACK220		1	 SCREW PACK 6	PACK6P	
1	 3mm DRILL BIT	DRILL		1	 PHILLIPS HEAD DRIVER BIT S2 PH2	FAST038	
PACK6P - SCREW PACK 6							
6	 SBS43E POP RIVET	FAST009		6	3/16" x 1/2" COUNTERSUNK SCREW & NUT	FAST004 FAST005	

Nominal sheet widths are shown. +/- 2mm is within tolerance.

COMPONENT PACKING LIST

Check off all components.

30082ECP CHANNEL SET


QTY	DESCRIPTION	PART #	CHK	QTY	DESCRIPTION	PART #	CHK
1	 CHANNEL 1496.5mm NOTCHED ONE END	55BL		1	 CHANNEL 1496.5mm NOTCHED ONE END	55BR	
1	 CHANNEL 1496.5mm NOTCHED ONE END	55FL		1	 CHANNEL 1496.5mm NOTCHED ONE END	55FR	
1	 CHANNEL 1496.5mm NOTCHED ONE END	55GL		1	 CHANNEL 1496.5mm NOTCHED ONE END	55GR	
1	 CHANNEL 1496.5mm STRAIGHT	55HL		1	 CHANNEL 1496.5mm STRAIGHT	55HR	
2	 CHANNEL 1496.5mm STRAIGHT	81AL		2	 CHANNEL 1496.5mm STRAIGHT	81AR	
1	 CHANNEL 1496.5mm NOTCHED ONE END	81BL		1	 CHANNEL 1496.5mm NOTCHED ONE END	81BR	
1	 CHANNEL 1416mm STRAIGHT	996L		1	 CHANNEL 1416mm STRAIGHT	996R	
4	 CHANNEL 773mm STRAIGHT	58C		2	 CHANNEL 1785mm NOTCHED BOTH ENDS	80C	
4	 CHANNEL 1740mm STRAIGHT	58L		2	 CHANNEL 773mm STRAIGHT	81J	
2	 CHANNEL 786mm STRAIGHT	61B		1	 CHANNEL 393mm STRAIGHT	13A	
2	 CHANNEL 1445mm STRAIGHT	79D		2	 LIP 898mm	88K	

SNAPTITE ASSEMBLY GUIDE

The Snaptite Assembly System locks end channels to all roof and wall sheets without the need for tools and fasteners.

To assemble each panel, the perimeter channels are secured to the top and bottom of each panel. Gently tap the channel over the SNAPTITE lugs on the sheet, working along the sheet.

Each perimeter channel must finish flush with the edges of the sheets. Simply tap the channel along the sheets until each end is neatly flush. If you need to remove channels from the panels, slide it off from the side.

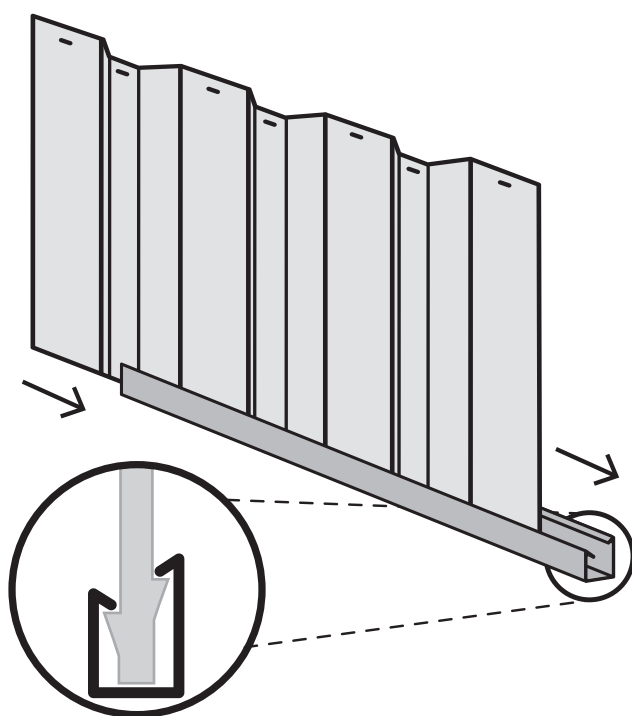

SNAPTITE
World's Easiest Assembly System
UNIQUE PATENTED SYSTEM

Channel locks the shed panel into position without the need for screws!


FASTENING SYMBOLS

SNAPTITE

Secure channel to sheeting by SNAPTITE fastening method.



Join components together with one screw at this location only, as some channels have extra holes that are not required for this model of shed.



Do not join components together at this location yet, as the screws may obstruct further assembly of the other components.



Join components together by pre-drilling the holes first. Use one component as template to mark where the holes are and drill with a 3mm drill bit.



3mm pop rivet



4mm nut and bolt set.


Guide on Joining Spliced Channels

The text marked on all parts must be shown on the same side as each other



Step 1.

Position the channels and the CSJ joiner so the centre of the CSJ is in line with the end of each channel to be joined together.

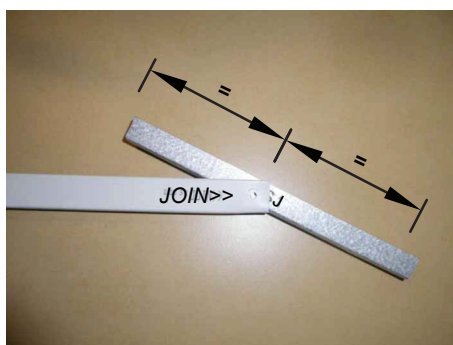


Step 2.

Join the first channel to the CSJ by inserting the centre of the CSJ, on an angle, to the end of the channel where the JOIN>> text is marked.




Push down one side of the CSJ until you hear a 'click'.

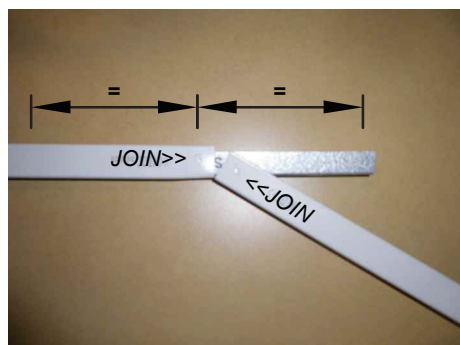

Step 3.


Join the second channel to the CSJ by positioning the <<JOIN of the channel at the centre of the CSJ, on an angle. Push the CSJ into the channel until you hear a 'click'.

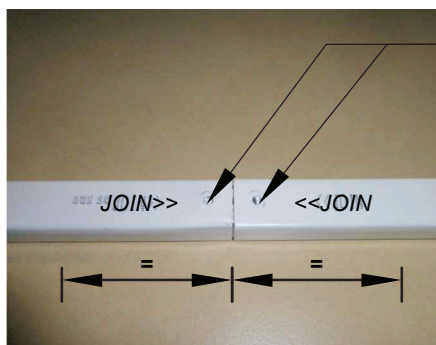


Finished Channel.

The joined channels should now look like the picture with the CSJ positioned equally inside of the joined channels.

Drill out holes with 3mm drill bit in CSJ to match the holes in channel. Drilling of screws on the joined channels is being done after sheets are locked on the spliced channels.

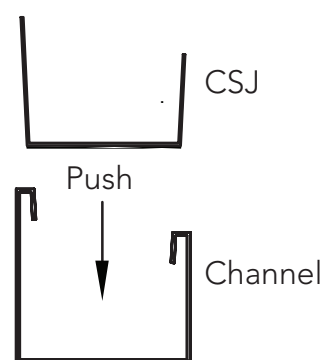

...

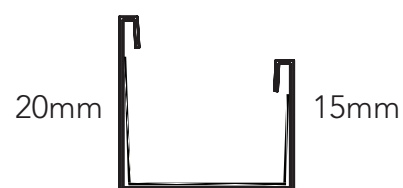


Finished Spliced Channel

PRE-ASSEMBLY OF SPLICED CHANNELS

Join together 16x channel sections using 8x channel joiners (Part CSJ)


NOTE: Some channels may have holes in them - You will need to redrill holes where CSJ joining channel covers them.

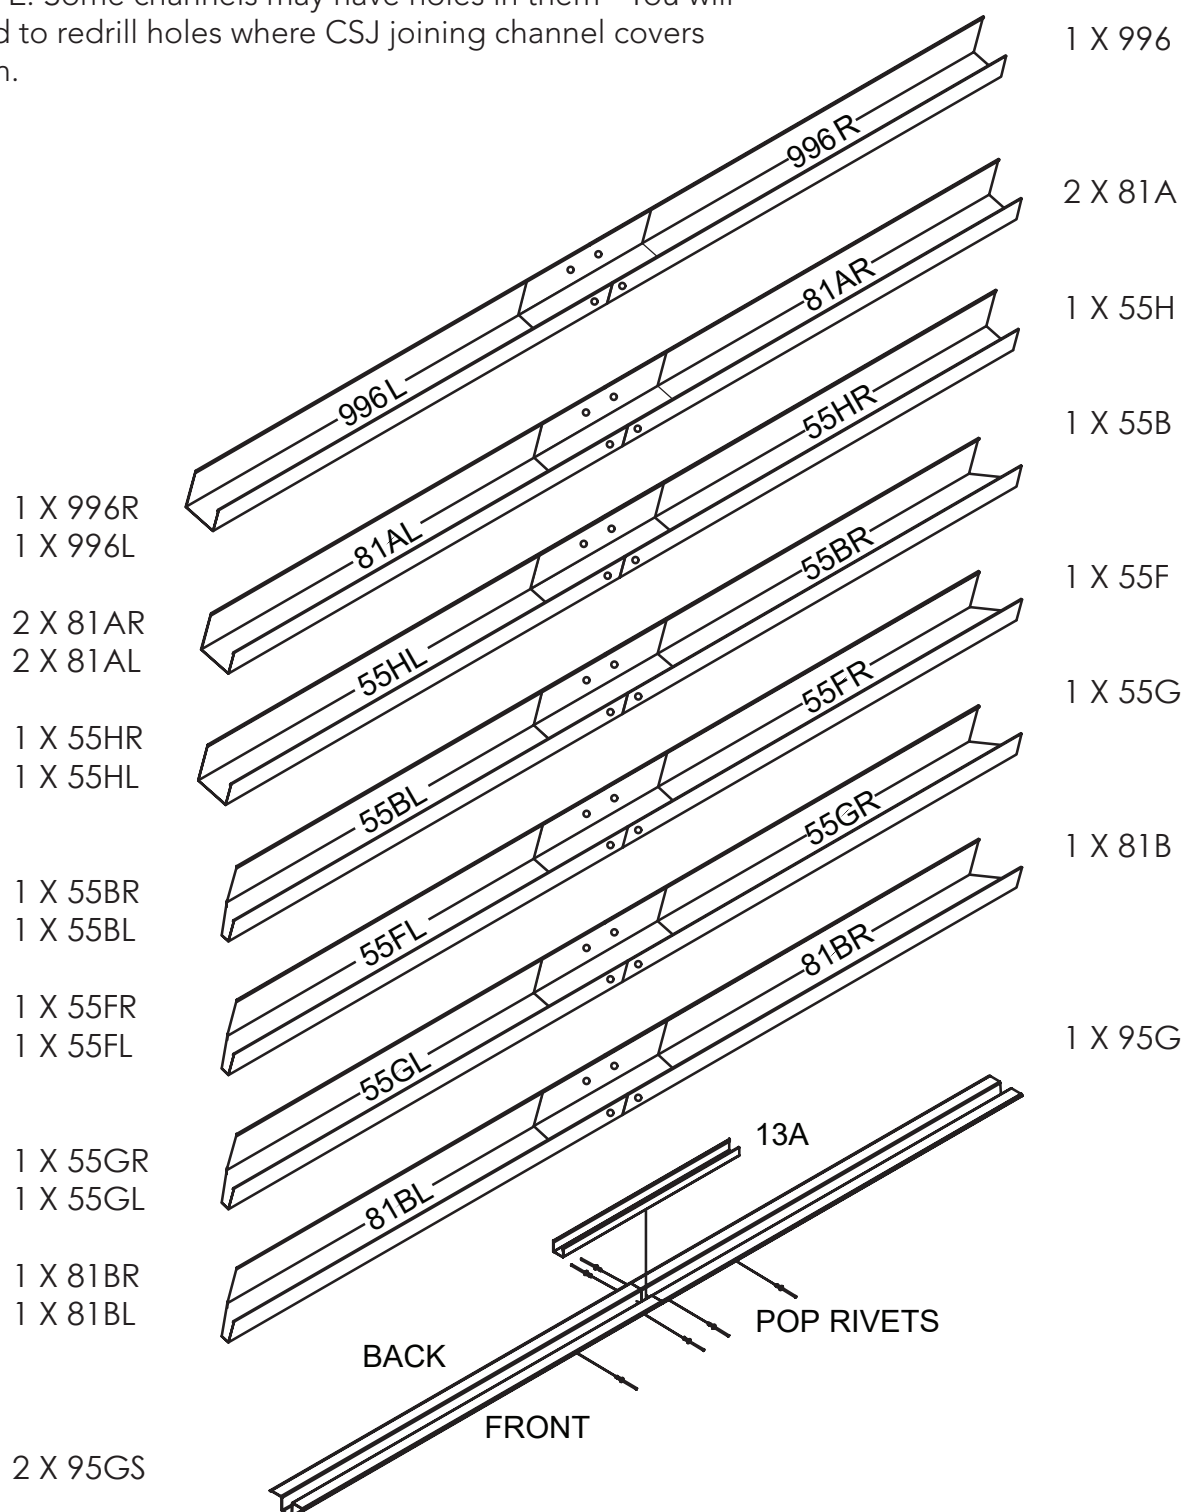

NOTE: Channels 55G, 55F, & 55H are best secured together using pop rivets through the 15mm high (front) edge. This minimizes interference with the sliding doors


REAR PANEL ASSEMBLY

1x required

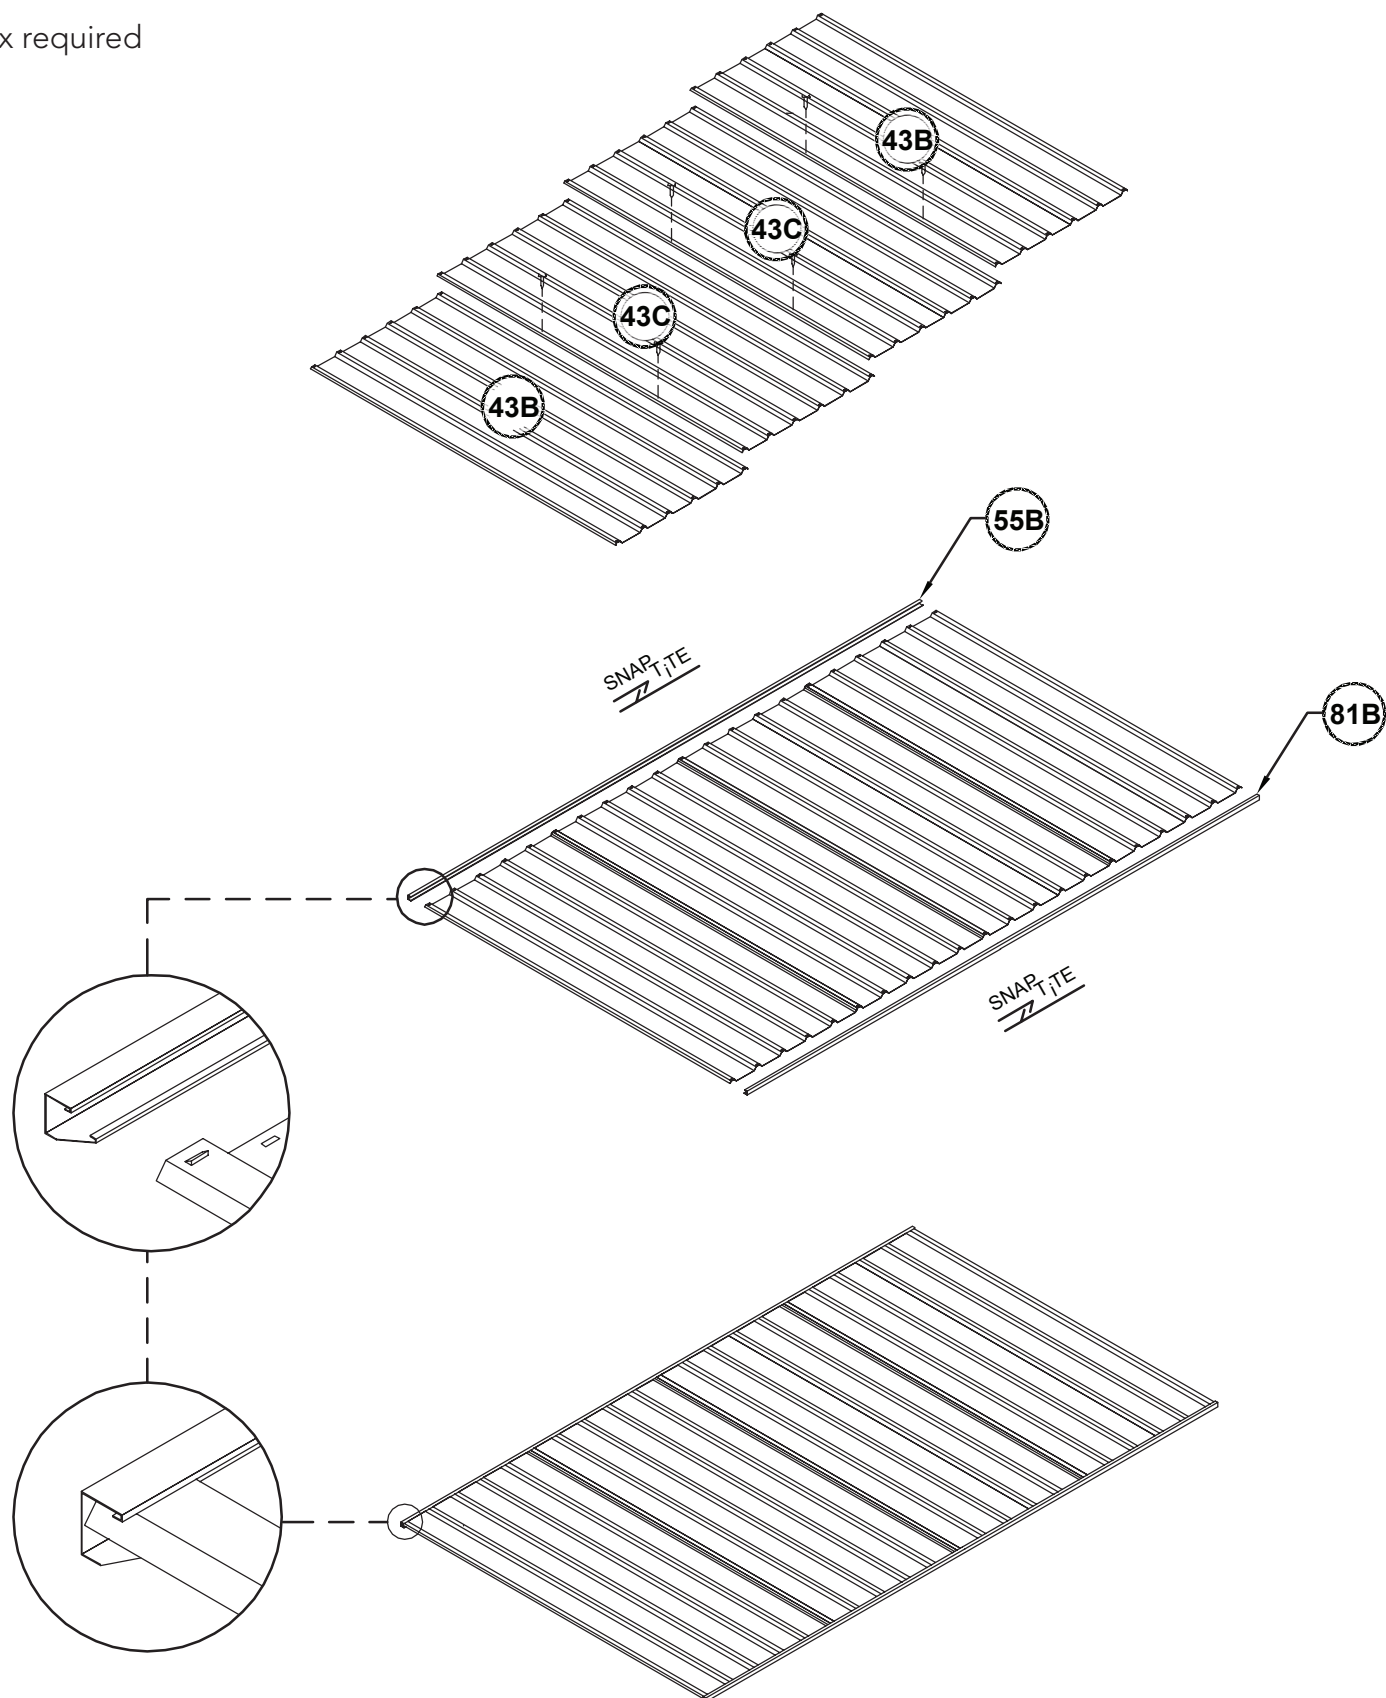


SIDE PANEL ASSEMBLY

1x Right side panel.
1x Left side panel.

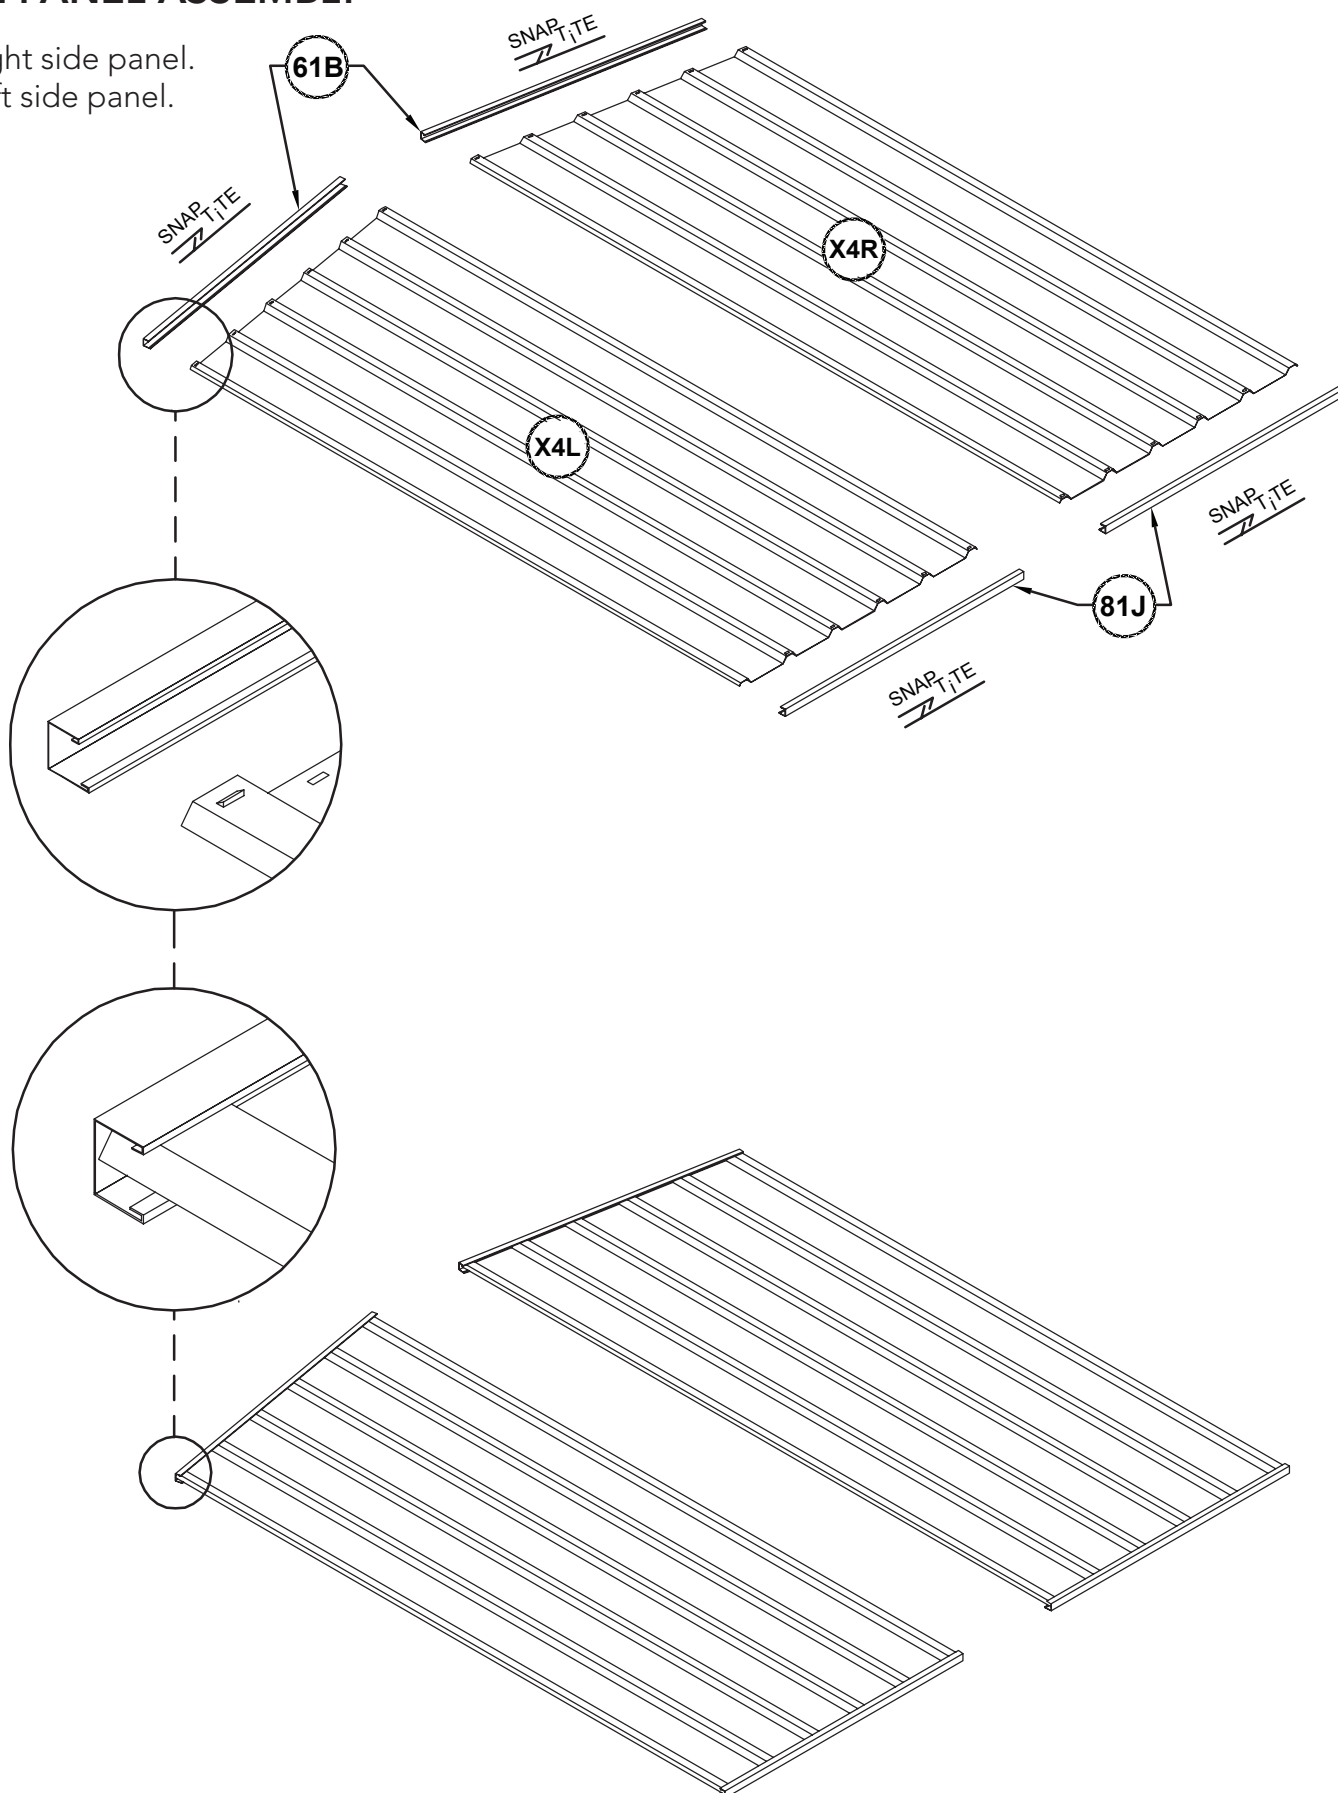

ROOF PANEL ASSEMBLY

1x required

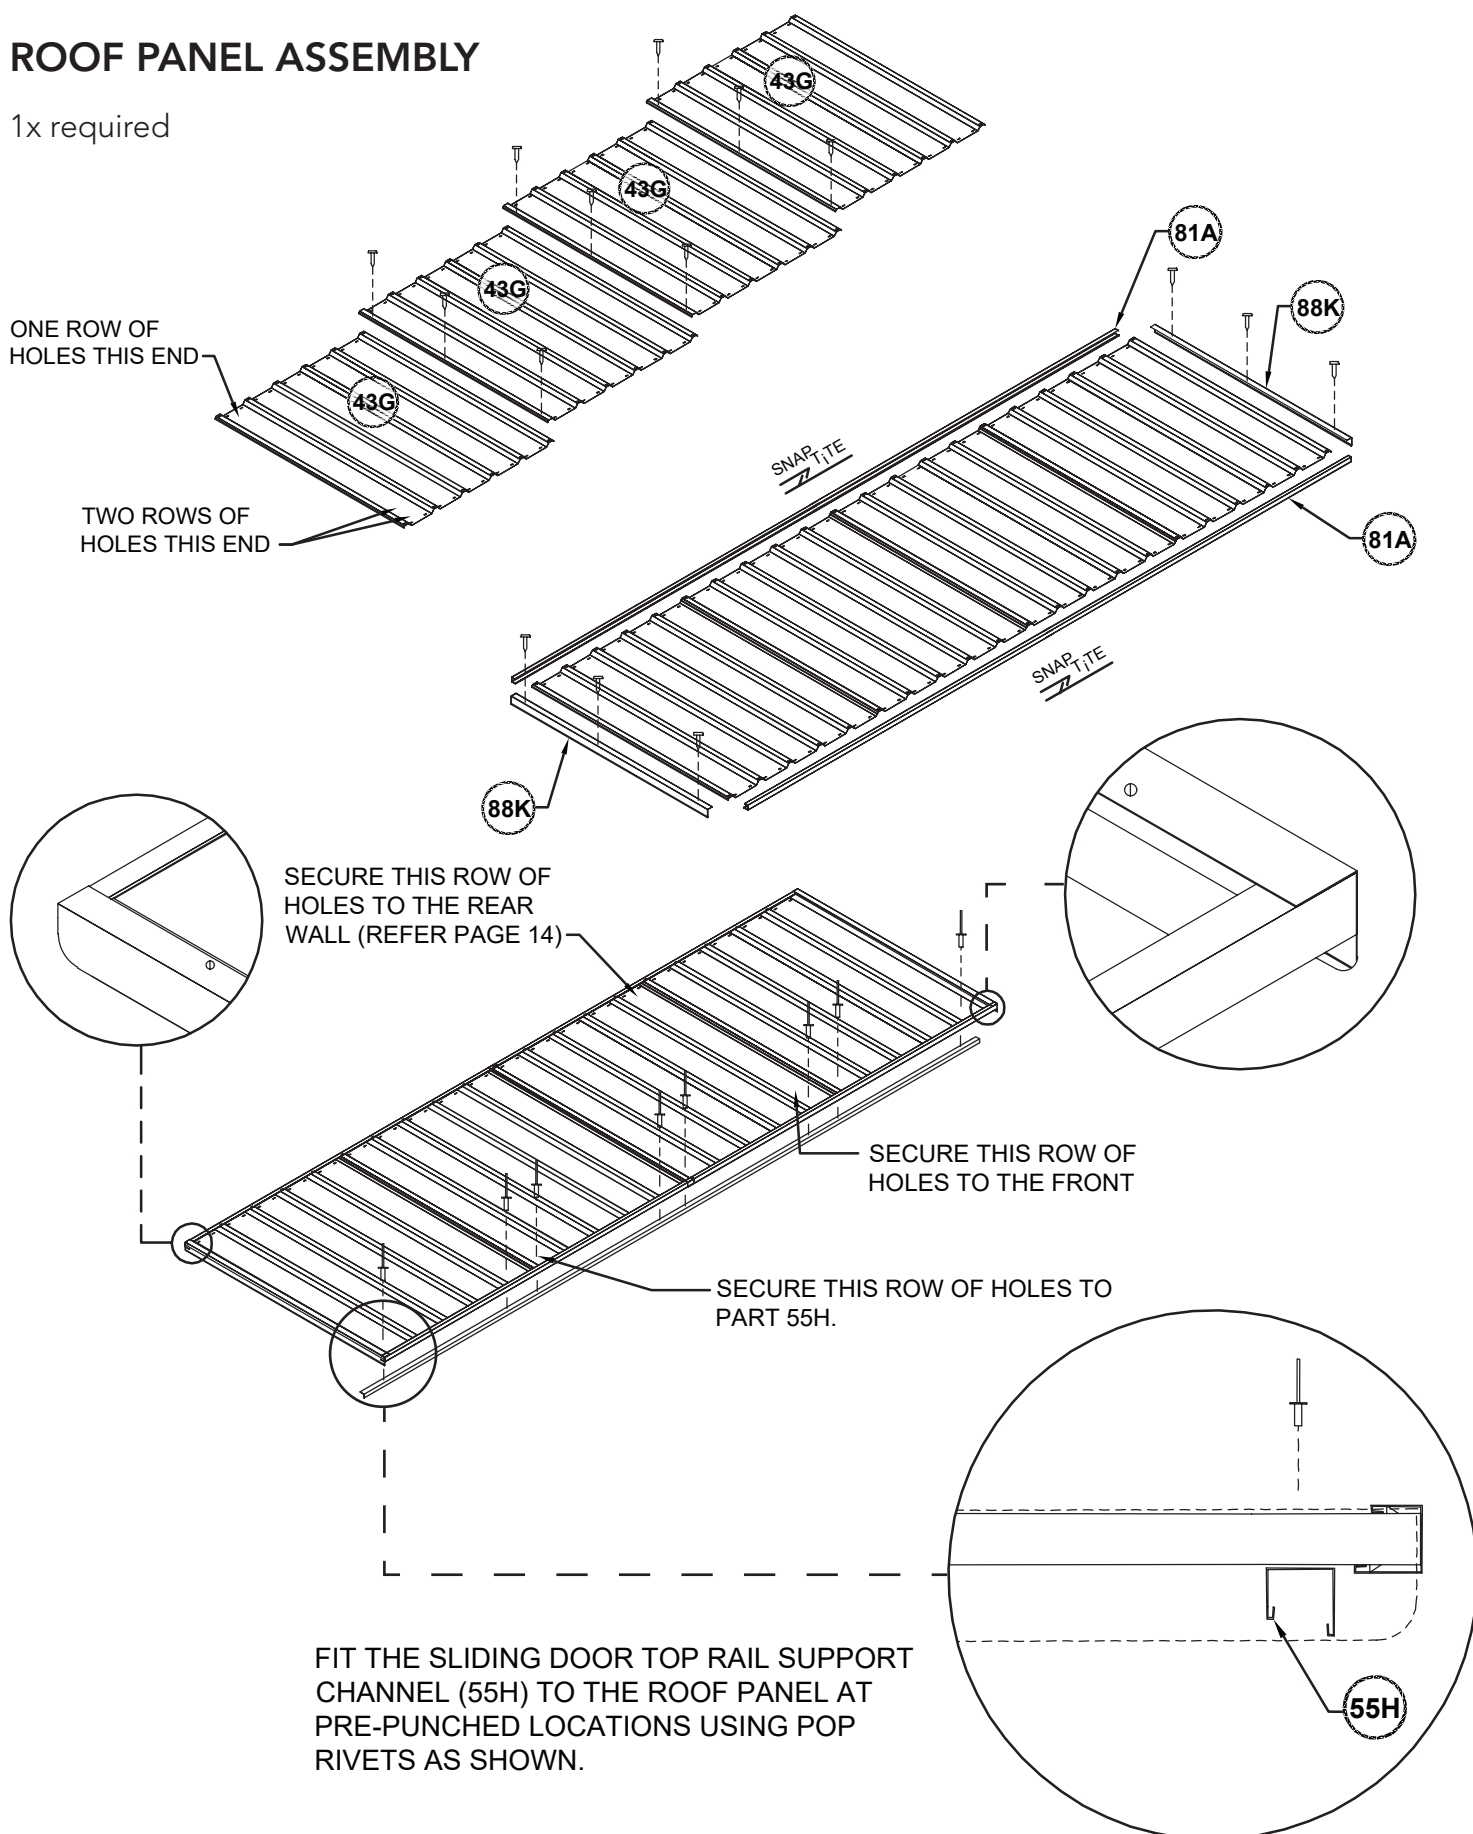



ABSCO SHEDS


So Tough. Too Easy.

ABSCO EZISLIDER SHED MODEL: 30082EK



3.00mW x 0.78mD x 1.80mH, 1.95mH

FRONT PANEL ASSEMBLY


1x required

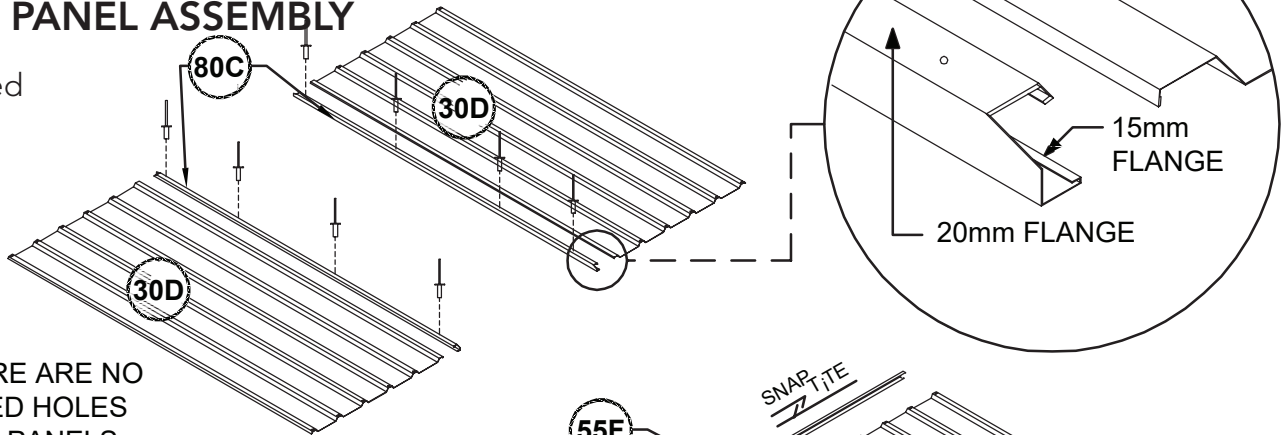

NOTE: THERE ARE NO
PRE-DRILLED HOLES
FOR THESE PANELS.
PLEASE PRE-DRILL
BEFORE ASSEMBLY.

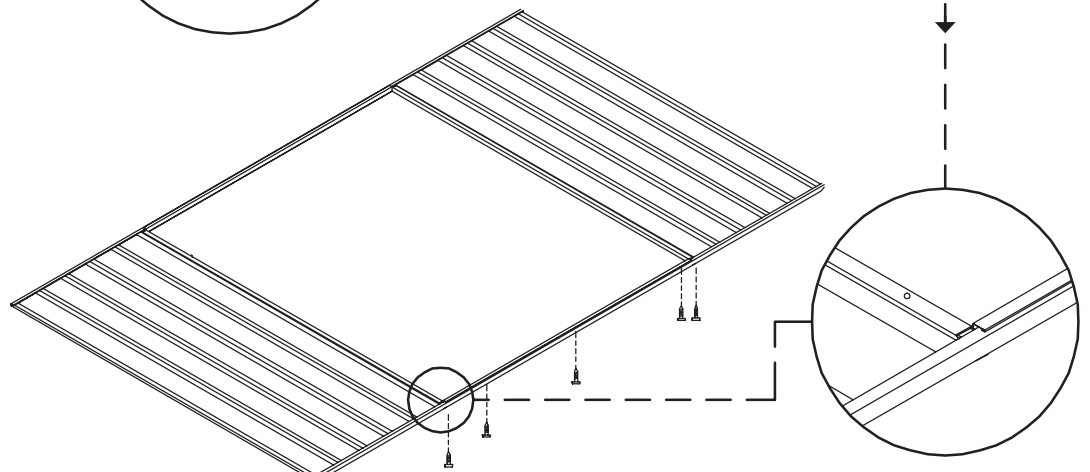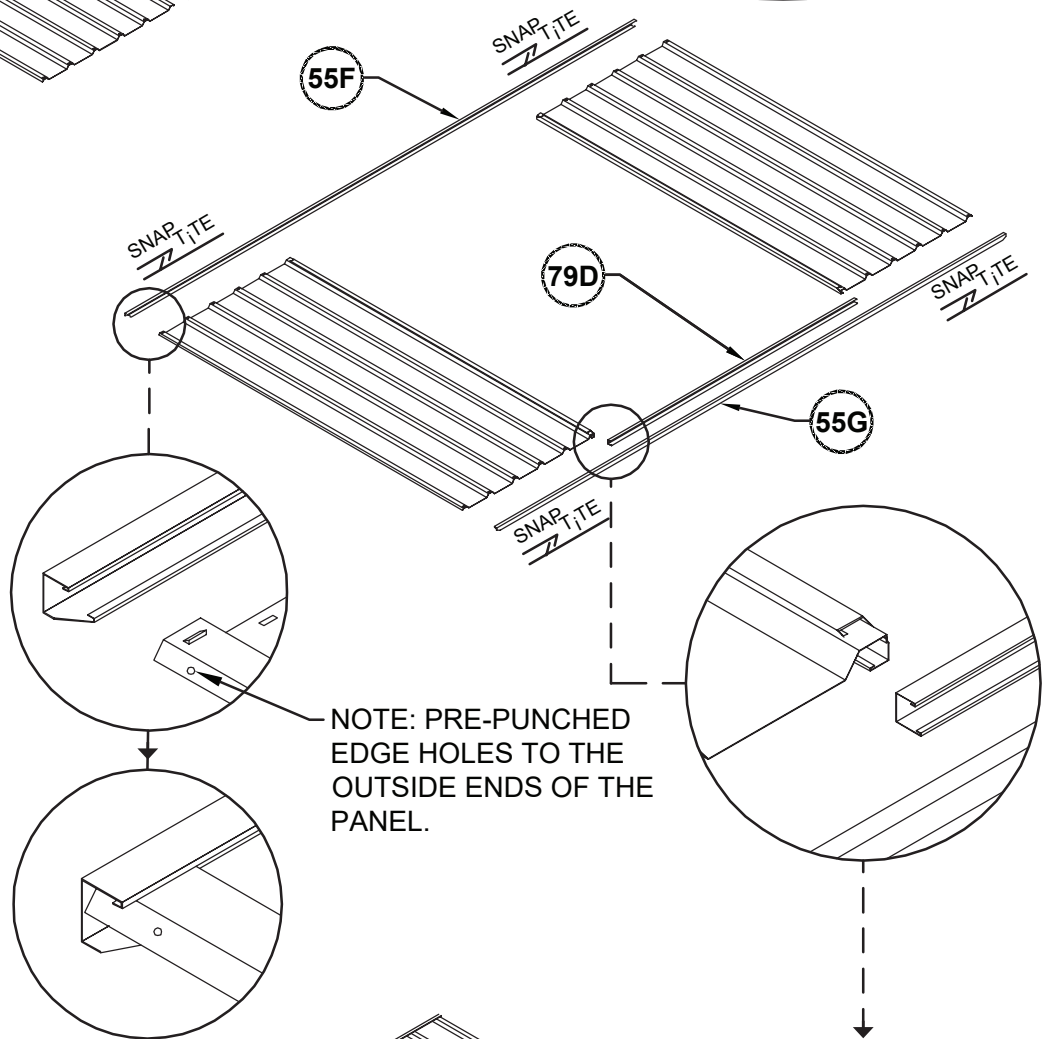

FRONT PANEL ASSEMBLY

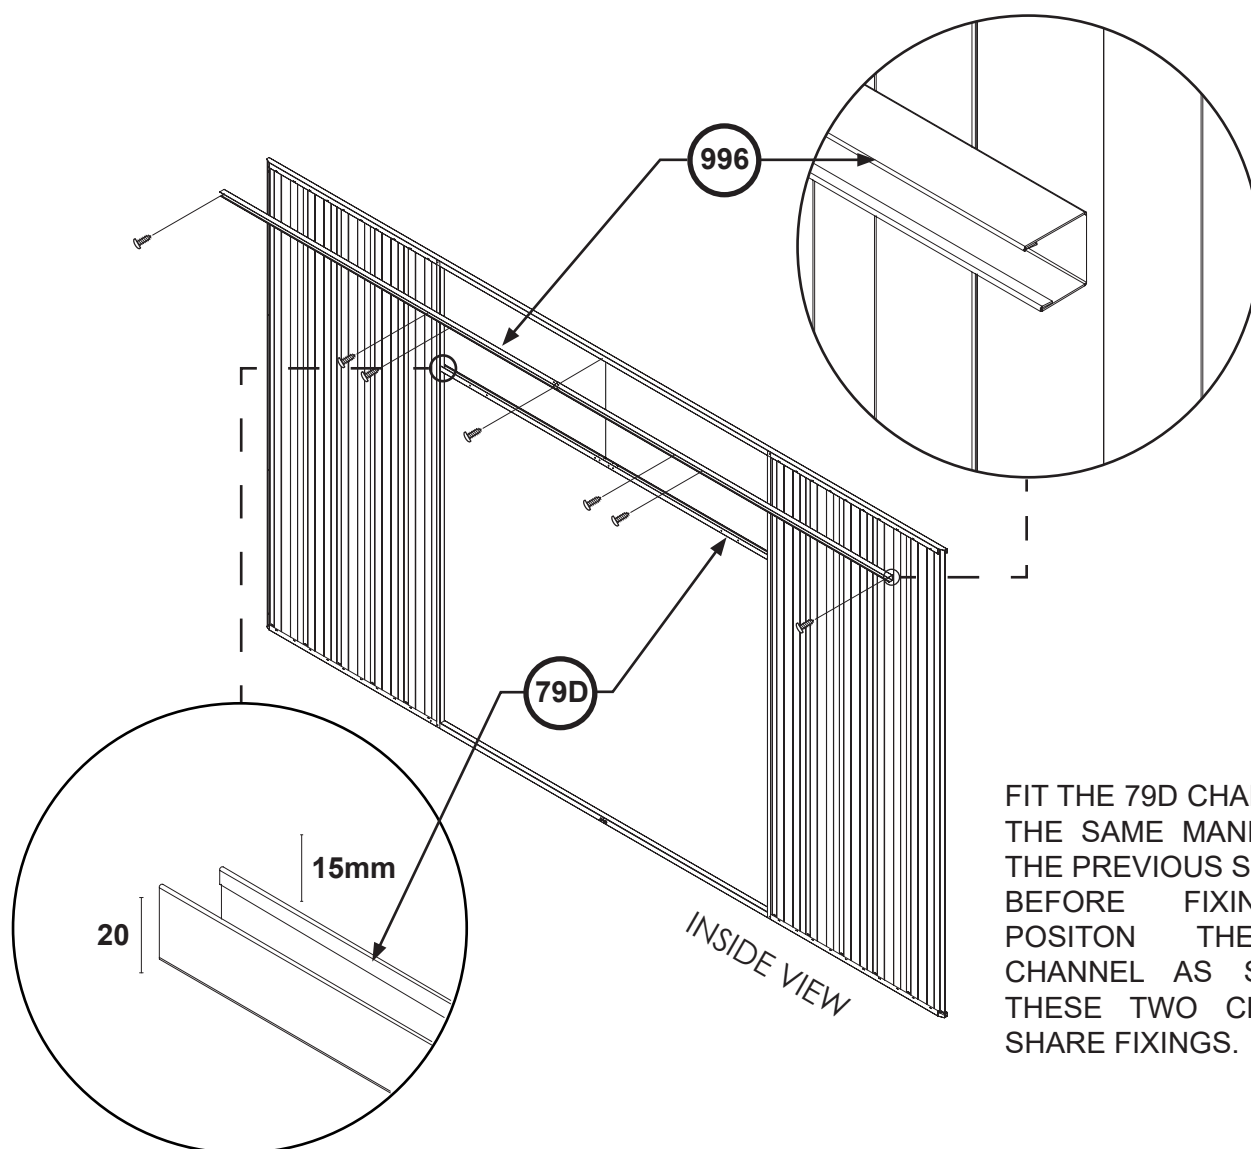


FIT THE 79D CHANNEL IN THE SAME MANNER AS THE PREVIOUS STEP. BEFORE FIXING IT POSITON THE 996 CHANNEL AS SHOWN, THESE TWO CHANNEL SHARE FIXINGS.

DOOR PANEL ASSEMBLY

2x required


NOTE: THERE ARE NO PRE-DRILLED HOLES FOR THESE PANELS. PLEASE PRE-DRILL BEFORE ASSEMBLY.

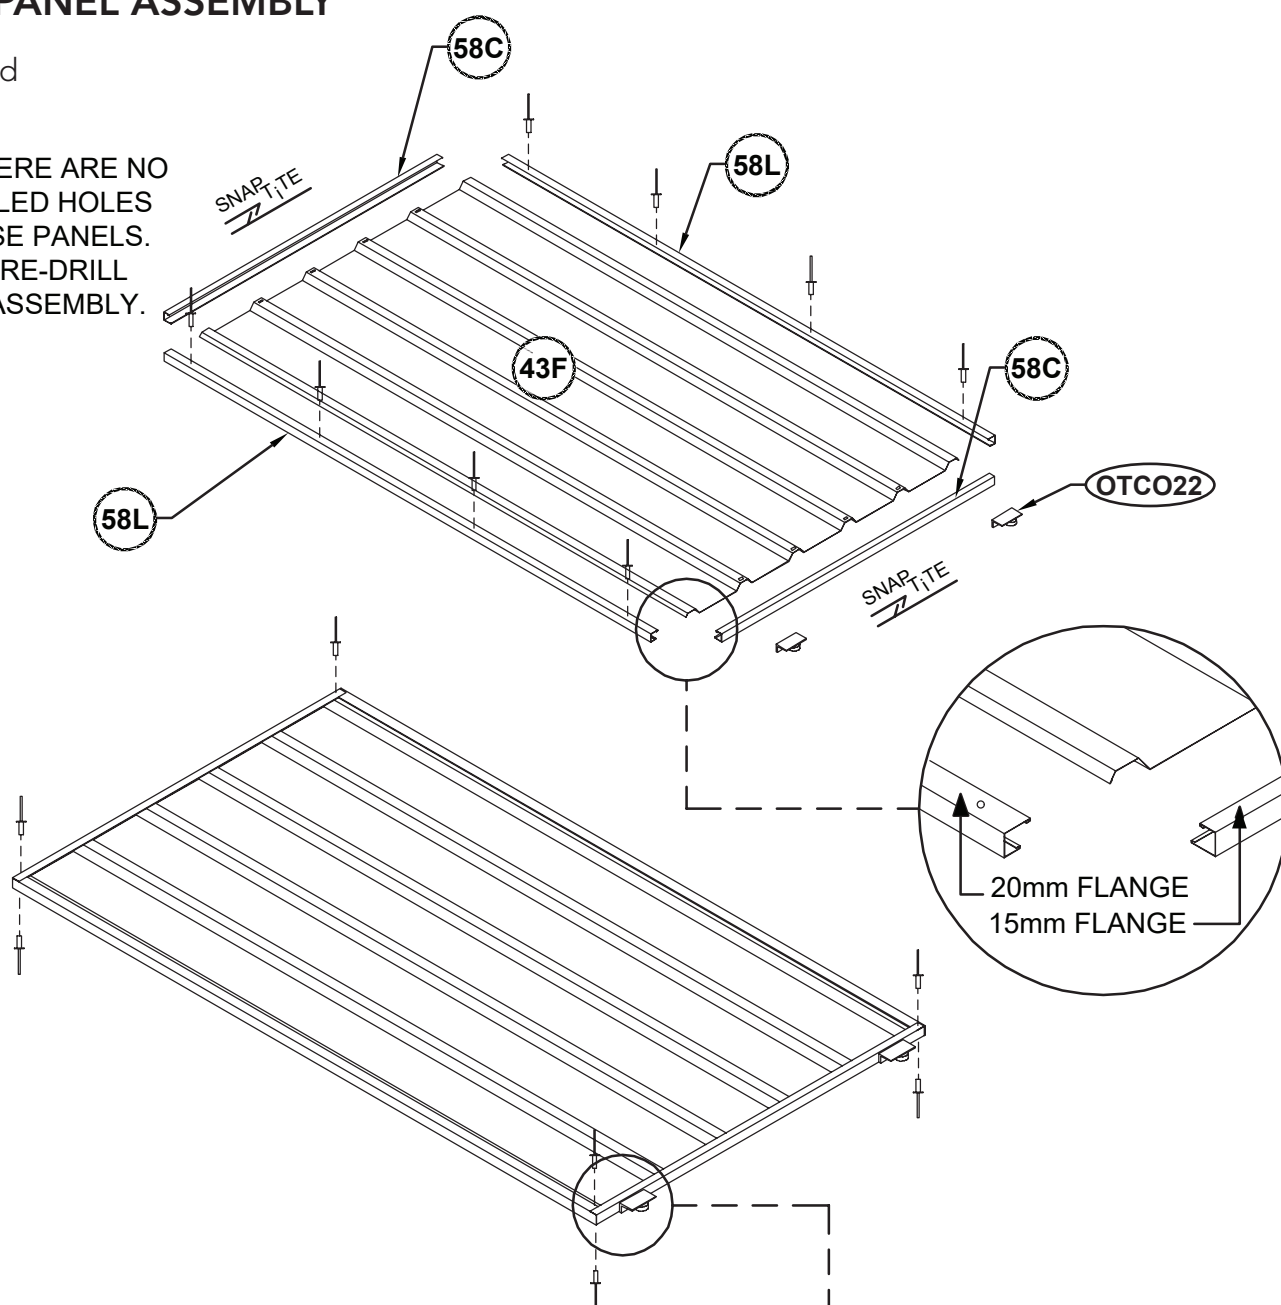


WHEEL ASSEMBLY HEIGHT ADJUSTMENT SCREW

WHEN INSTALLING THE DOORS, USE THIS SCREW TO ADJUST THE HEIGHT, AND ALSO LEVEL THE DOORS SO THEY BUTT UP FLUSH TO EACH OTHER.

NOTE: THE LOCATING DISTANCE FOR THE ROLLER CARRIAGE OF 50mm NEEDS TO BE ACCURATE SO AS TO ACHIEVE THE DOOR STOPPING DISTANCE OF 97mm AS NOTED ON PAGE 16.

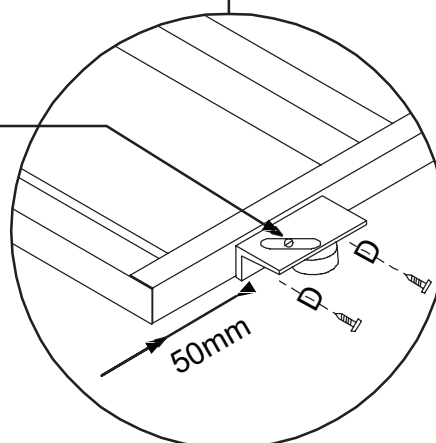

DOOR PANEL ASSEMBLY

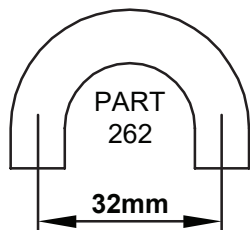


CHECK THAT THE HOLE CENTRE OF EACH DOOR HANDLE IS 32mm AS SHOWN. (SOME DOOR HANDLES MAY DIFFER)

MARK OUT THE HOLE CENTRES HALF WAY UP EACH DOOR. IT IS IMPORTANT TO USE A GREAT DEAL OF ACCURACY WHEN MARKING AND DRILLING THESE HOLES.


ENSURE THAT YOU MATCH THE DOORS UP AS A PAIR WHEN FITTING THE HANDLES.

CAREFULLY DRILL 4mm OR 5/32" HOLES THROUGH BOTH SIDES OF THE CHANNEL AND SHEET AS SHOWN.

FIT THE DOOR HANDLES USING THE 25mm BOLTS SUPPLIED.

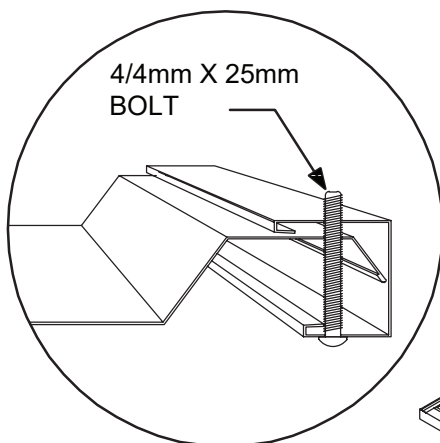

A NORMAL PADLOCK CAN BE INSERTED THROUGH BOTH DOOR HANDLES FOR ADDED SECURITY IF DESIRED.

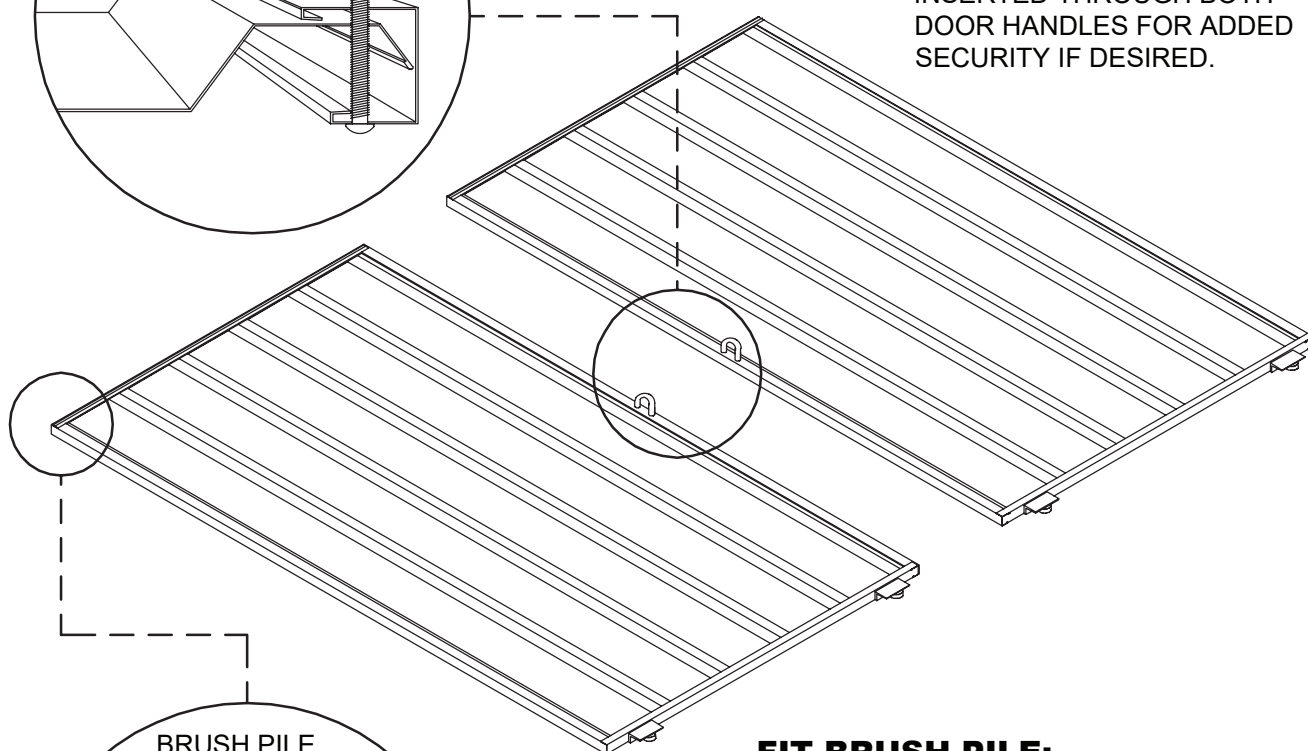

FIT BRUSH PILE:


THE BRUSH PILE STRIP IS USED TO REDUCE NOISE WHEN SLIDING THE DOORS.

CUT THE ROLL OF BRUSH PILE SUPPLIED INTO FOUR PIECES ABOUT 750mm LONG.

THE SELF ADHESIVE STRIPS ARE TO BE BONDED TO THE TOP OF THE DOORS ONLY, ON BOTH SIDES AS SHOWN.

ENSURE THAT SURFACES TO BE ADHERED TO ARE CLEAN AND DRY.


PEEL OFF THE BACKING TAPE AND PRESS FIRMLY IN POSITION FOR A PERMANENT BOND.

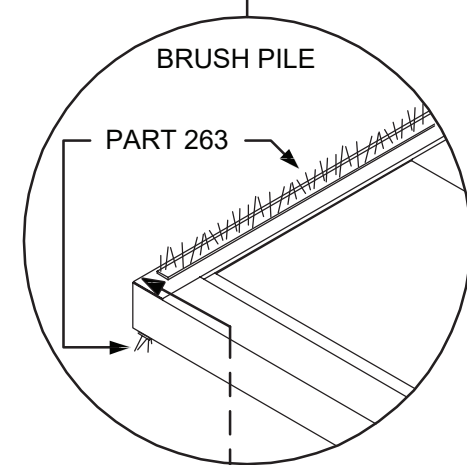

POSITION THE STRIPS TO THE VERY TOP EDGE OF THE DOOR.




PANEL CONSTRUCTION

NOTE: Take care to ensure that all wall panels are not upside down. The top channels of each panel are pre-punched for attaching roof sheeting. The base channels are not pre-punched.

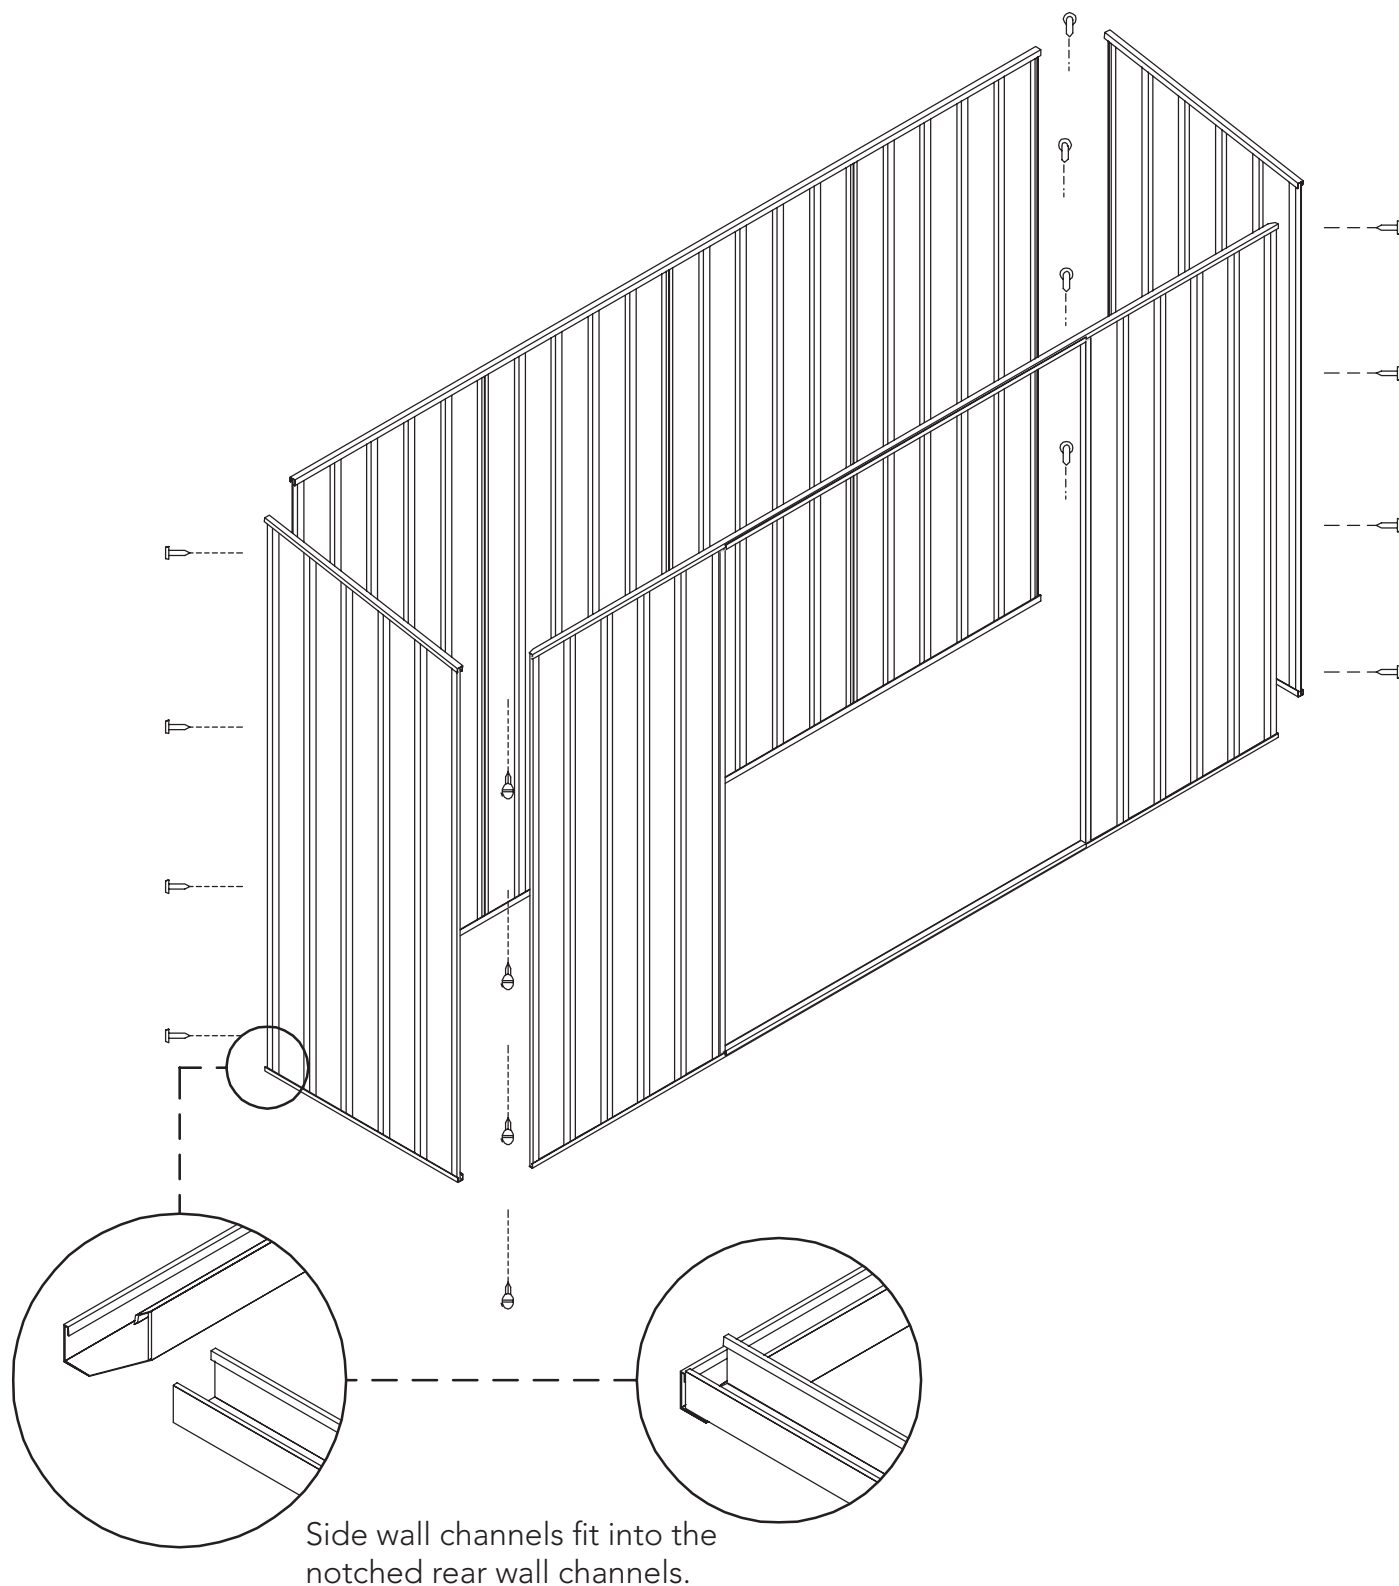

FINAL CONSTRUCTION




ANCHORING OF SHED

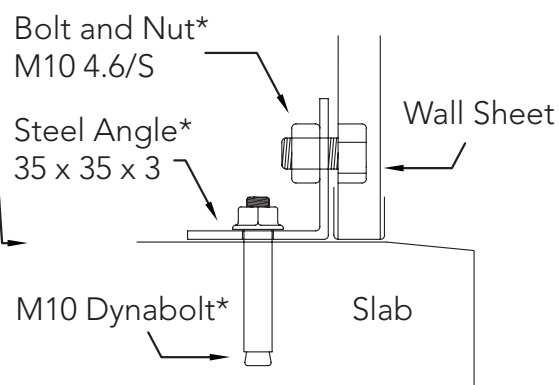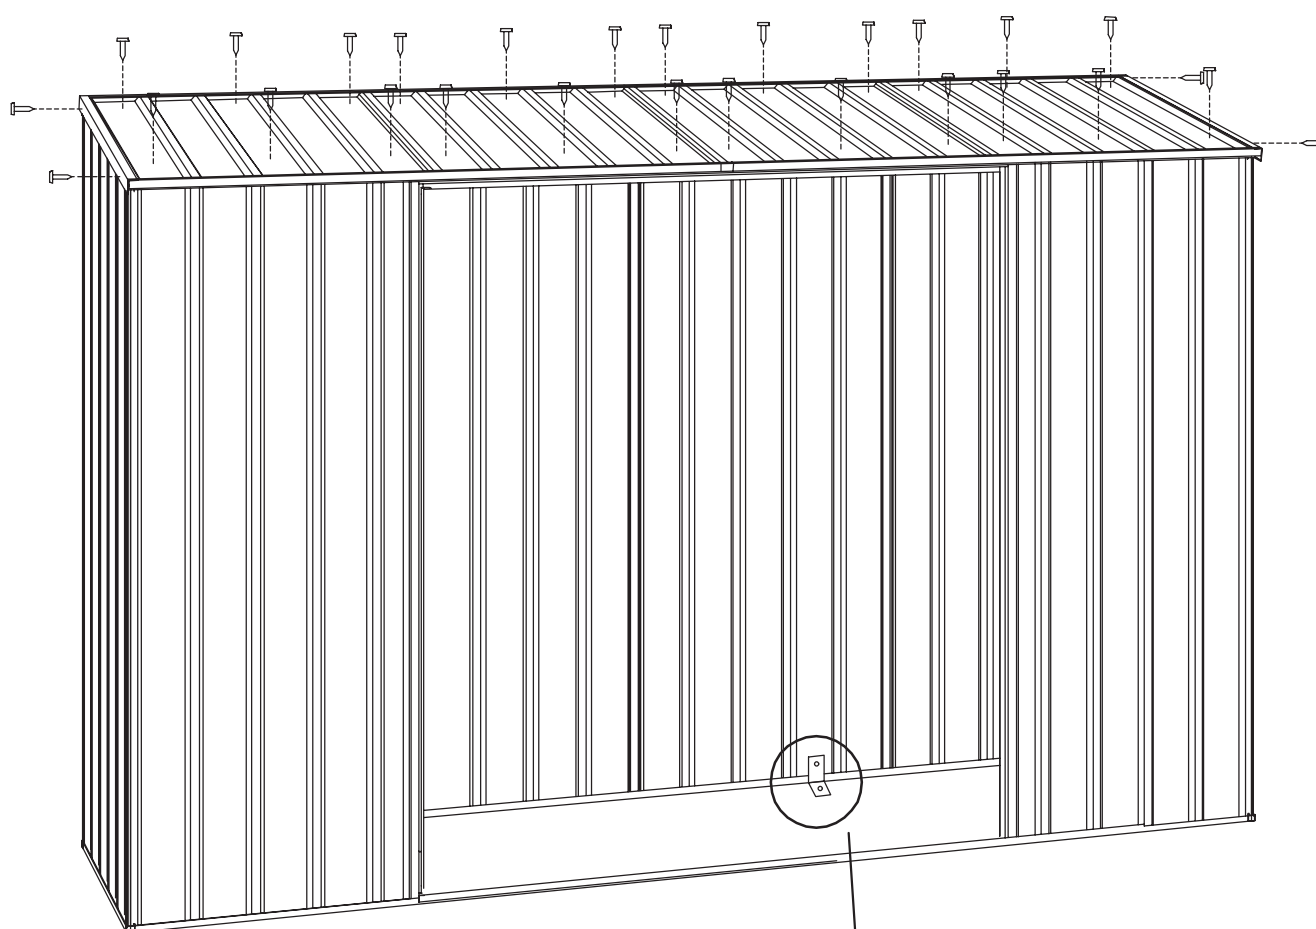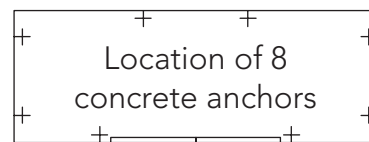

Each anchor consists of one nut, bolt, M10 dynabolt and steel angle.
Drill a 10mm hole into the wall sheet.
Drill a 10mm hole into the concrete.

* Denotes hot dip galvanised finish


DOOR TRACK AND TRIM ASSEMBLY

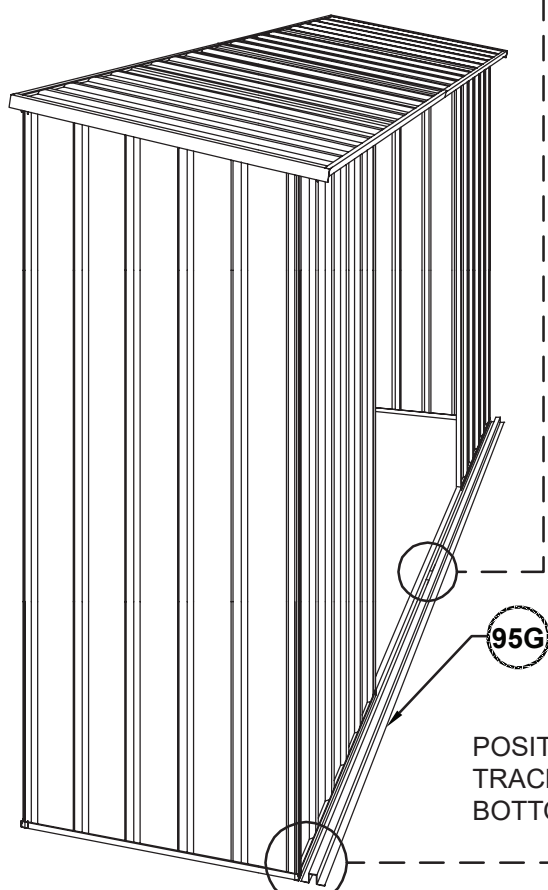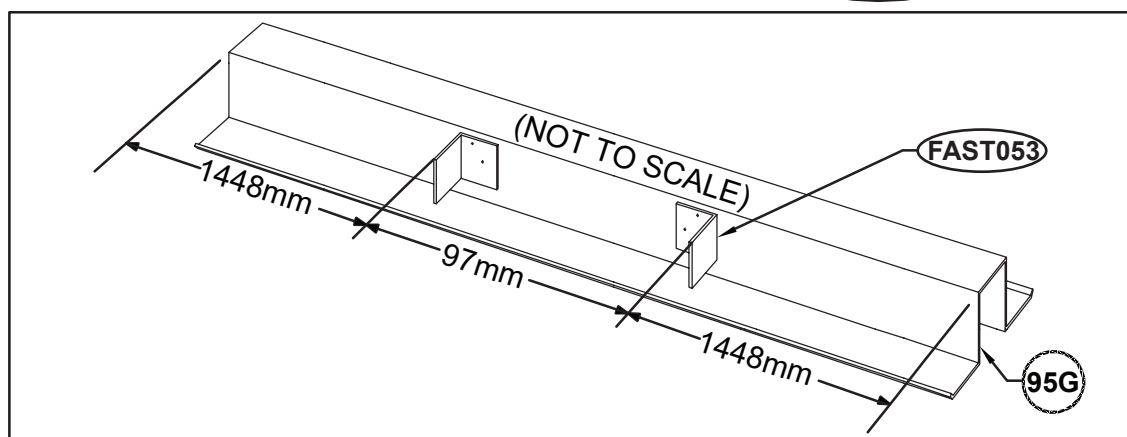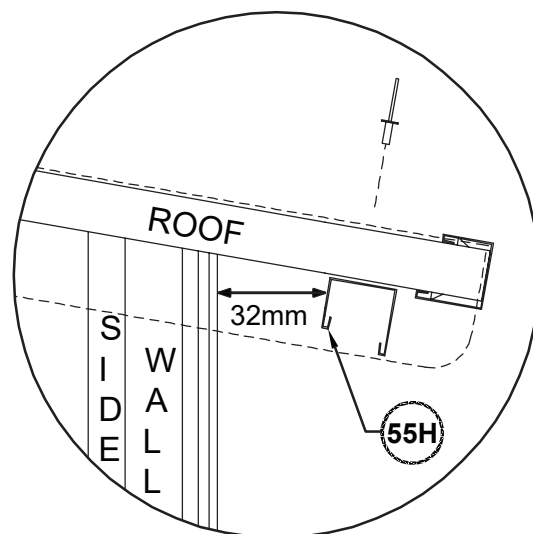

FIT TWO SMALL PLASTIC ANGLES (PART 264) TO THE SLIDING DOOR BASE TRACK AS SHOWN WITH TWO POP RIVETS PER ANGLE.

THESE ANGLES WILL PREVENT THE DOORS FROM SLIDING PAST THE CENTRE POINT OF THE DOOR OPENING, AS EACH DOOR ROLLER CARRIAGE MAKES CONTACT WITH THE PLASTIC ANGLES.


THE DISTANCE OF 97mm ALLOWS FOR 3mm CLEARANCE TO ENSURE THE DOORS BUTT NEATLY TOGETHER.

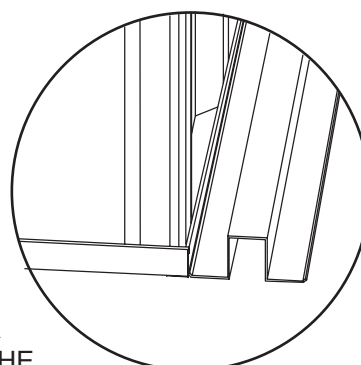



POSITION THE SLIDING DOOR TRACK (95G) TO SIT BESIDE THE BOTTOM CHANNEL AS SHOWN.

DOOR TRACK AND TRIM ASSEMBLY

LIFT THE DOORS INTO POSITION, WITH THE TOP OF EACH DOOR LOCATED BETWEEN THE FRONT WALL AND THE TRACK SUPPORT (55H) FRONT TRIM AS SHOWN, BEFORE MOVING THE BOTTOM TRACK INTO POSITION.

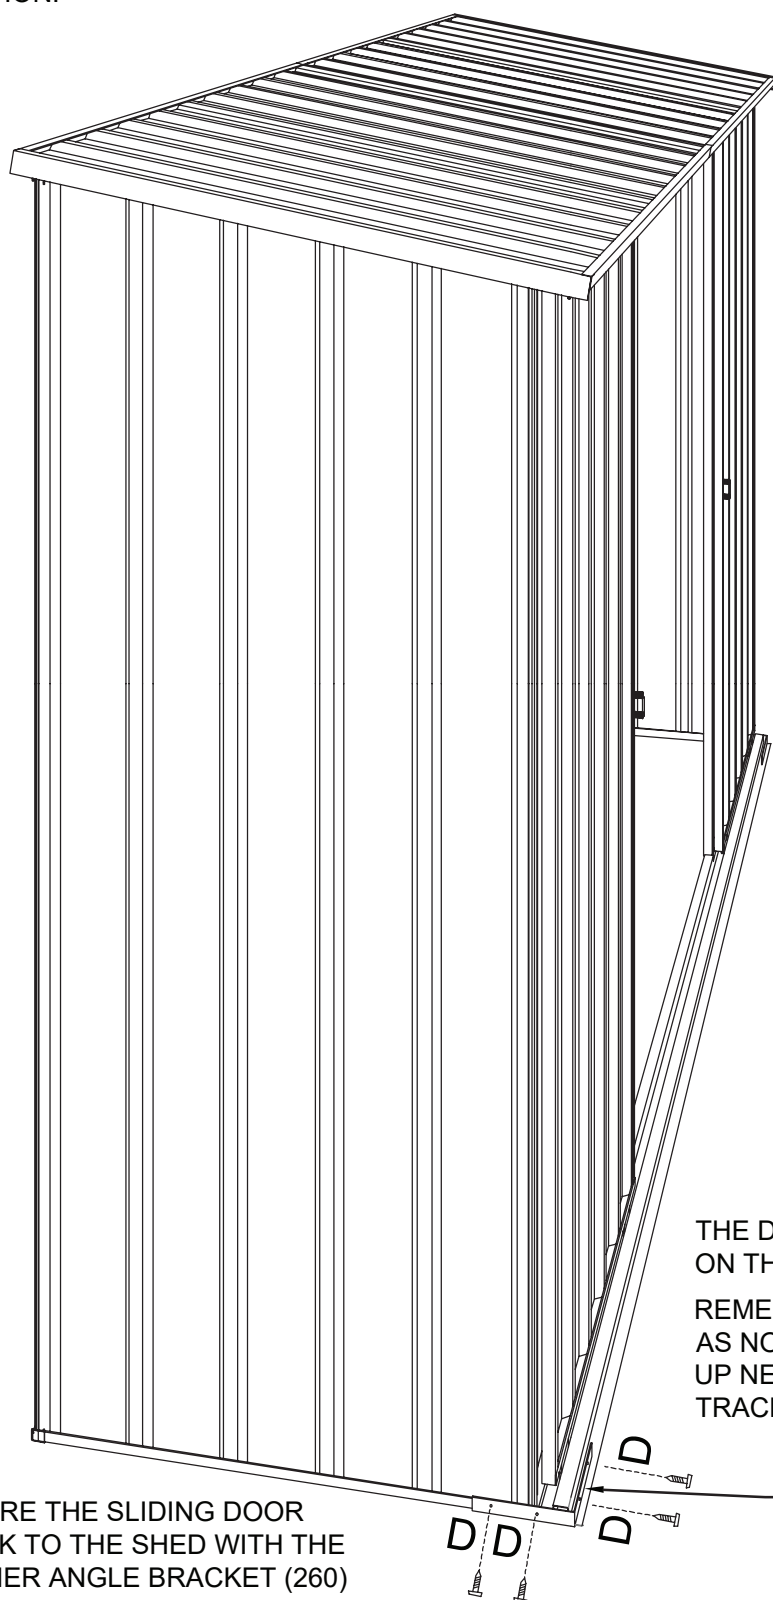

SECURE THE SLIDING DOOR TRACK TO THE SHED WITH THE CORNER ANGLE BRACKET (260)

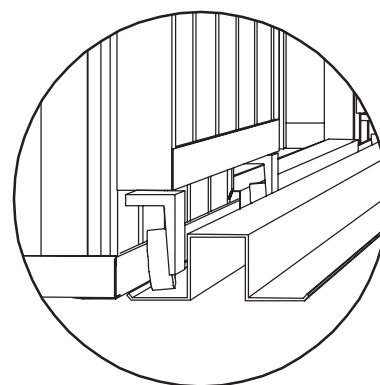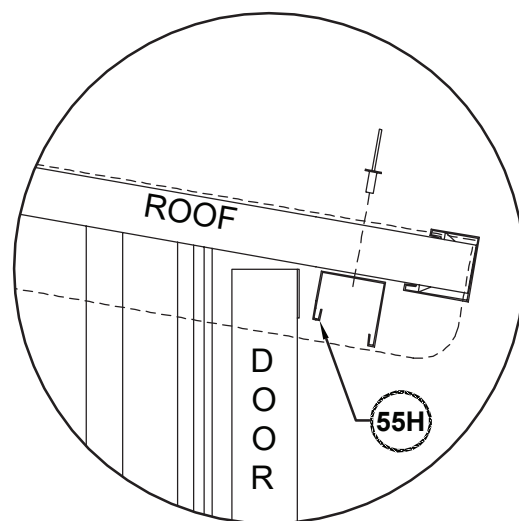

THE DOORS SHOULD GLIDE SMOOTHLY ON THE BOTTOM TRACK AS SHOWN.

REMEMBER TO ADJUST THE BOTTOM ROLLERS AS NOTED ON PAGE 12, SO BOTH DOORS BUTT UP NEATLY TOGETHER, BEFORE SECURING THE TRACK TO THE SHED.

Absco Skillion Roof Shed Notes

General

- 1.G This instruction manual shall be read in conjunction with other consultants drawings, specifications and written instructions provided by Absco and/or their representatives.
- 2.G The drawings provided herein are for installation and structural engineering purposes only. If discrepancies are discovered within the documentation provided, these shall be brought to the attention of Absco and written approvals obtained prior to commencing the affected section of work.
- 3.G If in doubt ask.
- 4.G Until approvals from the local authorities are obtained, commencement of construction from these drawings shall not commence.
- 5.G Unless varied by the project specification, all materials and workmanship shall be undertaken in accordance with the relevant Australian standards and the by-laws and ordinances of the relevant building authorities.
- 6.G All dimensions indicated in these drawings shall be verified on site by the installation contractor. Scaling of drawings shall not be undertaken.
- 7.G Prior to commencing works on site, the contractor shall verify the position of all services in the area to ensure that the construction does not interfere with any of those services.
- 8.G During installation on site the shed structures shall be maintained in a stable condition with no part becoming overstressed or permanently deformed.
- 9.G In circumstances where the shed has been installed in a manner which is inconsistent with the installation manual, structural certification shall be void.
- 10.G The structural components detailed within this installation manual have been designed for the following loads in accordance with AS/NZS1170 based on a Class 10a, Type 2 structure:
 - Roof Live Load: 0.25 kPa uniformly distributed or 1.1 kN concentrated as per AS/NZS1170.1
 - Wind Load: Classification N2, Non-Cyclonic to AS4055 where $V_u = 40$ m/s, $V_s = 26$ m/s
 - Windward wall $C_{pe} = 0.7$
 - Leeward Wall $C_{pe} = -0.3$ to -0.5 as applicable based on shed geometry
 - Side Wall $C_{pe} = -0.5$ to -0.65 as applicable based on shed geometry
 - Roof $C_{pe} = -0.5$ to -1.3 depending on wind direction


Absco Skillion Roof Shed Notes

Steelwork

- 1.S All structural steelwork shall have a corrosion protection system applied consistent with AS/NZS 2312-2002.
- 2.S All structural steelwork detailed within this installation manual shall be minimum Grade 550 for roll formed sections (including roof and wall sheeting) and Grade 250 for angle sections.
- 3.S All roof, and wall sheeting shall be minimum base metal thickness of 0.3mm
- 4.S All snaptite channels and jambs shall be minimum base metal thickness of 0.42mm
- 5.S All top hats shall be minimum base metal thickness of 1.0mm
- 6.S All screw fasteners shall be Phil Pan Head Zinc Plated #8 x 3/4" (STP0820)
- 7.S All bolt fasteners for anchoring shall be M10 minimum grade 4.6/S
- 8.S Installation of screw fasteners shall generally be undertaken in accordance with the relevant provisions of AS1562.

Supporting Slab and Foundations

- 1.F The supporting slab foundation for the garden shed shall be of a minimum size indicated on the installation manual. The top surface of the formed slab shall be level and free of any irregularities which would inhibit the installation of the shed.
- 2.F The structural engineering design for the supporting slab foundation shall be undertaken by a suitably qualified structural engineer. The design shall consider all relevant provision of AS3600 and AS2870.
- 3.F Between adjacent footings or excavations, the contractor installing the slab foundation shall not exceed a rise of 1 in a run of 2 in line of slope.
- 4.F Unless approved in writing by the slab foundation engineer, the limits of excavations near existing footings shall be in accordance with that indicated below.

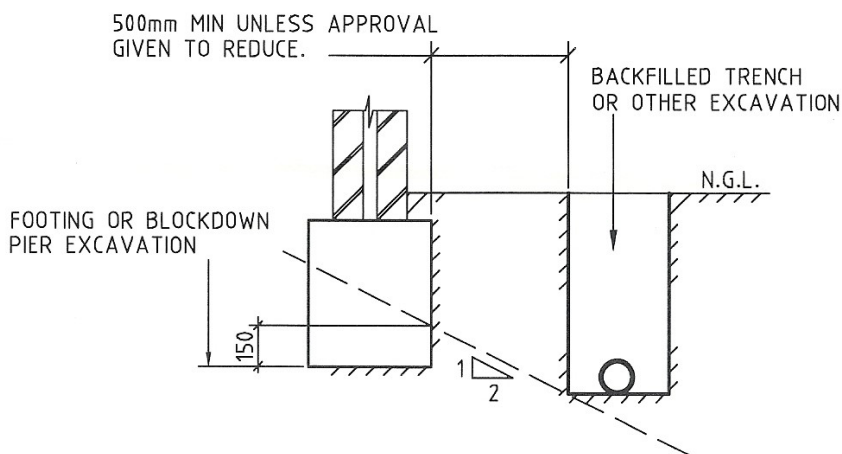

The contractor shall undertake investigatory localised excavations near existing footings to ascertain their depth prior to excavating adjacent to them. It is noted that excavating to a depth below that indicated above shall not be undertaken without the written approval from the engineer.

Absco Sheds Storage Guidelines

- Absco Sheds are designed to be weatherproof for normal weather conditions. In the event of extreme weather conditions such as heavy rain, combined with high wind gusts, the ridge capping, sheeting joints, screw fixings etc., may exhibit minor deformations which may allow some water entry. These areas should be checked regularly to ensure that maximum strength and protection is maintained.
- Other weather conditions such as extreme heat and extreme cold, moist or dry air can influence the effects of concrete floor moisture and/or condensation on the underside of the roof sheets.
- Absco Sheds and storage units are primarily used for storage of garden equipment such as lawnmowers, wheelbarrows, garden tools etc. Storage items that might be adversely affected by any of the above conditions may require additional protection such as being sealed or covered by plastic sheets and/or stacked above the concrete floor on timber slats.
- Waterproof sealants may be used to offer further protection where required around joins and screw fixings, as can rubber door seals and other products which are available from most hardware outlets.
- Placement of waterproof sealants (silicone) between the base of the shed and concrete slab is not recommended, as this process can have a reverse effect, preventing excess water from escaping, resulting with water accumulating and being trapped inside the shed.
- Absco accepts no responsibility for water entry, floor moisture, condensation or the condition of the Contents inside your Absco steel building arising from any of the pre-mentioned weather conditions.

Lifetime Warranty Statement



This warranty against defects is given by:

Absco Industries (ABN: 77 869 708 678)
Address: PO Box 119 Acacia Ridge QLD 4110
Ph: 1800 029 701
Fax: 07 3344 1191
Email: admin@absco.com.au

Date of issue: 19 December 2018

Details of Manufacturer's Warranty

This product comes with a Lifetime structural warranty from the date of purchase. This warranty also applies where there are missing or damaged parts identified in the parts list referred to in the instruction kit within the product packaging.

Please ensure that you keep this warranty form in a safe place along with your proof of purchase. You can register your warranty online <http://absco sheds.com.au/warranty-details/> or complete the form on the back of this document and mail it back to Absco, along with a copy of your proof of purchase.

The benefits of this warranty are in addition to your rights under the Australian Consumer Law (ACL) and in particular, the guarantees implied under the ACL and any other rights and remedies of the consumer under a similar law in relation to the goods and services to which this warranty relates.

Process of claiming warranty:

To make a claim under the warranty within the warranty period, you will need to contact the manufacturer directly by phone or email:

Contact Number: 1800 029 701
Contact Email: admin@absco.com.au

You will be required to produce proof of purchase (this is at discretion of the manufacturer) at the time of the claim.

The manufacturer bears the cost of replacing the products or spare parts or repairing the products and reasonable direct expenses of claiming under this warranty:

Where parts are replaced, the manufacturer will bear the cost of sending the spare part and will endeavour to deliver it to the customer's nearest reseller within 20 working days for the customer to pick up. At such time the customer may be required to return the alleged faulty parts.

Where assessment is required in case of replacing or repairing the product, the manufacturer will appoint an assessor within 10 working days to identify the alleged defect. The manufacturer will bear the repair costs by appointing a local tradesman. The manufacturer may choose to replace the product if the repair or the cost of repair is not feasible. The replacement product will be available for collection from the nearest reseller within 20 working days. The customer will bear the cost of assembly for the replacement product.

IMPORTANT

1. Manufacturer's Disclosure

This warranty against defects shall not apply in the following situations:

- A) Where the product is not assembled in accordance with the instructions provided in the product kit;
- B) Where the product is used to store corrosive materials such as fertilizer, chlorine etc;
- C) The warranty does NOT cover damage caused by storms, wind, rain, snow or poor foundations;
- D) This warranty does not apply to surface deterioration of panels caused by 'Swarf' (Tiny particles of steel debris left from cutting, grinding or drilling operations) that has not been removed after building construction.

2. Notes

This product is weatherproof to a certain level; however driving windy rain may cause the product to leak. Condensation may also occur in some weather conditions such as extreme heat or cold. The product should only be used for storing items such as gardening equipment and should not be used for articles that may be prone to damage if they come into contact with moisture.

3. Major Defects

If the manufacturer is satisfied that the defect is a major defect, the purchase price may be refunded in lieu of providing a replacement product or repairing the product.

This warranty is provided in addition to other rights and remedies you have under law: Our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

If you do not wish to register your warranty online, complete the below form and email, fax or post this form back to Absco, along with a copy of your proof of purchase.

NAME:

STREET ADDRESS:

POSTAL / ZIP CODE:

STATE / CITY / PROVINCE / REGION:

COUNTRY:

SHED TYPE/CODE:

ORDER NO:

DATE OF PURCHASE:

EMAIL ADDRESS:

DATE REGISTERED:

