




1.52mW x 2.96mD x 1.80mH



admin@absco.com.au www.abscosheds.com.au

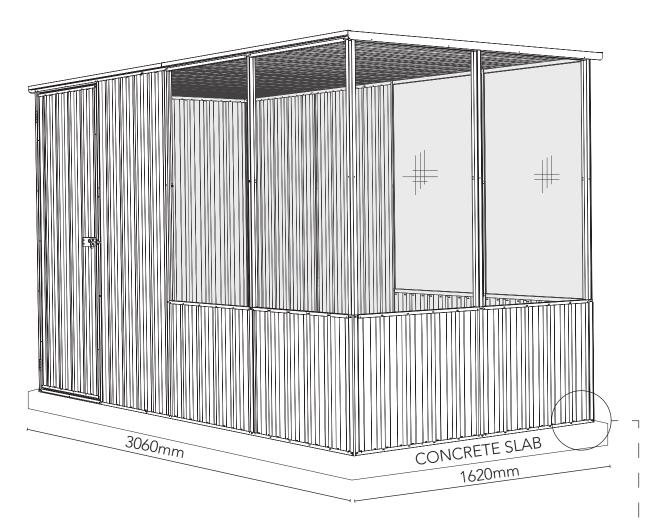

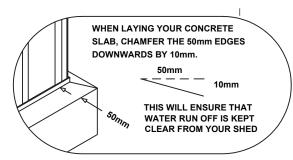



DOWNLOAD OUR APP FOR ASSEMBLY VIDEOS



#### **PLEASE LEAVE A REVIEW**

Tell us about your experience! Visit www.abscosheds.com.au/review



1.52mW x 2.96mD x 1.80mH

#### **GENERAL INSTRUCTIONS**

- Before commencing any assembly, read through these instructions in detail to gain a thorough understanding of assembly methods and associated details.
- Unpack the carton and carefully identify and check off all the parts against the parts described and illustrated on "COMPONENTS PACKING LIST" pages.

#### SITE PREPARATION

- The site for the shed must be level. An uneven surface may result in misalignment of parts.
- The shed shall be erected on top of a reinforced concrete slab and anchored down appropriately illustrated on "FINAL CONSTRUCTION" page.

#### **TOOLS REQUIRED**



#### **SAFETY NOTES**

- Some parts may have sharp edges. It is advisable to wear gloves when handling these items and safety glasses if drilling holes. Sensible shoes are highly recommended.
- Do not erect your shed in windy conditions.
- Ensure that the shed is securely anchored to a solid foundation immediately after construction is completed.
- It is highly recommended to erect the shed with two or more people.
- Do not sit, stand or walk on the roof of your shed.

#### **RECOMMENDED**













1.52mW x 2.96mD x 1.80mH

### **COMPONENT PACKING LIST**

Check off all components.

SHEETING								
QTY	COMPONENT DESCRIPTION	PART No.	СНК	QTY	COMPONENT DESCRIPTION		PART No.	СНК
2	STEEL SHEET 1785 x 773mm	30A		2		ΓΕΕL SHEET 785 x <u>731</u> mm	33A	
1	STEEL SHEET 1785 x 773mm	30G		1		ΓΕΕL SHEET 725 x <u>711</u> mm	37A	
4	STEEL SHEET 1592 x 773mm	46A		6		TEEL SHEET 300 x 773mm	31D	
6	MESH SHEET 1195 x 705mm	MESH20						
INSTRUCTIONS AND FITTINGS PACKET								
1	DOOR PLATE	12A		1	<b> ■</b> TAPP	x 3/8" SELF ING SCREW CK QTY 220	FAST001	
20	3mm POP RIVET	FAST009		15		20mm SELF ING SCREW	FAST013	
1	PADBOLT 115mm LONG	FAST006		1		PADBOLT HASP	FAST007	
6	3/16 x 1/2" CSK SCREW & NUT	FAST004 FAST005		1	F	PHILLIPS HD DRIVER BIT	FAST038	
1	3mm DRILL BIT	DRILL		6		CHANNEL JOINER	CSJ	



1.52mW x 2.96mD x 1.80mH

### **COMPONENT PACKING LIST**

Check off all components.

CHANNEL PACK							
QTY	COMPONENT DESCRIPTION	PART No.	СНК	QTY	COMPONENT DESCRIPTION	PART No.	СНК
3	CHANNEL 1785mm	80L		1	CHANNEL 1513mm	81F	
1	CHANNEL 1513mm	53C		2	CHANNEL 1488mm	53T	
2	CHANNEL 1231mm	313L		2	CHANNEL 1707mm	313R	
2	CHANNEL 1707mm	314L		2	CHANNEL 1231mm	314R	
2	CHANNEL 1496mm	81AL		2	CHANNEL 1496mm	81AR	
2	CHANNEL 712mm	58M		12	CHANNEL 712mm	181	
1	CHANNEL 1725mm	58B		1	CHANNEL 720mm	54G	
1	CHANNEL 1725mm	58A		2	LIP TRIM 1170mm	88A	
12	JAMB 1785mm	70D		2	JAMB 1080mm	91E	
1	JAMB 1785mm	89A		1	JAMB 1785mm	89B	
1	JAMB 720mm	91D					




1.52mW x 2.96mD x 1.80mH

#### SNAPTITE ASSEMBLY GUIDE

The Snaptite Assembly System locks end channels to all roof and wall sheets without the need for tools and fasteners.

To assemble each panel, the perimeter channels are secured to the top and bottom of each panel. Gently tap the channel over the SNAPTiTE lugs on the sheet, working along the sheet.

Each perimeter channel must finish flush with the edges of the sheets. Simply tap the channel along the sheets until each end is neatly flush. If you need to remove channels from the panels, slide it off from the side.

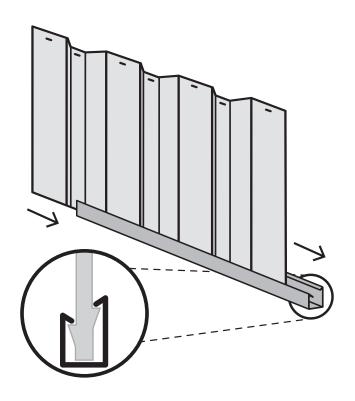



Channel locks the shed panel into position without the need for screws!

#### **FASTENING SYMBOLS**




Secure channel to sheeting by SNAPTiTE fastening method.



Join components together with one screw at this location only, as some channels have extra holes that are not required for this model of shed.



Do not join components together at this location yet, as the screws may obstruct further assembly of the other components.





3mm pop rivet



4mm nut and bolt set.

◫

**Absco Industries** 

Model: A15301FKFD

29/08/2022

2.2



1.52mW x 2.96mD x 1.80mH

### **Guide on Joining Spliced Channels**

The text marked on all parts must be shown on the same side as each other




Step 1.
Position the channels and the CSJ joiner so the centre of the CSJ is in line with the end of each channel to be joiner together.



Step 2.
Join the first channel to the CSJ by inserting the centre of the CSJ, on an angle, to the end of the channel where the JOIN>> text is marked.




Push down one side of the CSJ until you hear a 'click'.

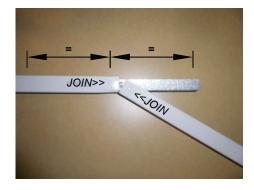


Step 3.


Join the second channel to the CSJ by positioning the <<JOIN of the channel at the centre of the CSJ, on an angle. Push the CSJ into the channel until you hear a 'click'.

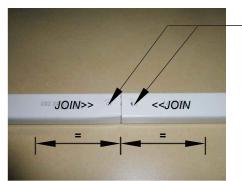

Finished Channel.
The joined channels should now look like the picture with the CSJ positioned equally inside of the joined channels.

Drill out holes with 3mm drill bit in CSJ to match the holes in channel. Drilling of screws on the joined channels is being done after sheets are locked on the spliced channels.

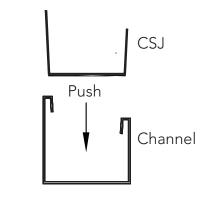

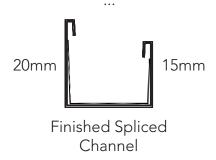




1.52mW x 2.96mD x 1.80mH

### PRE-ASSEMBLY OF SPLICED CHANNELS

Join together 12 x channel sections using 6 x channel joiners (Part CSJ)

NOTE: Some channels may have holes in them - You will need to redrill holes where CSJ joining channel covers them.

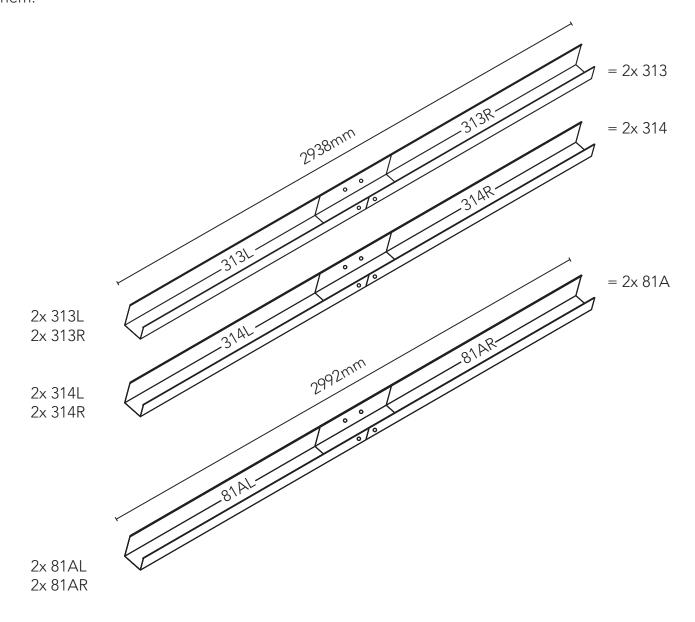





1.52mW x 2.96mD x 1.80mH

### **ROOF AND WALL OVERVIEW**


Mesh panels not shown for illustrative purposes.

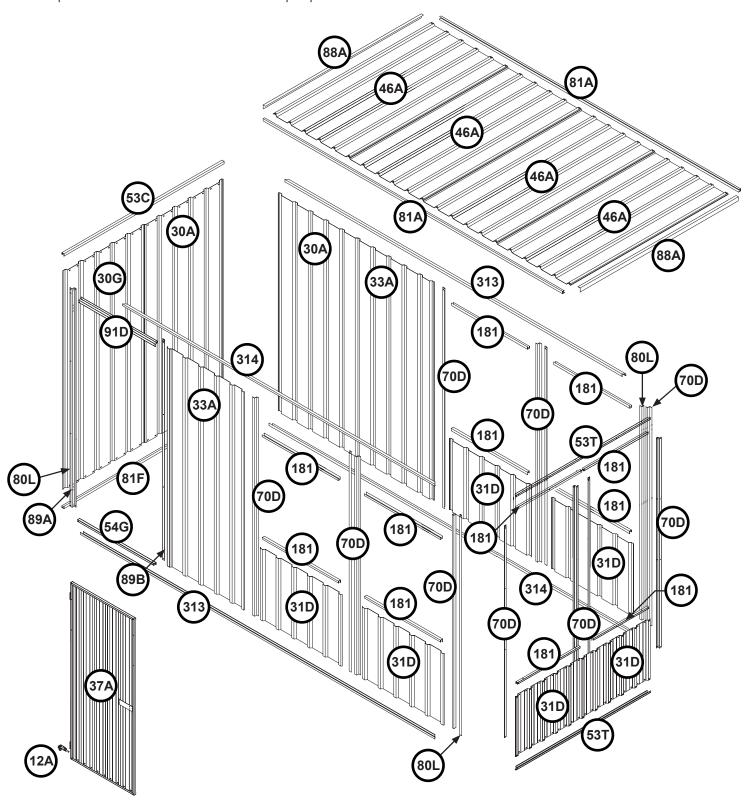




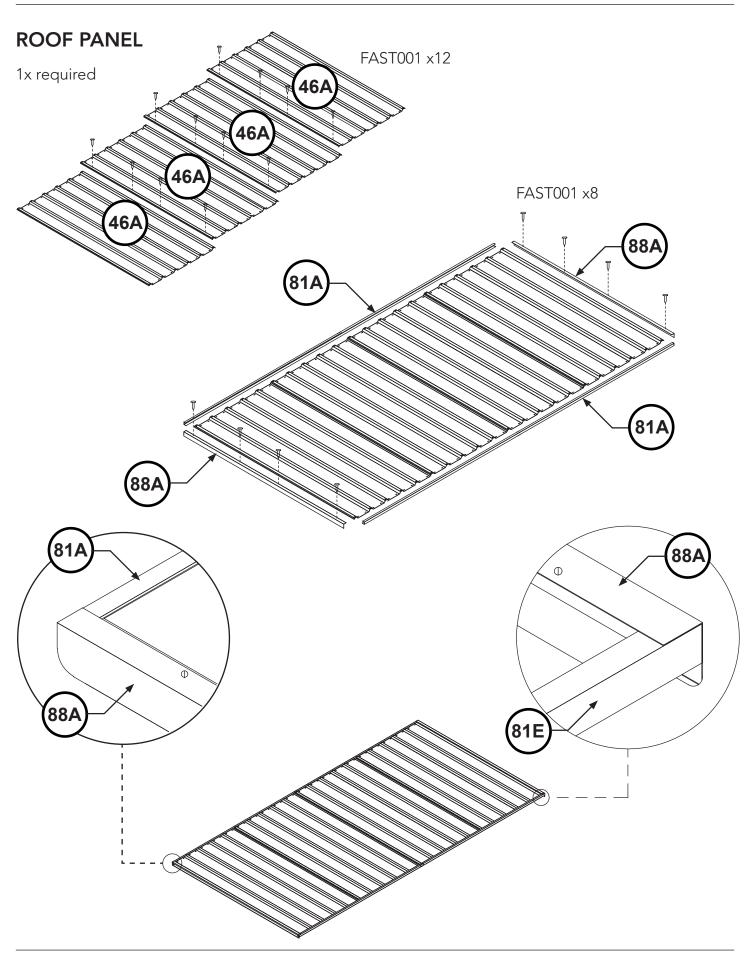




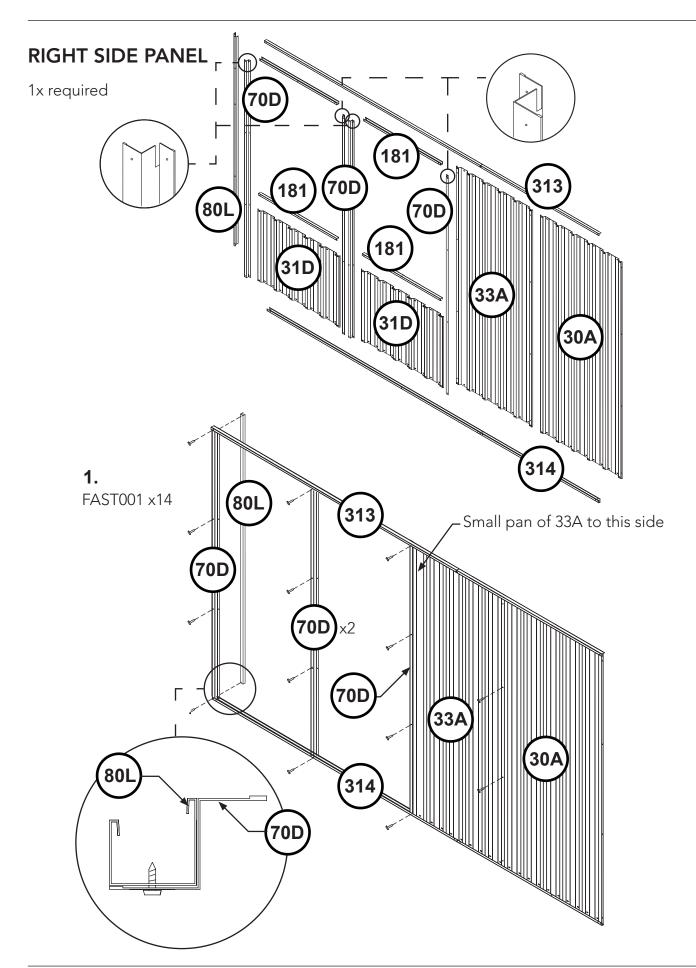



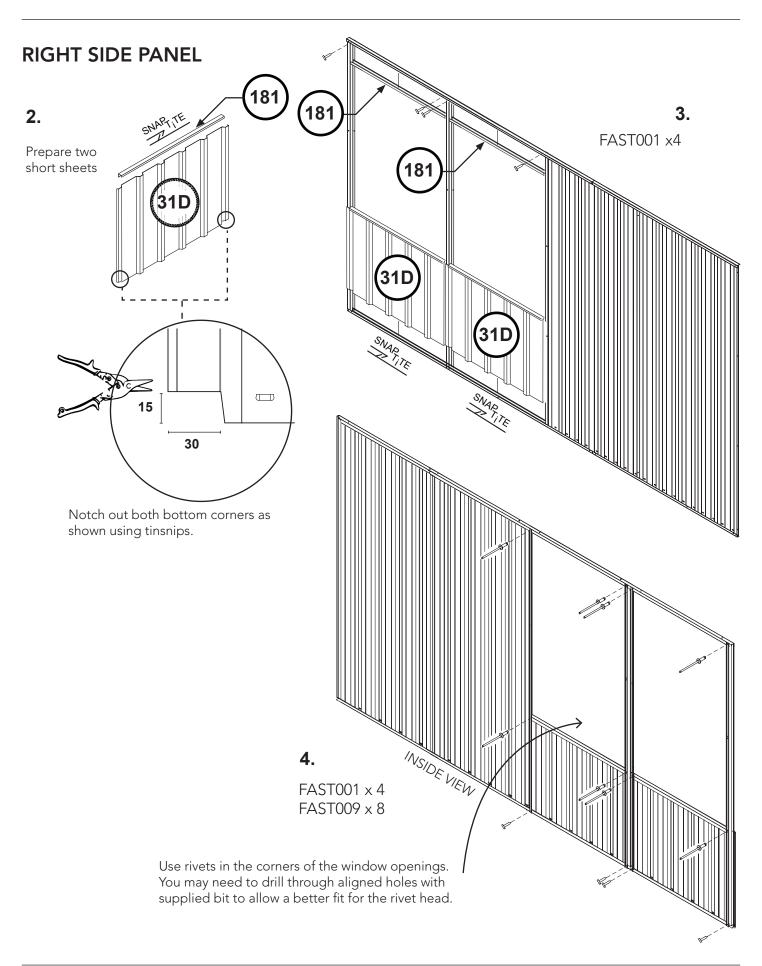




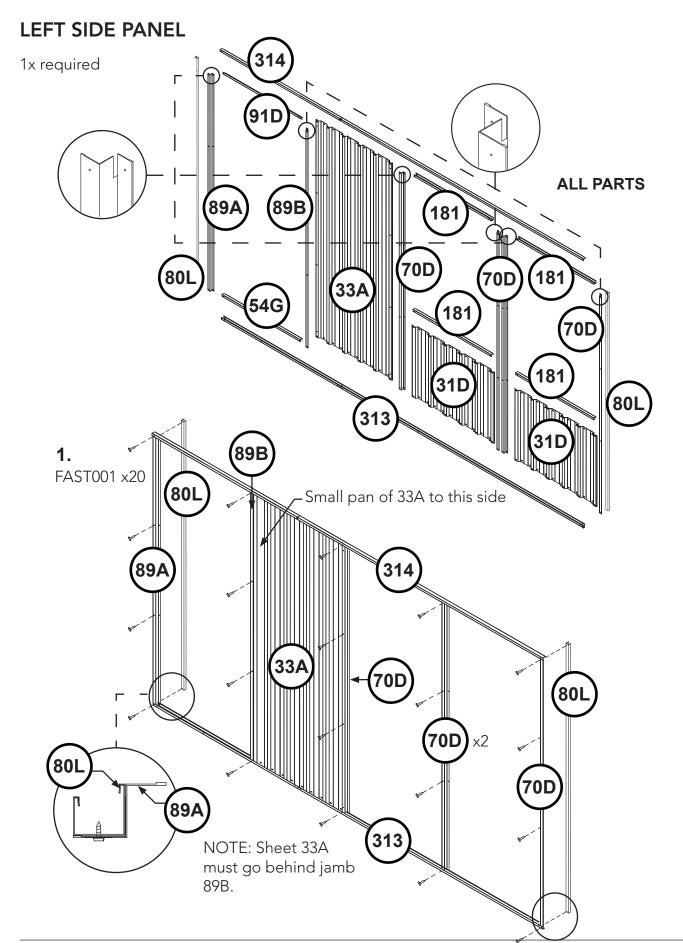




1.52mW x 2.96mD x 1.80mH

### **LEFT SIDE PANEL**

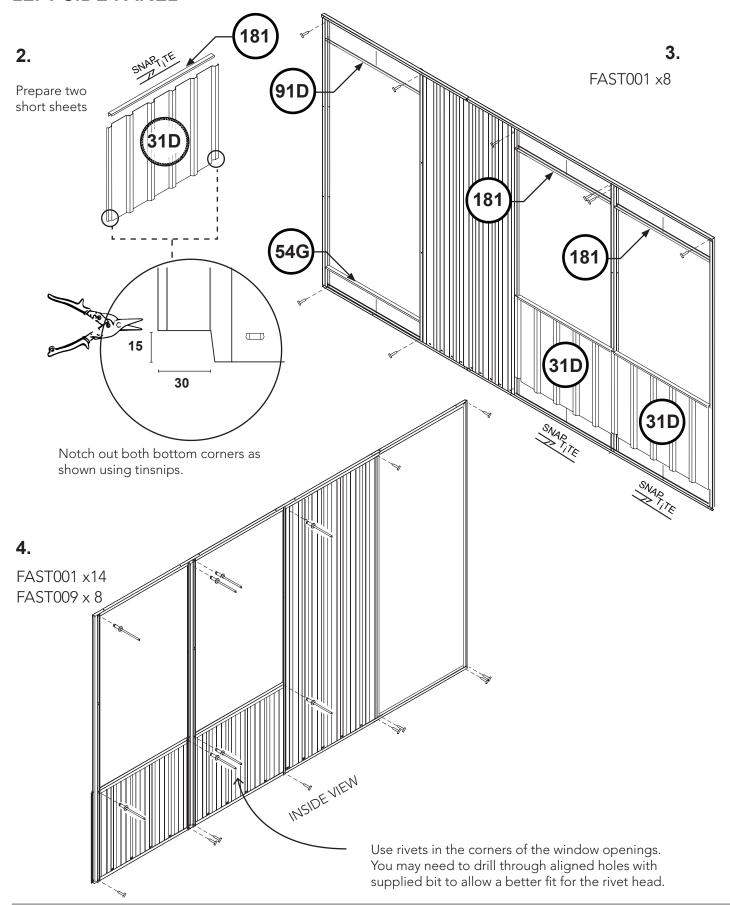


2.2



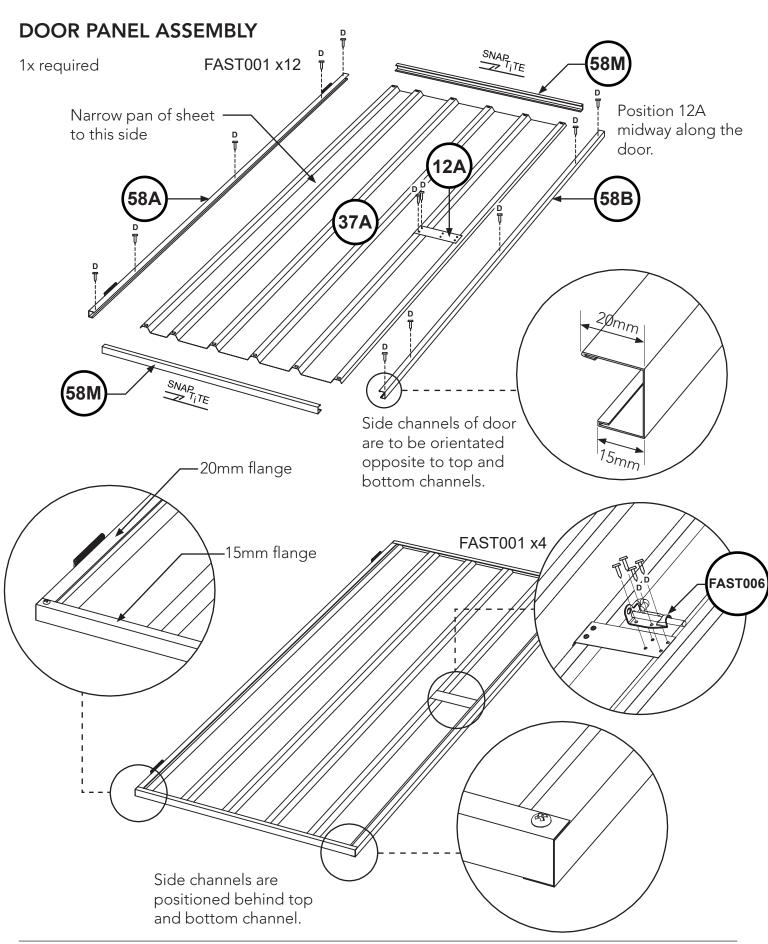




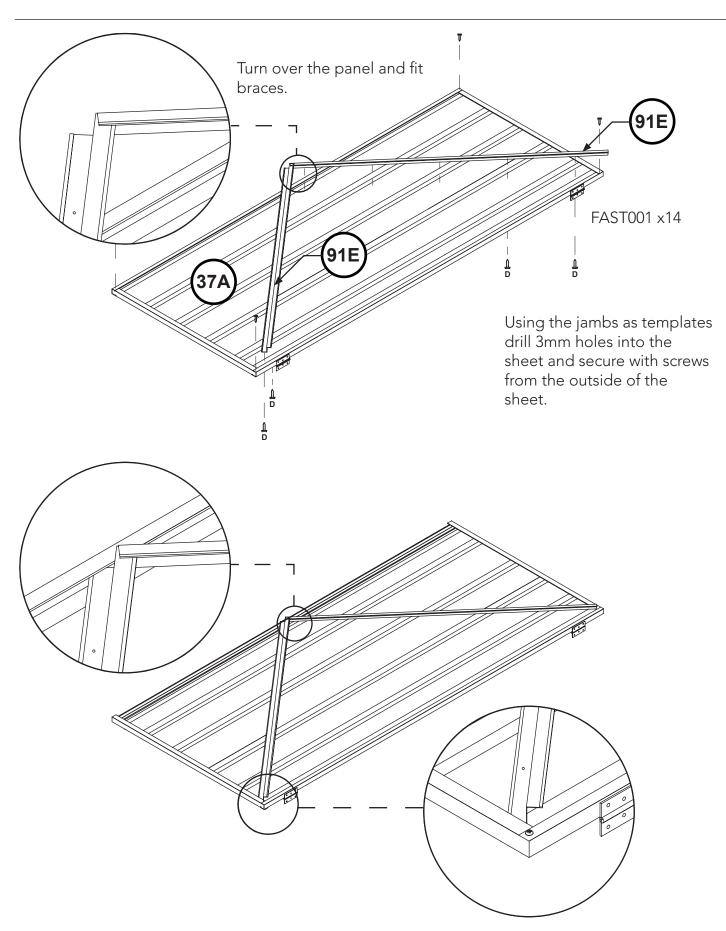



1.52mW x 2.96mD x 1.80mH

### **DOOR PANEL ASSEMBLY**

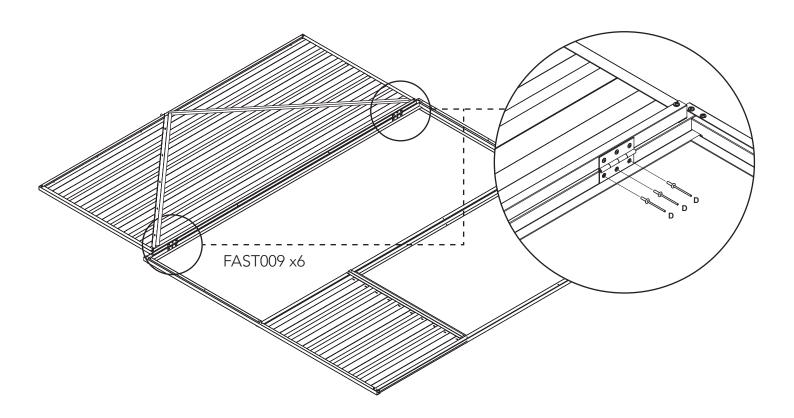

Lay the LEFT SIDE PANEL face up and lay the DOOR PANEL down in the open position on top as shown.

Using three rivets per hinge, FAST009, secure the door to the frame.


NOTE: Run the 3mm drill bit through the punched holes in the jamb before riveting the hinge on.



1.52mW x 2.96mD x 1.80mH

### **REAR PANEL ASSEMBLY**


1x required

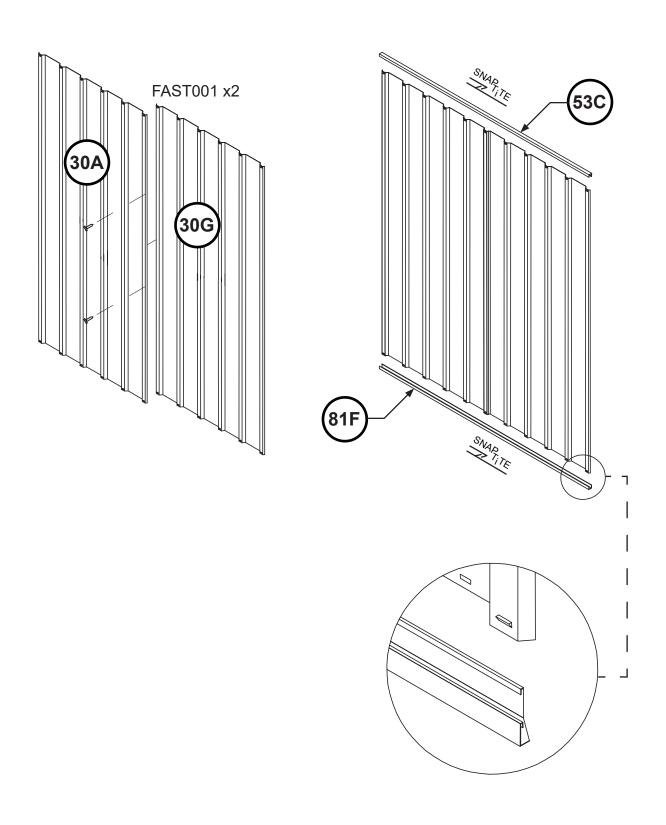





1.52mW x 2.96mD x 1.80mH

### **FRONT PANEL**

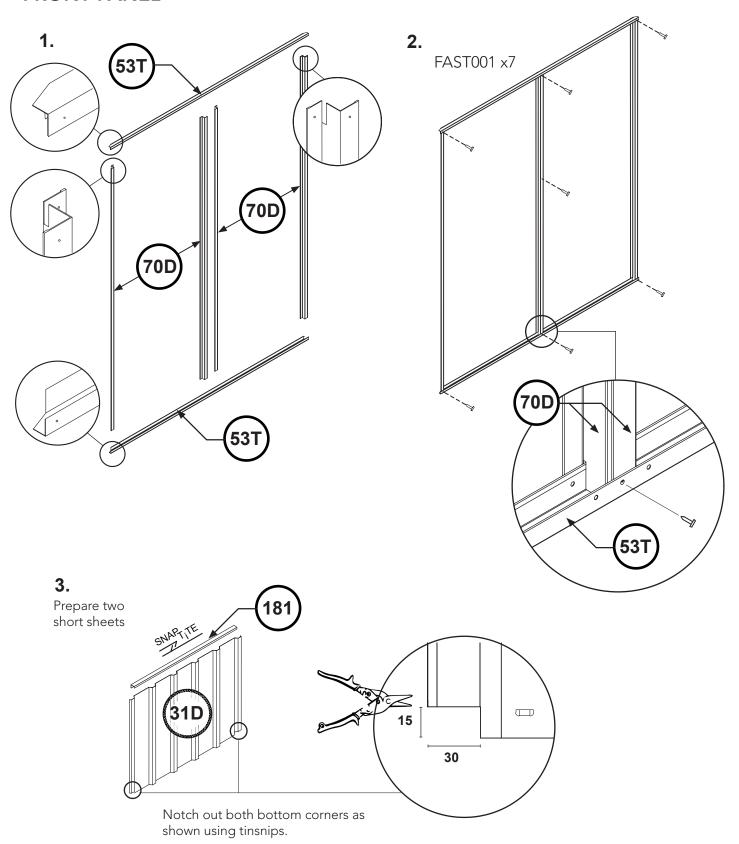



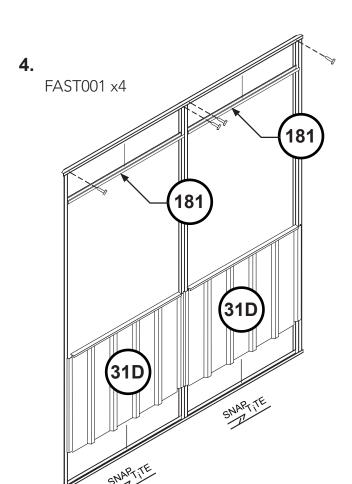


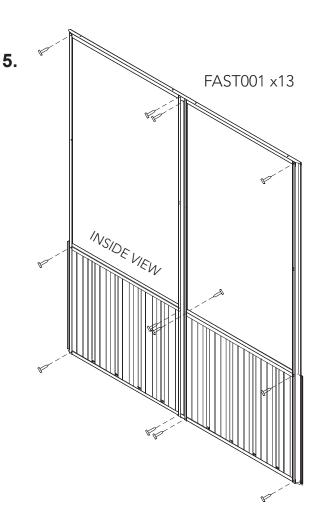



1.52mW x 2.96mD x 1.80mH

#### FITTING MESH PANELS

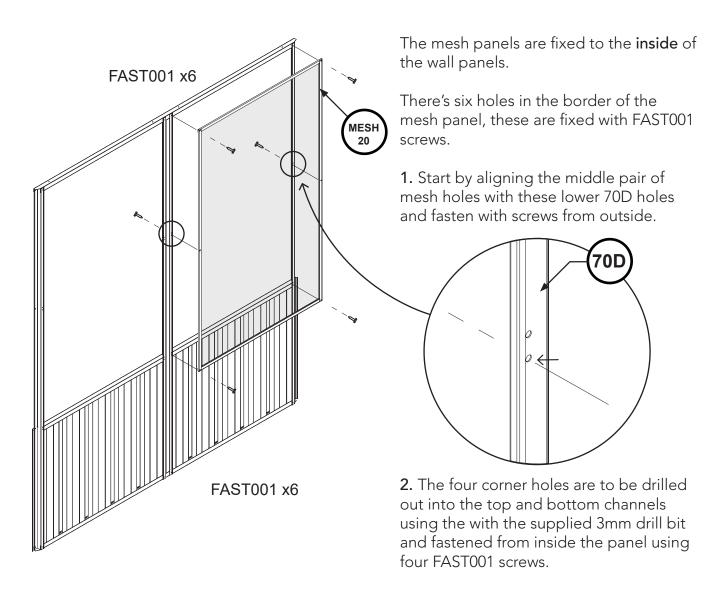

**NOTE:** If the mesh panel is not sitting flush enough for your liking you may drill more 3mm holes and fasten with additional FAST001.

**3.** Repeat these steps for every mesh position.


**WARNING**: It is recommended that new galvanised mesh should be weathered for two (2) months or scrubbed with a mild acidic solution, such as vinegar, then rinsed with water before being used in bird housing applications.



1.52mW x 2.96mD x 1.80mH

#### PANEL CONSTRUCTION

NOTE: Take care to ensure that all wall panels are not upside down. The top channels of each panel are pre-punched for attaching roof sheeting. The base channels are not pre-punched.

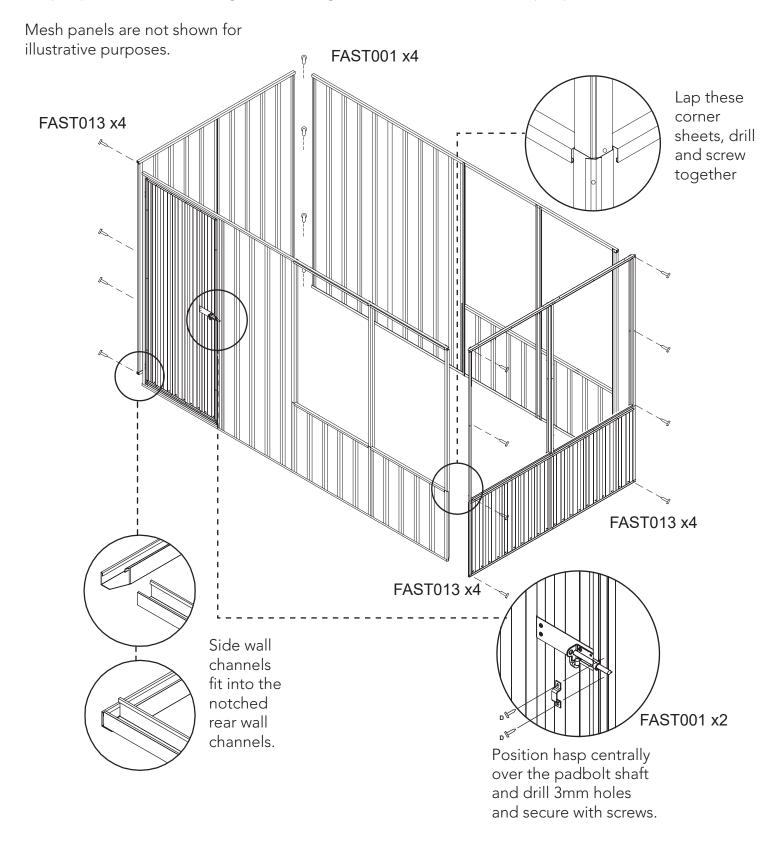


2.2



1.52mW x 2.96mD x 1.80mH

#### FINAL CONSTRUCTION

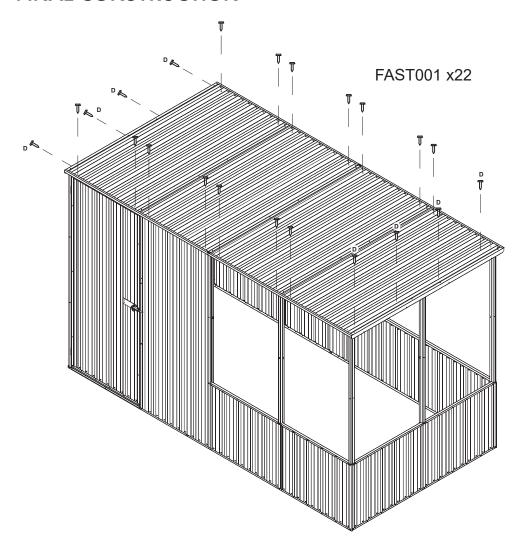


Position the roof so that the back wall has the lip trim against it with the roof overhang to the front.

Line up the holes in the roof sheet with side wall top channels. Secure with screws.

Line up the holes in the roof lips with holes in the top channel of the side panels.


Secure with screws.

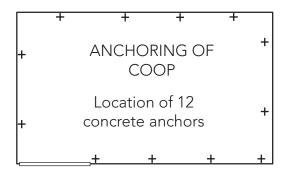

Each anchor consists of one nut, bolt, M10 dynabolt and steel angle.

Drill a 10mm hole into the wall sheet.

Drill a 10mm hole into the concrete.

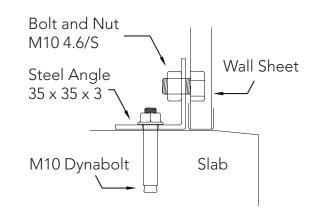




1.52mW x 2.96mD x 1.80mH

### **Absco Sheds Storage Guidelines**

- Absco Sheds are designed to be weatherproof for normal weather conditions. In the event of extreme weather conditions such as heavy rain, combined with high wind gusts, the ridge capping, sheeting joins, screw fixings etc., may exhibit minor deformations which may allow some water entry. These areas should be checked regularly to ensure that maximum strength and protection is maintained.
- Other weather conditions such as extreme heat and extreme cold, moist or dry air can influence the effects of concrete floor moisture and/or condensation on the underside of the roof sheets.
- Absco Sheds and storage units are primarily used for storage of garden equipment such as lawnmowers, wheelbarrows, garden tools etc. Storage items that might be adversely affected by any of the above conditions may require additional protection such as being sealed or covered by plastic sheets and/or stacked above the concrete floor on timber slats.
- Waterproof sealants may be used to offer further protection where required around joins and screw fixings, as can rubber door seals and other products which are available from most hardware outlets.
- Placement of waterproof sealants (silicone) between the base of the shed and concrete slab is not recommended, as this process can have a reverse effect, preventing excess water from escaping, resulting with water accumulating and being trapped inside the shed.
- Absco accepts no responsibility for water entry, floor moisture, condensation or the condition of the Contents inside your Absco steel building arising from any of the pre-mentioned weather conditions.



6-12 Activity St, Acacia Ridge QLD 4110 PO Box 119, Acacia Ridge QLD 4110

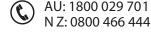



2.2

23

### Lifetime Warranty Statement



This warranty against defects is given by:

Absco Industries (ABN: 77 869 708 678) Address: PO Box 119 Acacia Ridge QLD 4110

Ph: 1800 029 701 Fax: 07 3344 1191

Email: admin@absco.com.au

Date of issue: 19 December 2018

#### Details of Manufacturer's Warranty

This product comes with a Lifetime structural warranty from the date of purchase. This warranty also applies where there are missing or damaged parts identified in the parts list referred to in the instruction kit within the product packaging.

Please ensure that you keep this warranty form in a safe place along with your proof of purchase. You can register your warranty online http://abscosheds.com.au/warranty-details/ or complete the form on the back of this document and mail it back to Absco, along with a copy of your proof of purchase.

The benefits of this warranty are in addition to your rights under the Australian Consumer Law (ACL) and in particular, the guarantees implied under the ACL and any other rights and remedies of the consumer under a similar law in relation to the goods and services to which this warranty relates.

#### Process of claiming warranty:

To make a claim under the warranty within the warranty period, you will need to contact the manufacturer directly by phone or email:

Contact Number: 1800 029 701 Contact Email: admin@absco.com.au

You will be required to produce proof of purchase (this is at discretion of the manufacturer) at the time of the claim.

The manufacturer bears the cost of replacing the products or spare parts or repairing the products and reasonable direct expenses of claiming under this warranty:

Where parts are replaced, the manufacturer will bear the cost of sending the spare part and will endeavour to deliver it to the customer's nearest reseller within 20 working days for the customer to pick up. At such time the customer may be required to return the alleged faulty parts.

Where assessment is required in case of replacing or repairing the product, the manufacturer will appoint an assessor within 10 working days to identify the alleged defect. The manufacturer will bear the repair costs by appointing a local tradesman. The manufacturer may choose to replace the product if the repair or the cost of repair is not feasible. The replacement product will be available for collection from the nearest reseller within 20 working days. The customer will bear the cost of assembly for the replacement product.

#### **IMPORTANT**

#### 1. Manufacturer's Disclosure

This warranty against defects shall not apply in the following situations:

A)Where the product is not assembled in accordance with the instructions provided in the product kit;

B)Where the product is used to store corrosive materials such as fertilizer, chlorine etc;

C)The warranty does NOT cover damage caused by storms, wind, rain, snow or poor foundations;

D)This warranty does not apply to surface deterioration of panels caused by 'Swarf' (Tiny particles of steel debris left from cutting, grinding or drilling operations) that has not been removed after building construction.

#### 2. Notes

This product is weatherproof to a certain level; however driving windy rain may cause the product to leak. Condensation may also occur in some weather conditions such as extreme heat or cold. The product should only be used for storing items such as gardening equipment and should not be used for articles that may be prone to damage if they come into contact with moisture.

#### 3. Major Defects

If the manufacturer is satisfied that the defect is a major defect, the purchase price may be refunded in lieu of providing a replacement product or repairing the product.

This warranty is provided in addition to other rights and remedies you have under law: Our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

If you do not wish to register your warranty online, complete the below form and email, fax or post this form back to Absco, along with a copy of your proof of purchase.

NAME:		
STREET ADDRESS:	POSTAL / ZIP CODE:	
STATE / CITY / PROVINCE / REGION:		
COUNTRY:		
SHED TYPE/CODE:		
ORDER NO:		
DATE OF PURCHASE:		
EMAIL ADDRESS:		
DATE REGISTERED:		