

For construction in non-cyclonic areas

Wind rating: N2 as per AS4055-2012.

If you require a higher wind rating please contact us: admin@absco.com.au or 1800 029 701

When laying concrete slab, ensure there is a rebated edge 25mm deep around the perimeter. This will help water egress from the base of the shed.



**DOWNLOAD
OUR APP FOR
ASSEMBLY
VIDEOS**



LEAVE A REVIEW

Tell us about your experience and receive a \$20 Coles Gift Card.
Visit www.abscosheds.com.au/review


GENERAL INSTRUCTIONS

- Before commencing any assembly, read through these instructions in detail to gain a thorough understanding of assembly methods and associated details.
- Unpack the carton and carefully identify and check off all the parts against the parts described and illustrated on "COMPONENTS PACKING LIST" pages.
- Local authority approval must be obtained prior to construction of the shed. Once you have selected your site you will need to lodge a site plan to your local council.

SITE PREPARATION

- The site for the shed must be level. An uneven surface may result in misalignment of parts.
- The shed shall be erected on top of a reinforced concrete slab and anchored down appropriately illustrated on "FINAL CONSTRUCTION" page. **If using a rebated slab ensure that all frame uprights are trimmed 25mm.**

TOOLS REQUIRED

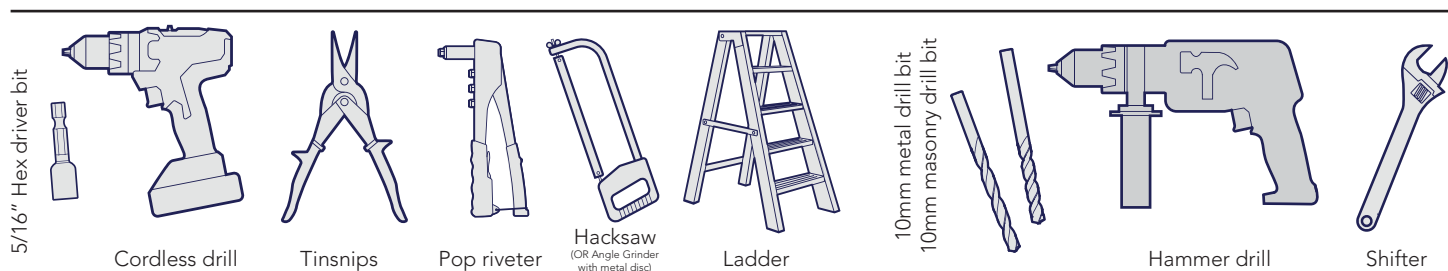

SAFETY NOTES












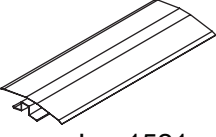

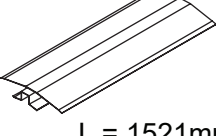

- Some parts may have sharp edges. It is advisable to wear gloves when handling these items and safety glasses if drilling holes. Sensible shoes are highly recommended.
- Do not erect your shed in windy conditions.
- It is highly recommended to erect the shed with two or more people.

RECOMMENDED




























COMPONENT PACKING LIST

Check off all components.













MAIN PACK CARTON (PACK 1 OF 3)							
QTY	COMPONENT DESCRIPTION	PART No.	CHECK	QTY	COMPONENT DESCRIPTION	PART No.	CHECK
1	 STEEL SHEET 1915mm X 773mm	36L		2	 STEEL SHEET 1725mm X 711mm	37A	
1	 STEEL SHEET 2045mm X 773mm	38L		1	 STEEL SHEET 1785mm X 731mm	32A	
16	 STEEL SHEET 1546mm X 773mm	45A		1	 STEEL SHEET 1785mm X 731mm	33A	
2	 STEEL SHEET 1725mm X 773mm	25A		2	 STEEL SHEET 1785mm X 329mm	39B	
1	 STEEL SHEET 1725mm X 773mm	B		1	 PEAK BRACE	15A	
1	GABLE L/H L=1475mm 	16L		2	 RIDGE BEAM L = 1521mm	97AL	
1	GABLE R/H L=1475mm 	16R		2	 RIDGE BEAM L = 1521mm	97AR	
1	FITTINGS & ACCESSORIES PACKET (SEE PG 4)			3	 RIDGE BEAM JOINER L: 450mm (17.7")	ZARSP	

Nominal sheet widths are shown. +/- 2mm is within tolerance.















COMPONENT PACKING LIST

FITTINGS & ACCESSORIES PACKET CONTENTS							
QTY	COMPONENT DESCRIPTION	PART No.	CHECK	QTY	COMPONENT DESCRIPTION	PART No.	CHECK
3	 DOOR STRAP L: 165mm	12A		18	 CHANNEL JOINER L= 200mm (7.9")	CSJ	
2	 CAP GABLE L: 170mm	14A		5	 RIDGE PLATES	RBP	
1	 RIDGE CAP JOINER	98A		4	 JAMB L= 75mm	93B	
1	PSTKDBL DOUBLE DOOR FITTINGS PACK			1	PSTKSGL SINGLE DOOR FITTINGS PACK		
20	 HEX HD TEK SCREW W/ NEO WASHER 10-16x16mm	FAST033		1	ASSEMBLY INSTRUCTION MANUAL		
PSTKDBL - DOUBLE DOOR FITTINGS PACK							
3	 PADBOLT 115mm LONG	FAST006		2	 PADBOLT HASP	FAST007	
1	 8G x 3/8 SELF TAPPING SCREWS x 220	PACK220		1	 SCREW PACK 12	PACK12P	
1	 3mm DRILL BIT	DRILL		1	 PHILLIPS HEAD DRIVER BIT S2 PH2	FAST038	
PACK12P - SCREW PACK 12							
12	 SBS43E POP RIVET	FAST009		12	 3/16" x 1/2" COUNTERSUNK SCREW & NUT	FAST004 FAST005	
8	 3/16 x 1/2 PAN HEAD SCREW	FAST002		8	 3/16 NYLOCK NUT	FAST003	
PSTKSGL - SINGLE DOOR FITTINGS PACK							
1	 PADBOLT 115mm LONG	FAST006		1	 PADBOLT HASP	FAST007	
1	 8G x 3/8 SELF TAPPING SCREWS x 220	PACK220		1	 SCREW PACK 6	PACK6P	
1	 3mm DRILL BIT	DRILL		1	 PHILLIPS HEAD DRIVER BIT S2 PH2	FAST038	
PACK6P - SCREW PACK 6							
6	 SBS43E POP RIVET	FAST009		6	 3/16" x 1/2" COUNTERSUNK SCREW & NUT	FAST004 FAST005	




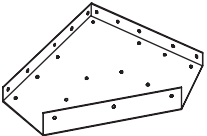

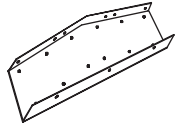

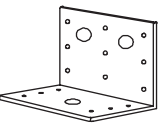








COMPONENT PACKING LIST

MAIN PACK CARTON (PACK 2 OF 3)							
QTY	COMPONENT DESCRIPTION	PART No.	CHECK	QTY	COMPONENT DESCRIPTION	PART No.	CHECK
1	 STEEL SHEET 1915mm X 773mm	36R		10	 STEEL SHEET 1785mm X 773mm	31A	
1	 STEEL SHEET 2045mm X 773mm	38R		1	PORTAL PACK (SEE BELOW)	PF	
3	 STEEL SHEET 1785mm X 773mm	30A		1	3060UTK CHANNEL SET (SEE PGs 7&8)		
PORTAL PACK CONTENTS (80mm X 40mm CHANNEL SECTIONS)							
QTY	COMPONENT DESCRIPTION	PART No.	CHECK	QTY	COMPONENT DESCRIPTION	PART No.	CHECK
4	 CHANNEL L = 1482mm	C1482		4	 CHANNEL L = 1704mm	C1704	
PORTAL FRAME ACCESSORIES							
4	 KNEE PLATE			8	 10mm DYNABOLTS		
4	 APEX PLATE			300	 16mm TEK SCREWS		
4	 MULTI PURPOSE BRACKET			80	 45mm TEK SCREWS		















COMPONENT PACKING LIST

MAIN PACK (PACK 2 OF 3) CHANNEL SET							
QTY	COMPONENT DESCRIPTION	PART No.	CHECK	QTY	COMPONENT DESCRIPTION	PART No.	CHECK
3	 CHANNEL L = 1496.5mm	55BL		3	 CHANNEL L = 1496.5mm	55BR	
1	 CHANNEL L = 1496.5mm	56AL		1	 CHANNEL L = 1496.5mm	56AR	
1	 CHANNEL L = 1496.5mm	56BL		1	 CHANNEL L = 1496.5mm	56BR	
4	 CHANNEL L = 1496.5mm	60AL		4	 CHANNEL L = 1496.5mm	60AR	
1	 CHANNEL L = 1496.5mm	77CL		1	 CHANNEL L = 1496.5mm	77CR	
5	 CHANNEL L = 1496.5mm	81AL		5	 CHANNEL L = 1496.5mm	81AR	
3	 CHANNEL L = 1496.5mm	81BL		3	 CHANNEL L = 1496.5mm	81BR	

COMPONENT PACKING LIST


MAIN PACK (PACK 2 OF 3) CHANNEL SET (CONT.)							
QTY	COMPONENT DESCRIPTION	PART No.	CHECK	QTY	COMPONENT DESCRIPTION	PART No.	CHECK
3	 CHANNEL WITH HINGES L = 1725mm	58A		3	 JAMB L= 1785mm	89A	
2	 CHANNEL L = 1725mm	58B		1	 JAMB L= 1785mm	89B	
2	 CHANNEL L = 773mm	58C		1	 JAMB L= 1725mm	89C	
4	 CHANNEL L = 1155mm	63A		1	 JAMB L= 788mm	90B	
1	 CHANNEL L = 788mm	79B		2	 JAMB L= 1120mm	91A	
2	 CHANNEL L = 329mm	81M		1	 JAMB L= 1537mm	93L	
1	 CHANNEL L = 1518mm	84L		1	 JAMB L= 797mm	93R	
1	 CHANNEL L = 1518mm	84R		4	 LIP TRIM L= 1546mm	87A	

COMPONENT PACKING LIST

FRONT FRAME PACK (PACK 3 OF 3)							
QTY	COMPONENT DESCRIPTION	PART No.	CHECK	QTY	COMPONENT DESCRIPTION	PART No.	CHECK
2	 CHANNEL L = 2300mm	C2300		8	 CHANNEL L = 285mm	K0285	
2	 CHANNEL L = 1820mm	N1820		2	 CHANNEL L = 240mm	C0240	
2	 CHANNEL L = 1785mm	C1785		2	 CHANNEL L = 100mm	C0100	
2	 CHANNEL L = 1484mm	M1484					
QTY	COMPONENT DESCRIPTION	PART No.	CHECK	QTY	COMPONENT DESCRIPTION	PART No.	CHECK
1	 HAT= 2290mm	99A		1	 SMALL TRIANGULAR PLATE		
4	 HAT= 1350mm	99B		150	 SELF DRILLING 16mm TEK SCREWS		
10	 MULTI PURPOSE BRACKET			1	 PHILLIPS HEAD DRIVER BIT		
6	 10mm DYNABOLTS						

Guide on Splitting Sheets

- This product comes with a perforated sheet that is designed to be split into two smaller sheets.
- **These sheets have sharp edges. Once separated please use appropriate foot and hand protection when handling.**
- In order to split the sheet lay it on the ground and lift and fold one end until the perforations have cleanly snapped.
- Discard the middle piece as scrap when convenient. Fold the scrap piece in half two or three times and throw in garbage.

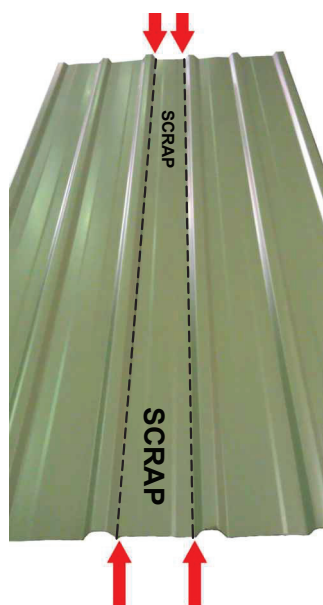


Check sheet for perforations





Fold first side of sheet until free



Fold middle section of sheet until free

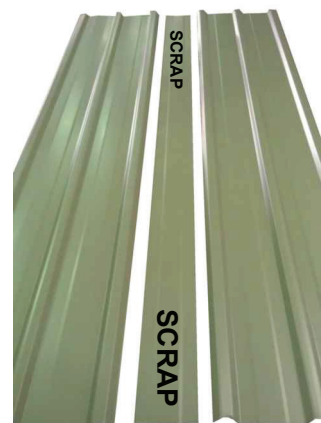

Discard middle piece


SPLITTING SHEET 39B						
QTY	COMPONENT DESCRIPTION	PART No.		QTY	COMPONENT DESCRIPTION	PART No.
1	 STEEL SHEET 1785mm X 773mm	39B	=	2	 STEEL SHEET 1785mm X 329mm	39B

SNAPTITE ASSEMBLY GUIDE

The Snaptite Assembly System locks end channels to all roof and wall sheets without the need for tools and fasteners.

To assemble each panel, the perimeter channels are secured to the top and bottom of each panel. Gently tap the channel over the SNAPTITE lugs on the sheet, working along the sheet.

Each perimeter channel must finish flush with the edges of the sheets. Simply tap the channel along the sheets until each end is neatly flush. If you need to remove channels from the panels, slide it off from the side.

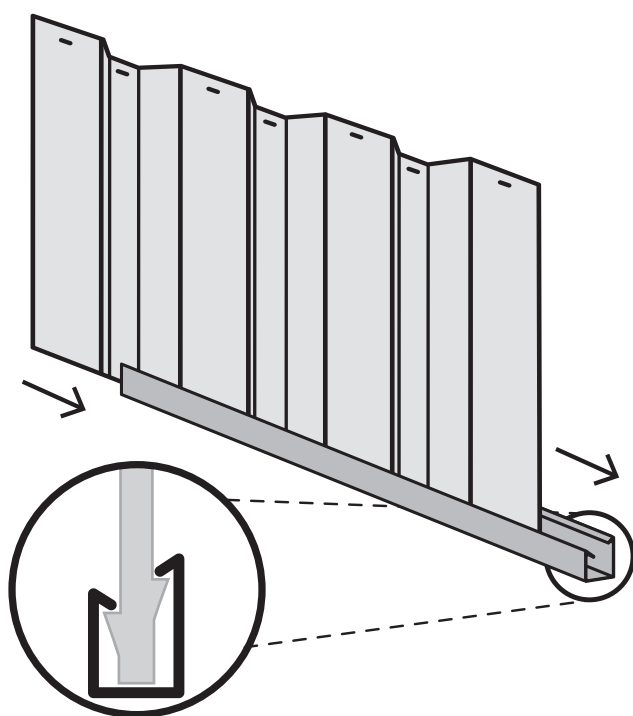

SNAPTITE
World's Easiest Assembly System
UNIQUE PATENTED SYSTEM

Channel locks the shed panel into position without the need for screws!


FASTENING SYMBOLS

SNAPTITE

Secure channel to sheeting by SNAPTITE fastening method.



Join components together with one screw at this location only, as some channels have extra holes that are not required for this model of shed.



Do not join components together at this location yet, as the screws may obstruct further assembly of the other components.



Join components together by pre-drilling the holes first. Use one component as template to mark where the holes are and drill with a 3mm drill bit.



3mm pop rivet



4mm nut and bolt set.


Guide on Joining Spliced Channels

The text marked on all parts must be shown on the same side as each other




Step 1.

Position the channels and the CSJ joiner so the centre of the CSJ is in line with the end of each channel to be joined together.

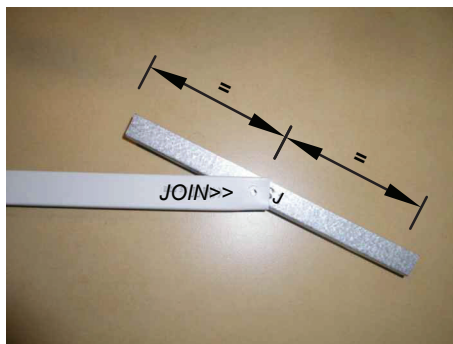


Step 2.

Join the first channel to the CSJ by inserting the centre of the CSJ, on an angle, to the end of the channel where the JOIN>> text is marked.

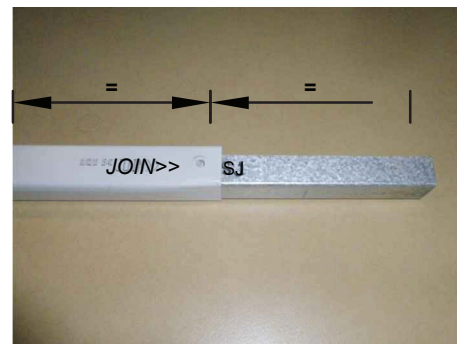


Push down one side of the CSJ until you hear a 'click'.

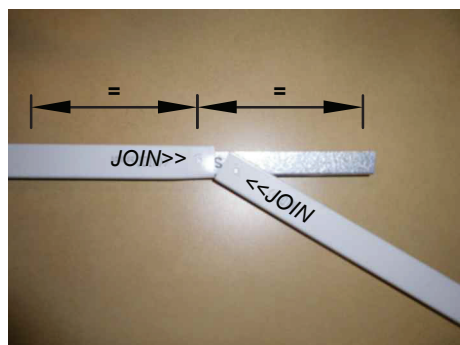

Step 3.


Join the second channel to the CSJ by positioning the <<JOIN of the channel at the centre of the CSJ, on an angle. Push the CSJ into the channel until you hear a 'click'.

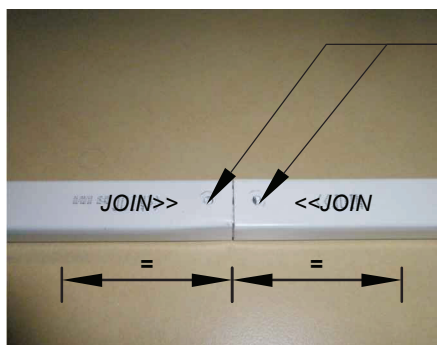


Finished Channel.

The joined channels should now look like the picture with the CSJ positioned equally inside of the joined channels.

Drill out holes with 3mm drill bit in CSJ to match the holes in channel. Drilling of screws on the joined channels is being done after sheets are locked on the spliced channels.

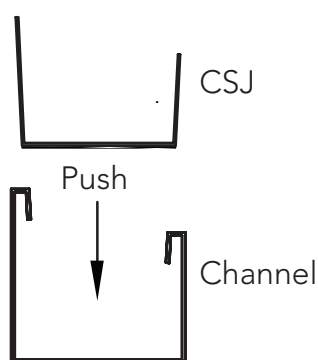


...

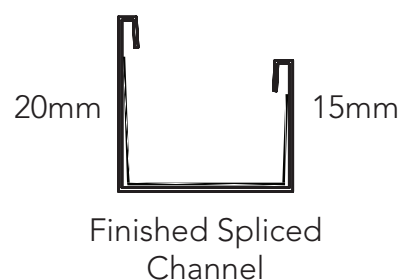

PRE-ASSEMBLY OF SPLICED CHANNELS


Join together 36 x channel sections using 18 x channel joiners (Part CSJ)

NOTE: Some channels may have holes in them - You will need to redrill holes where CSJ joining channel covers them.

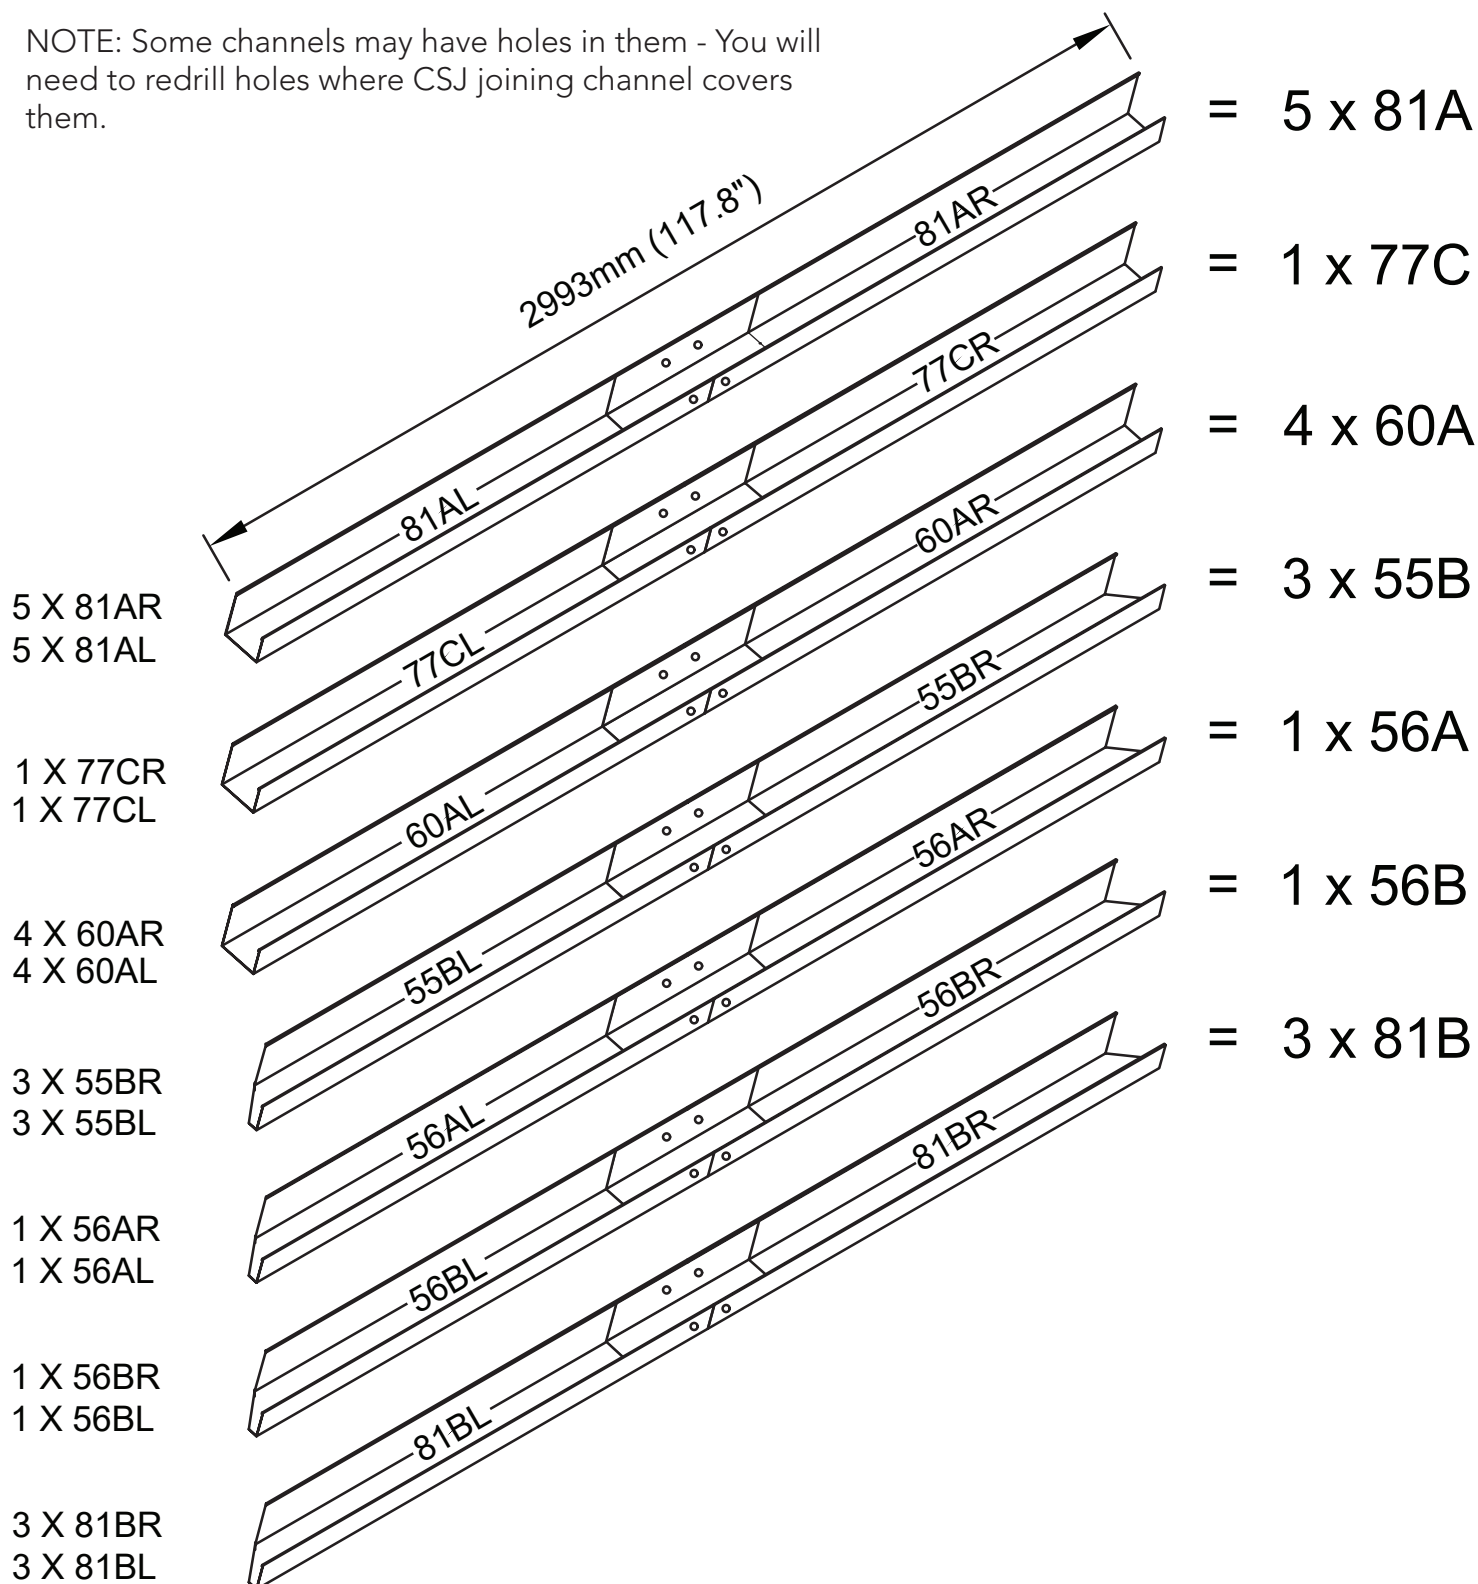


Guide on Joining a Spliced Ridge Beam


Follow these three steps to assemble a ridge beam.

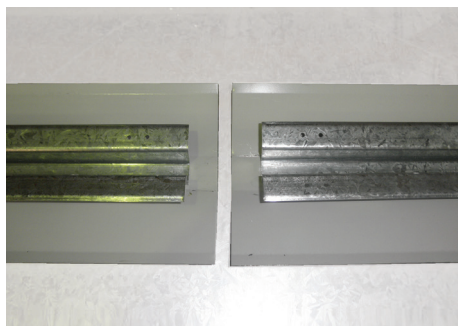

Step 1.
Place two ridge beams as shown and push them together. Slide the cap of one under the other.

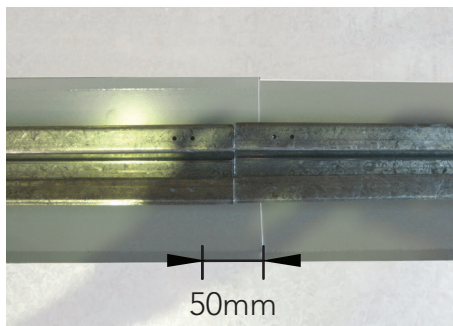

NOTE.
There is a 50mm overlap of the ridge caps when the beams are in position.

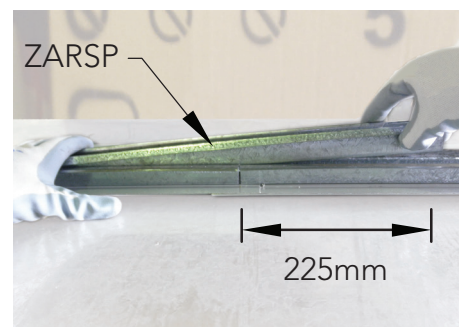

Step 2.
Use the ZARSP to connect at the centre of the two ridge beams. Be sure it is pushed in fully.



Step 3.
Turn over the ridge beam. Measure 250mm from the middle along the centre of one ridge beam, mark spacings of 50mm. Fasten with a Tek screw at each marking.



Repeat to the other side of the ridge beam assembly.

TIP: Predrilling each hole with the 3mm drill bit makes it easier to fasten.




Finished Spliced Ridge Beam



Hex Driver Bit



Hex Hd Self-drilling tek screw
with neoprene washer

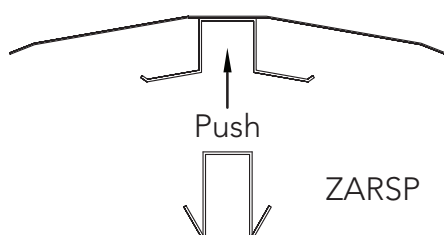


ZARSP





Finished
Joined Ridge Beams

PRE-ASSEMBLY OF SPLICED RIDGE BEAM

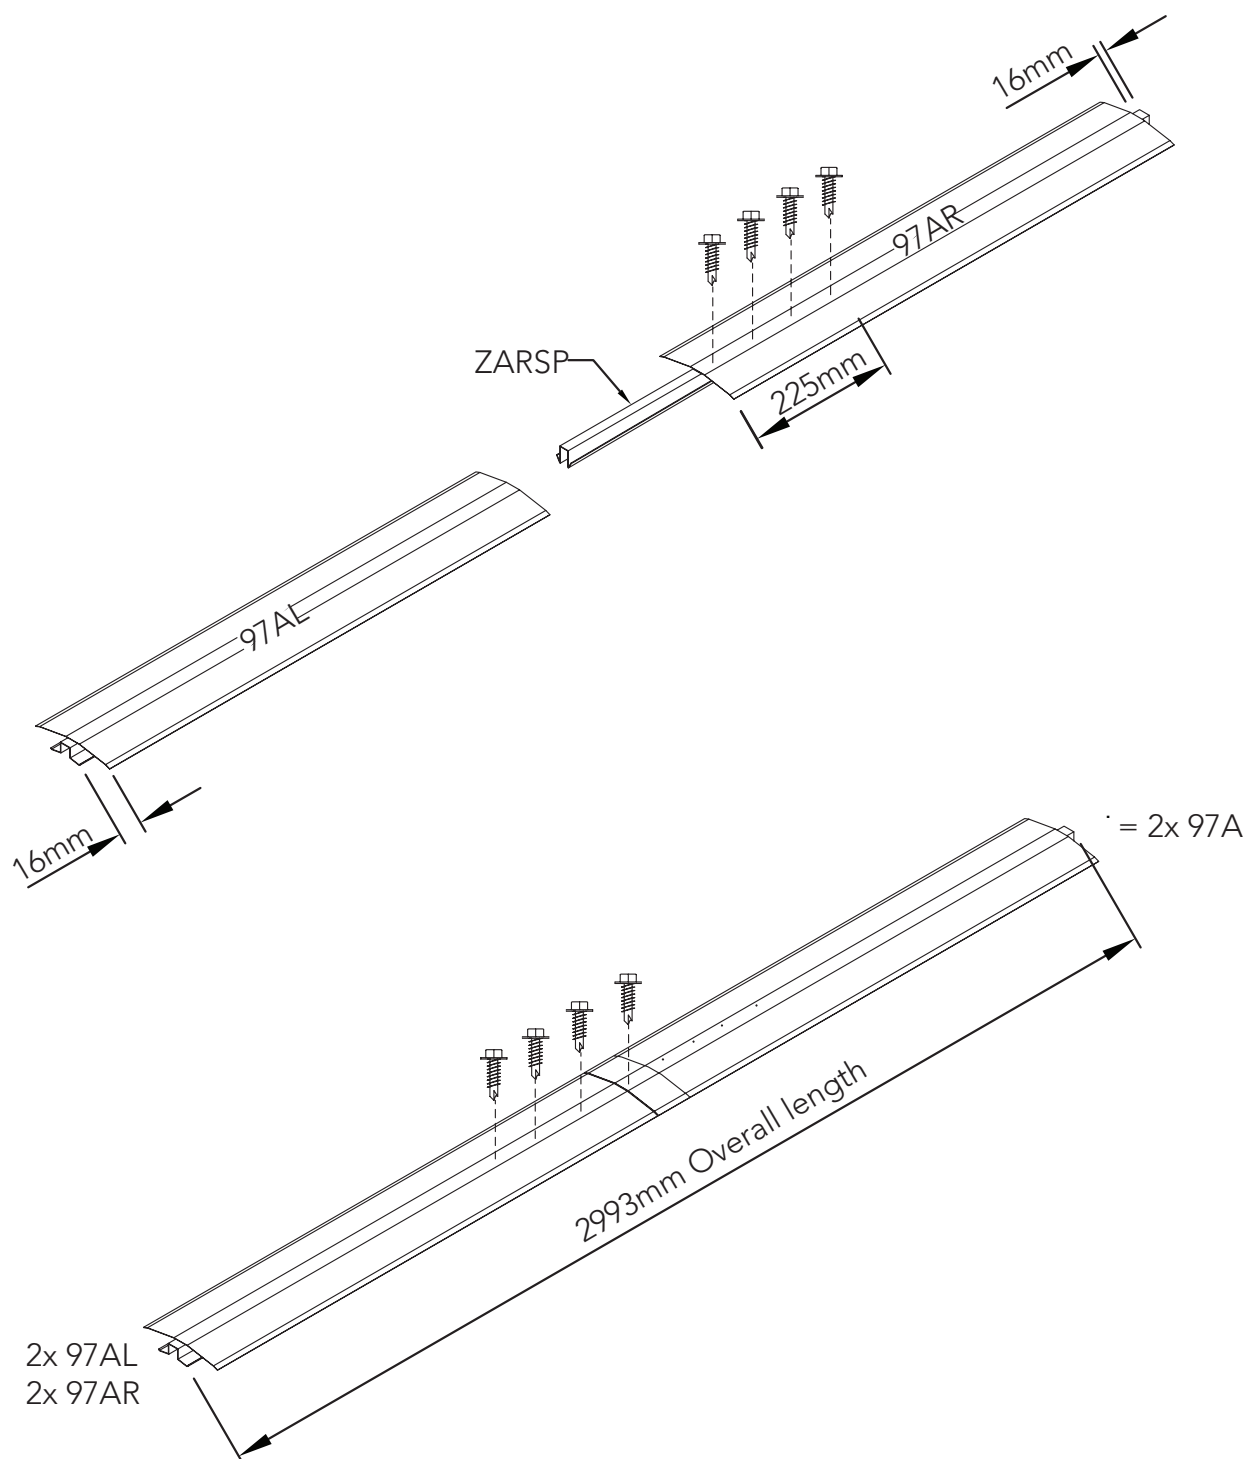

JOINING RIDGE BEAMS


To make the total span we must now join the two ridge beams

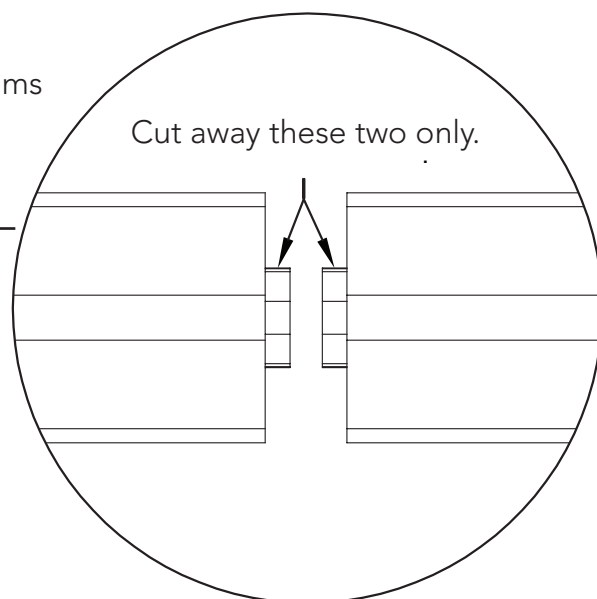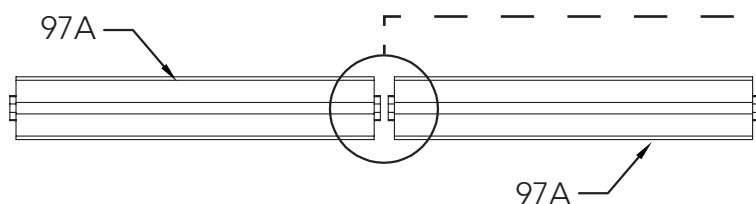

Using a hacksaw, remove one protruding section of each ridge beam, this will allow the sections to butt up neatly to each other.

Insert the ZARSP at an equal distance into each ridge beam. Confirm that the beam is straight with a string line before fastening with self drilling screws.


The ZARSP is a very tight fit, tap into place with a hammer.

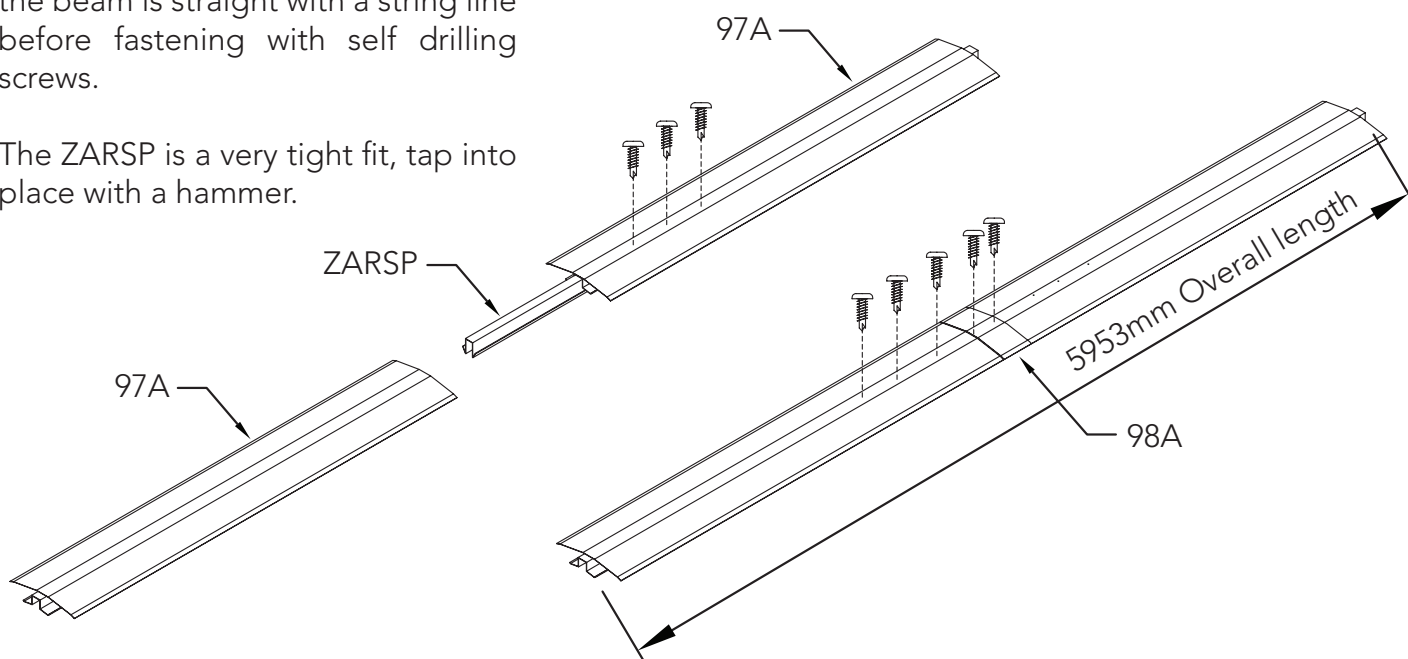

Hex Driver Bit




Hex Hd Self-drilling tek screw
with neoprene washer

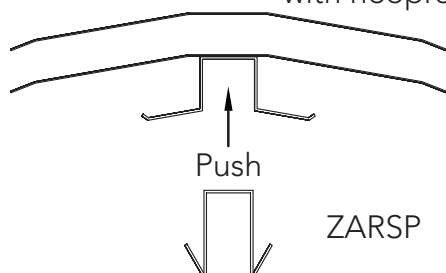


98A

97A




Finished
Joined Ridge Beams

OVERVIEW OF ROOF COMPONENTS

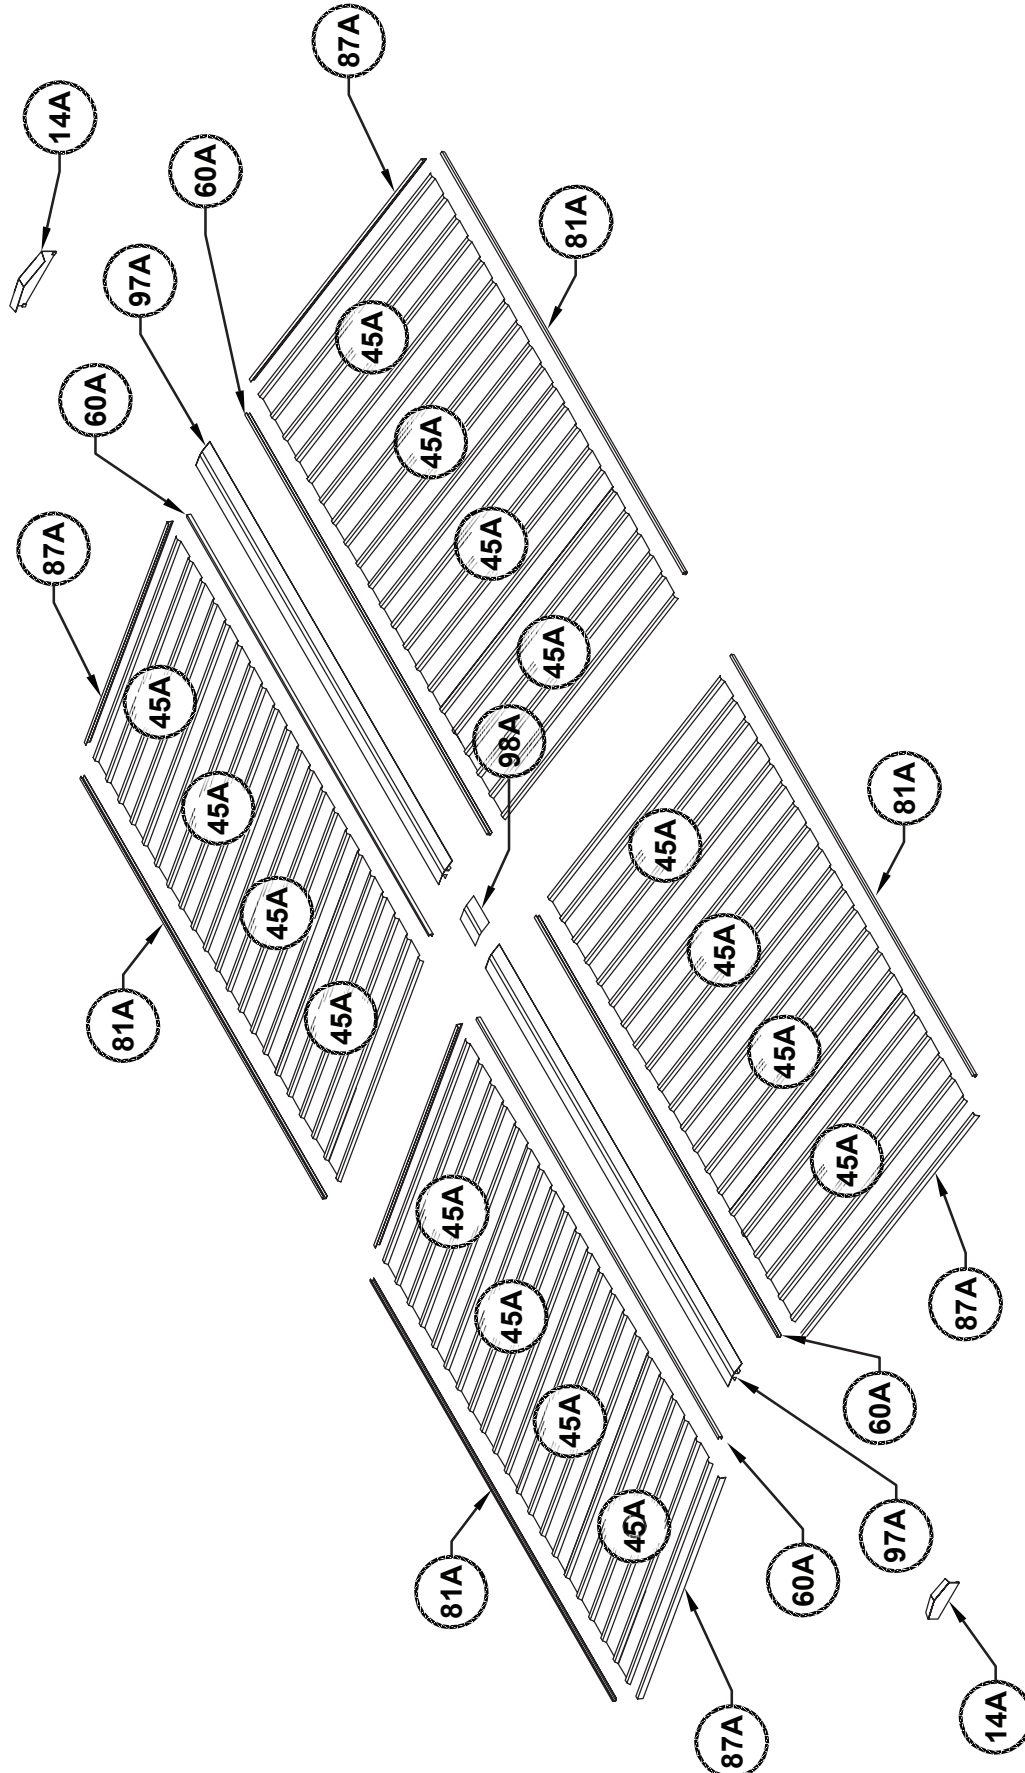

OVERVIEW OF WALL COMPONENTS

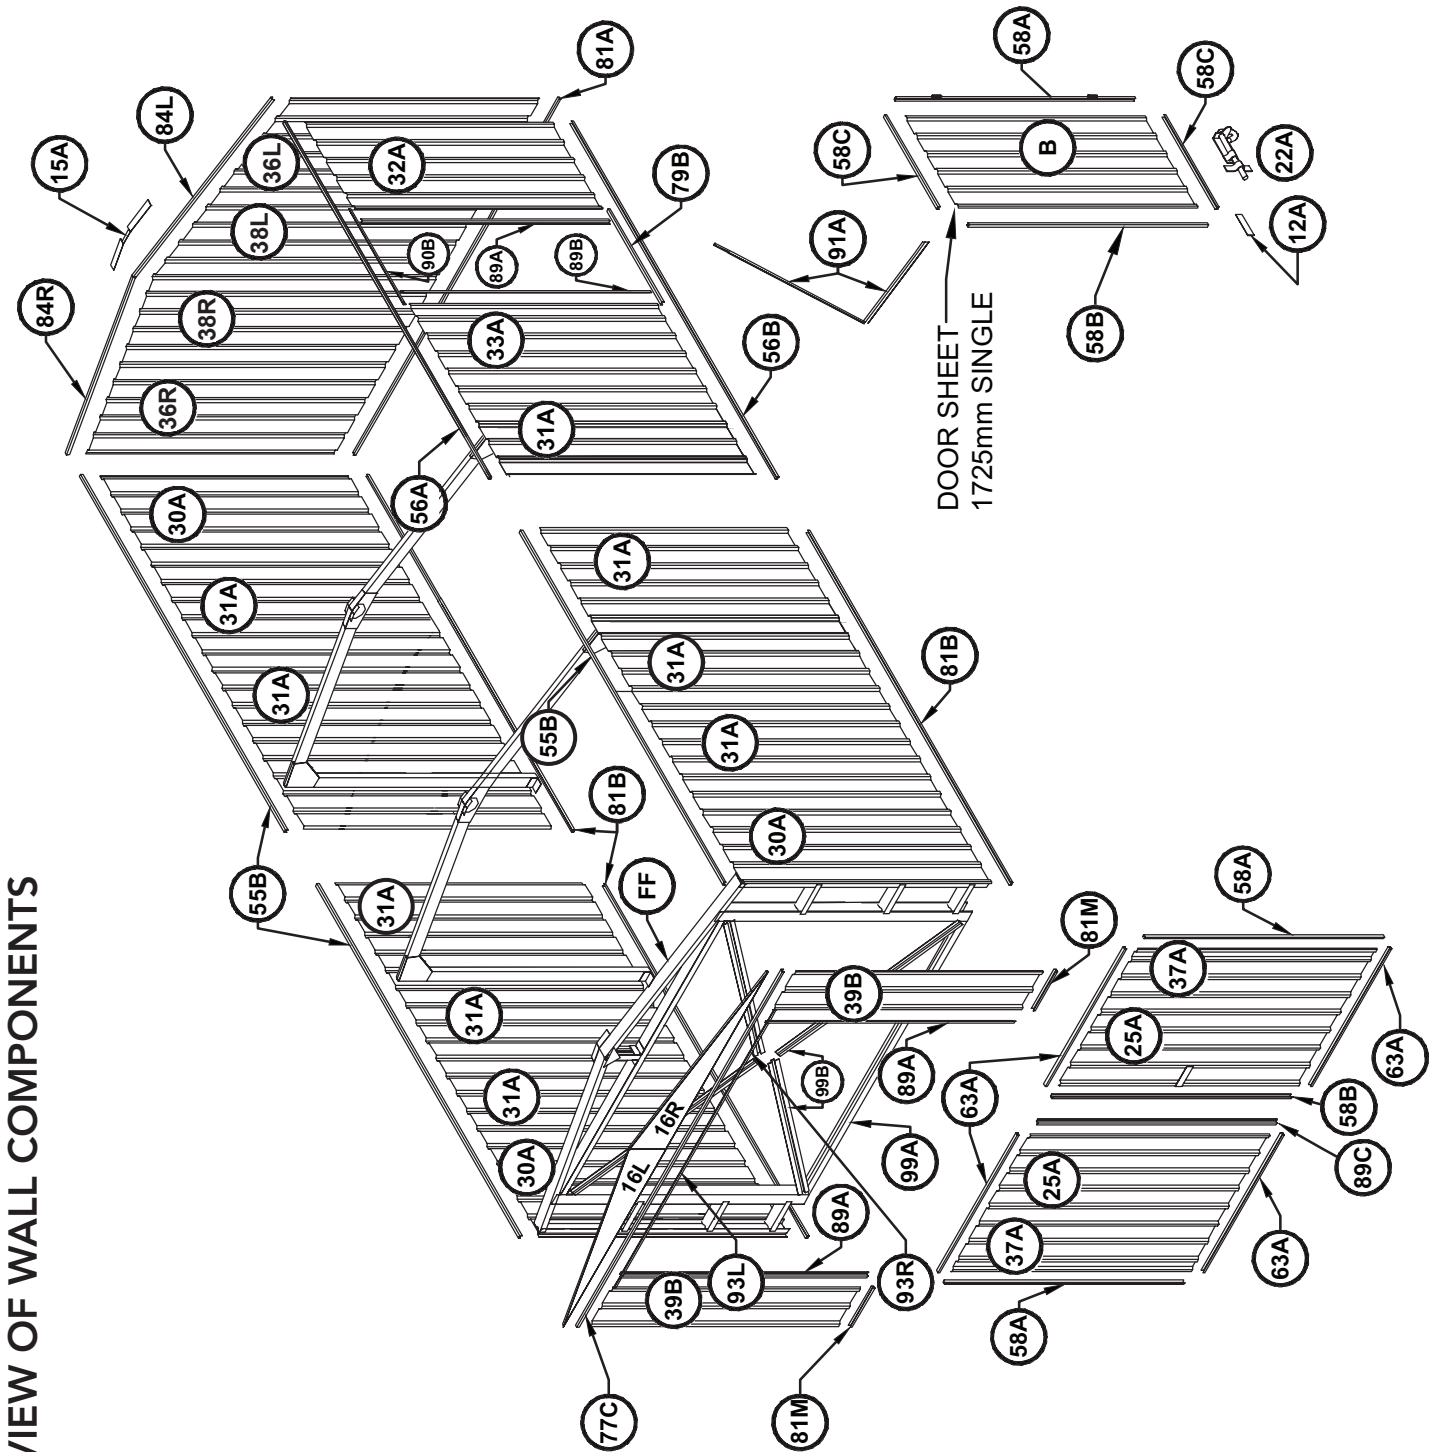


OVERVIEW OF WALL COMPONENTS

ROOF PANEL ASSEMBLY

4 required.


When completed there will be four sections with 87A lip at one end only.

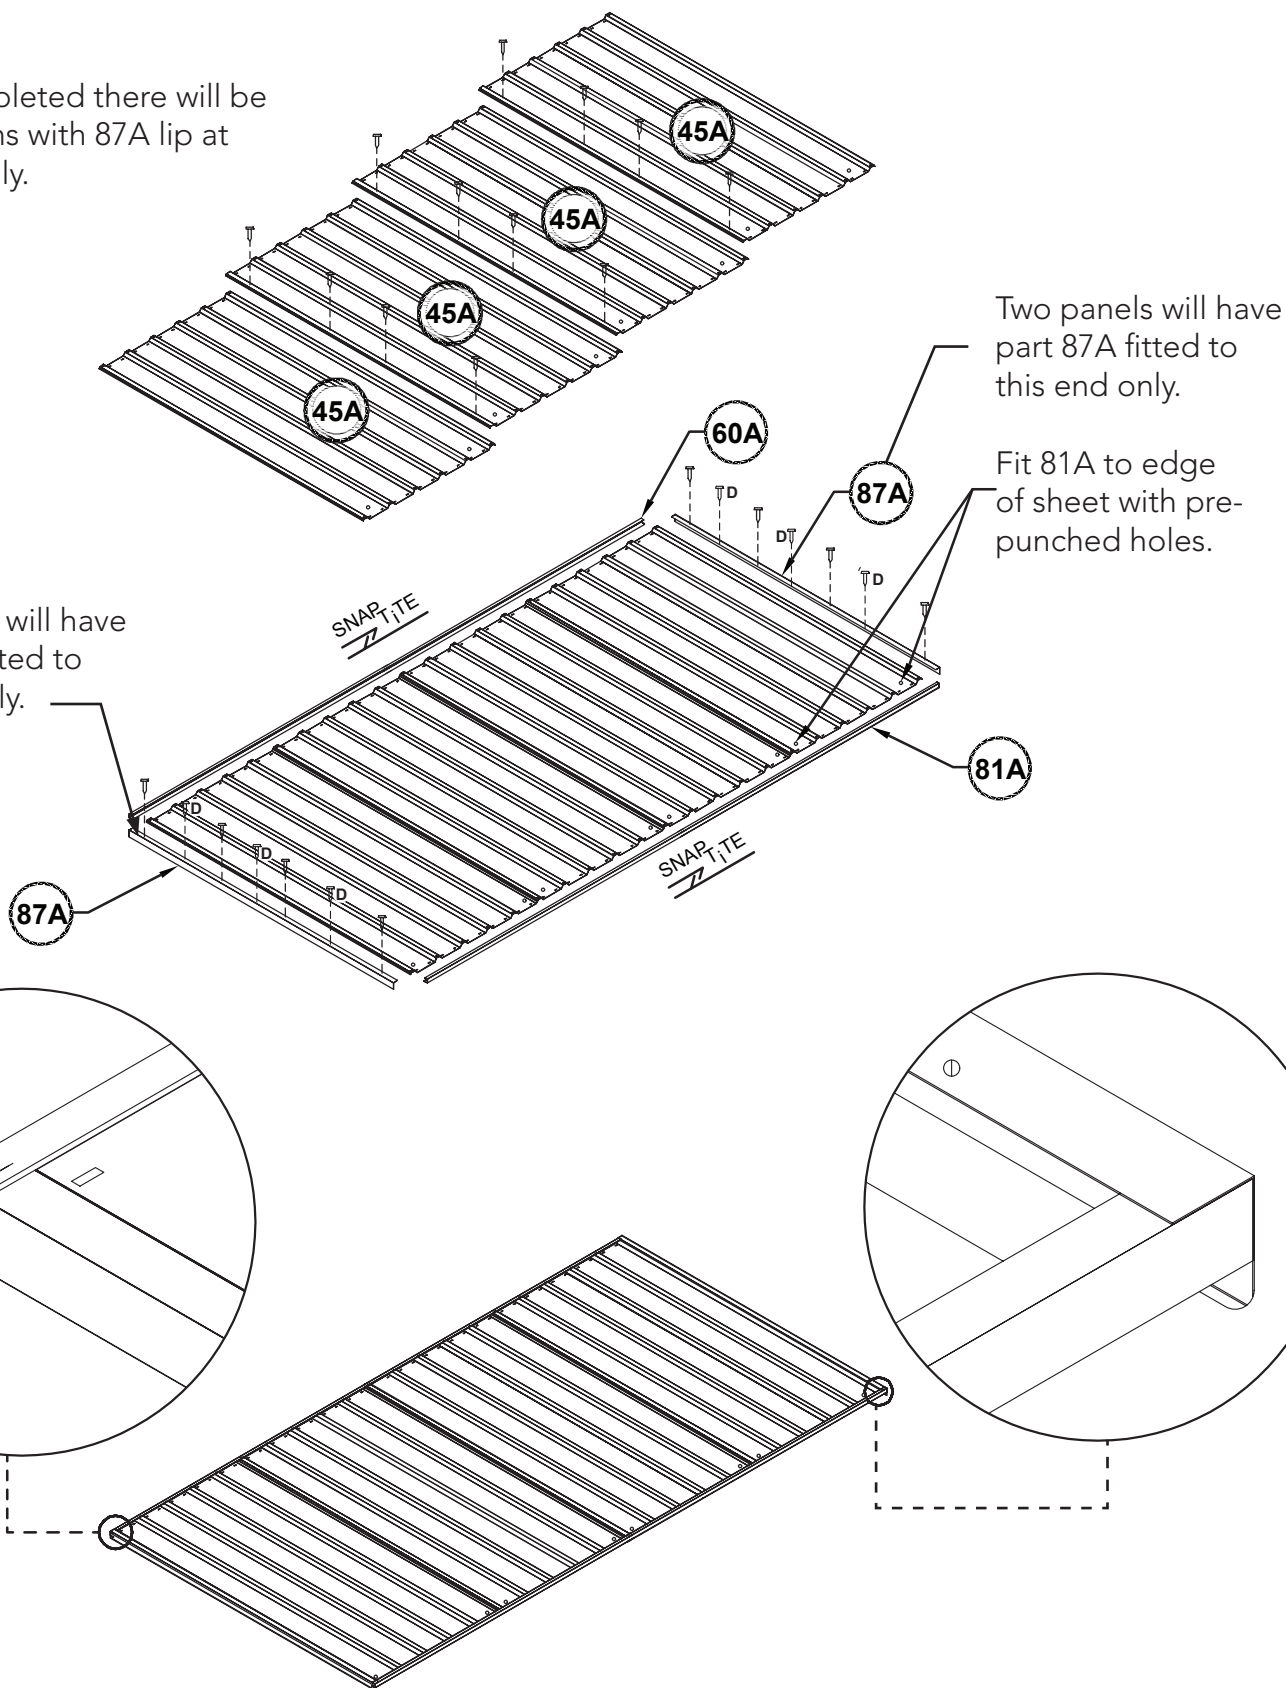


SIDE PANEL ASSEMBLY

3 required.





One panel requires.
Sheet 30A this end.

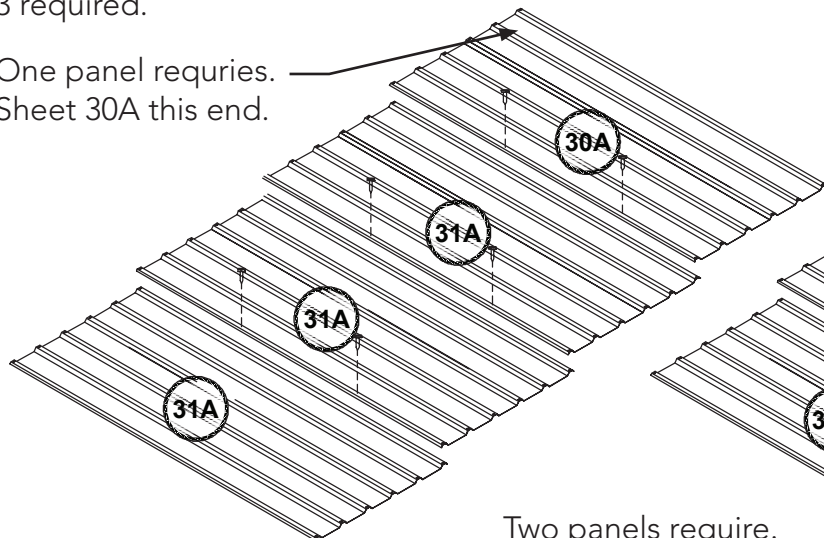

Two panels require.
Sheet 30A this end.

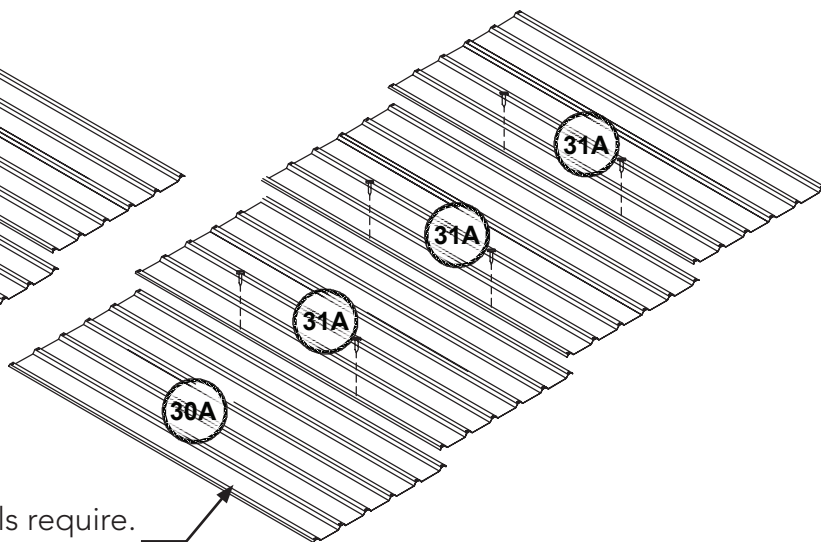


30A is a corner sheet and must be
orientated towards the shed corners
when panels finally joined.

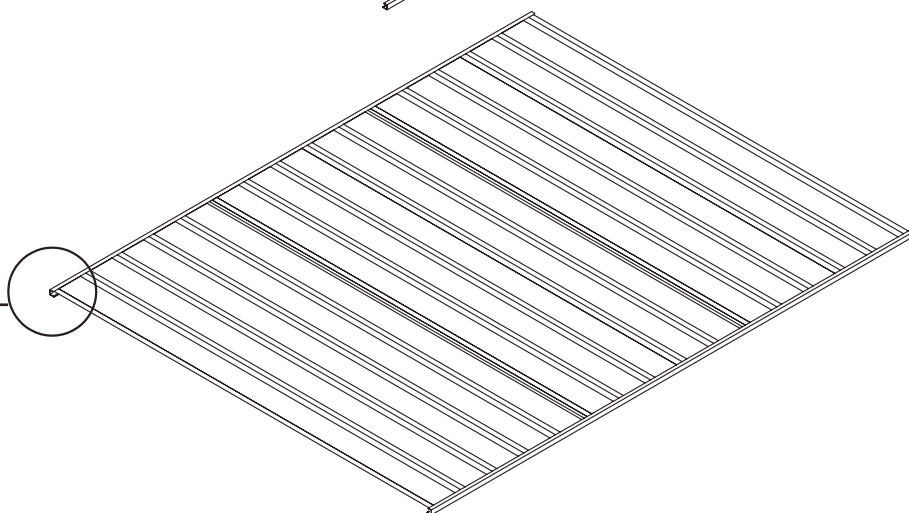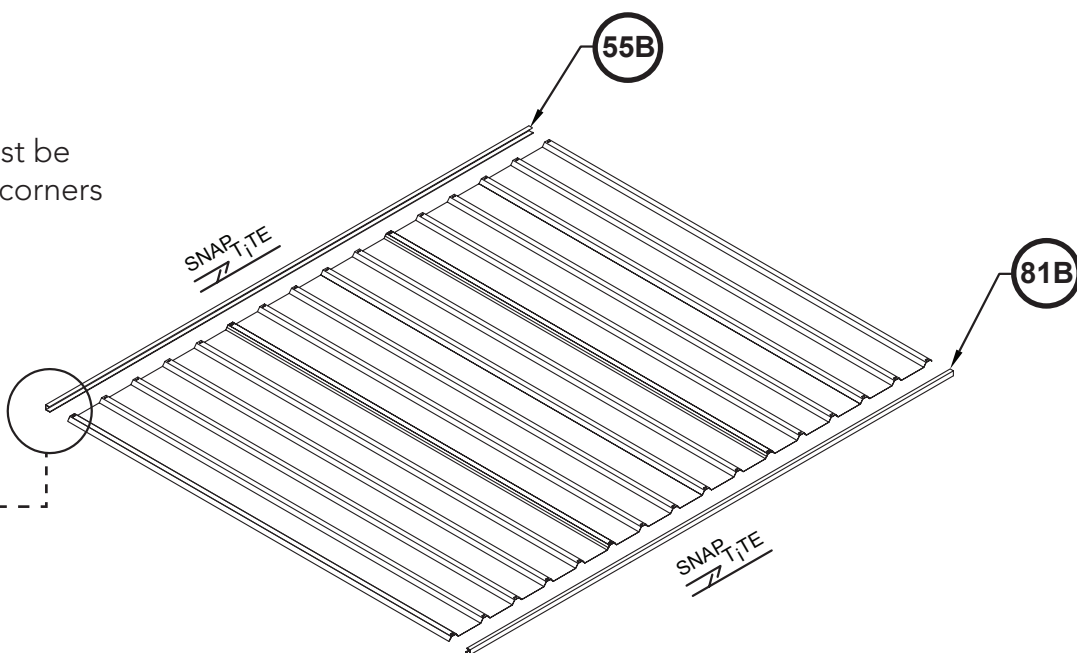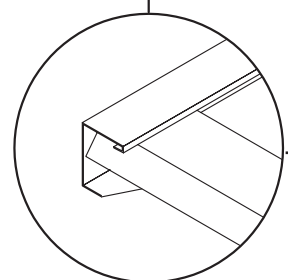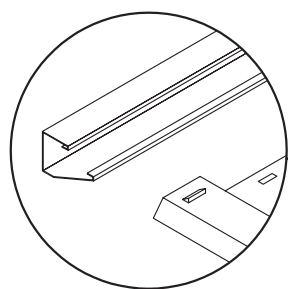

SIDE PANEL ASSEMBLY



SINGLE DOOR PANEL

1 required.

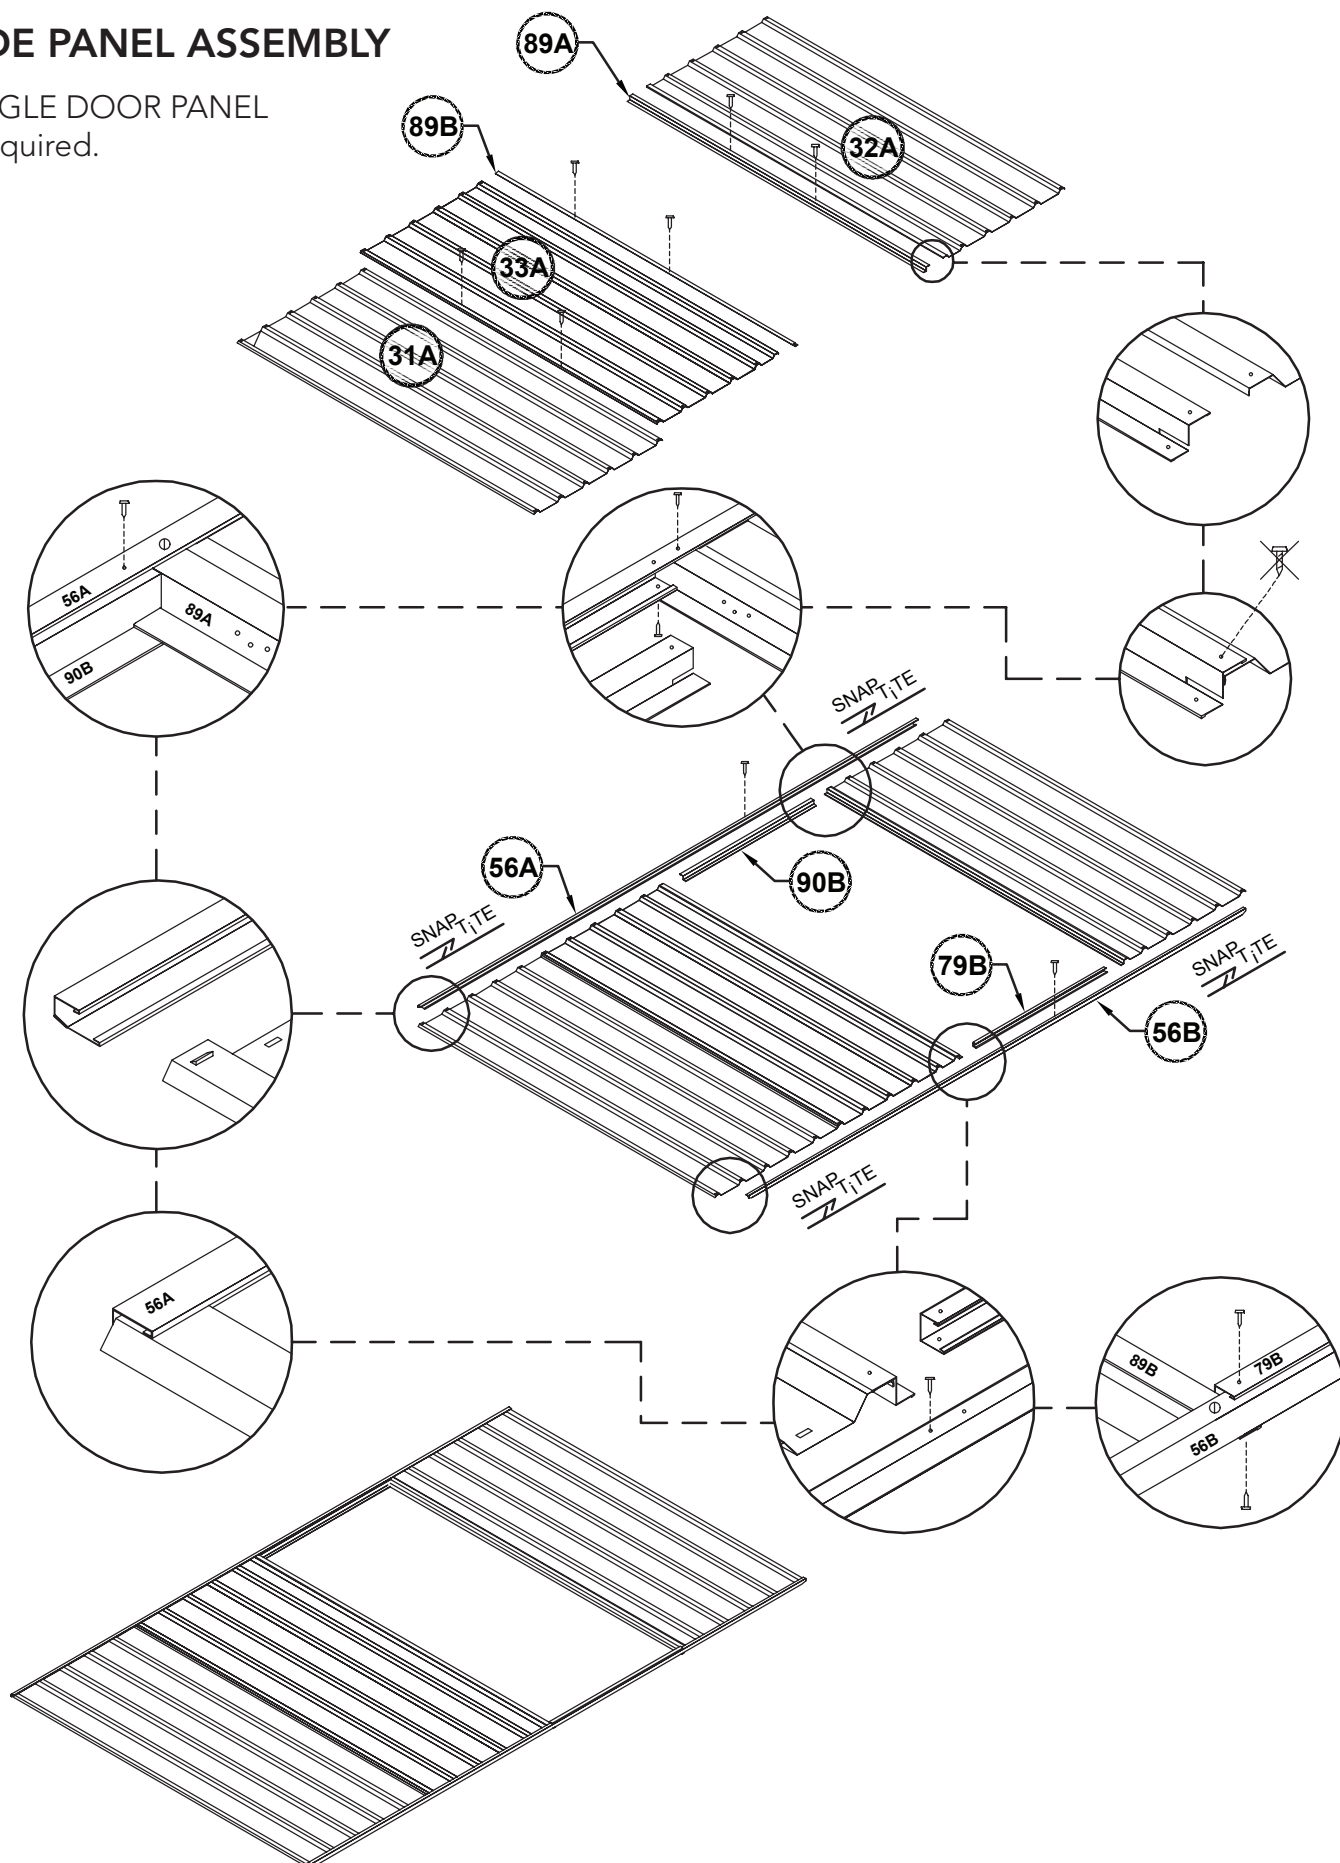

JOINING WALL AND ROOF PANELS

To make the total span we must now join sections of sheeting together for the roof and wall.

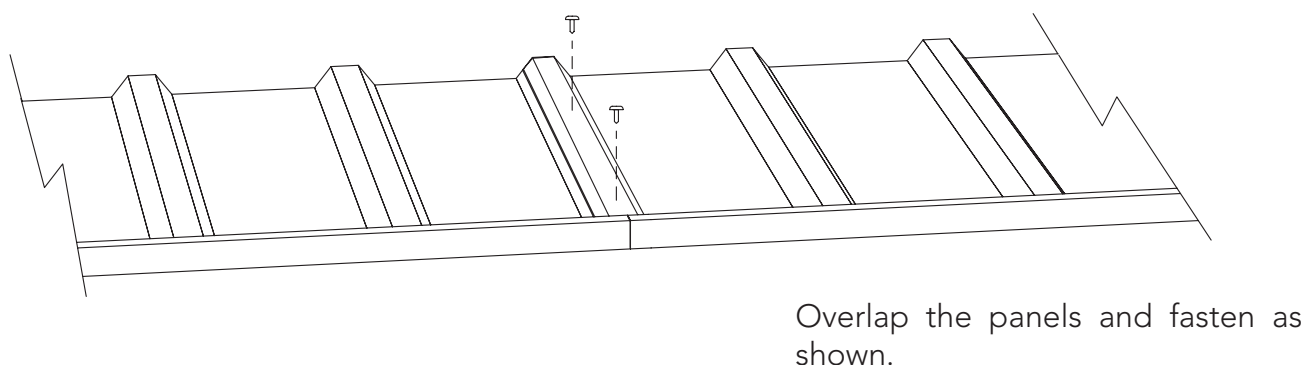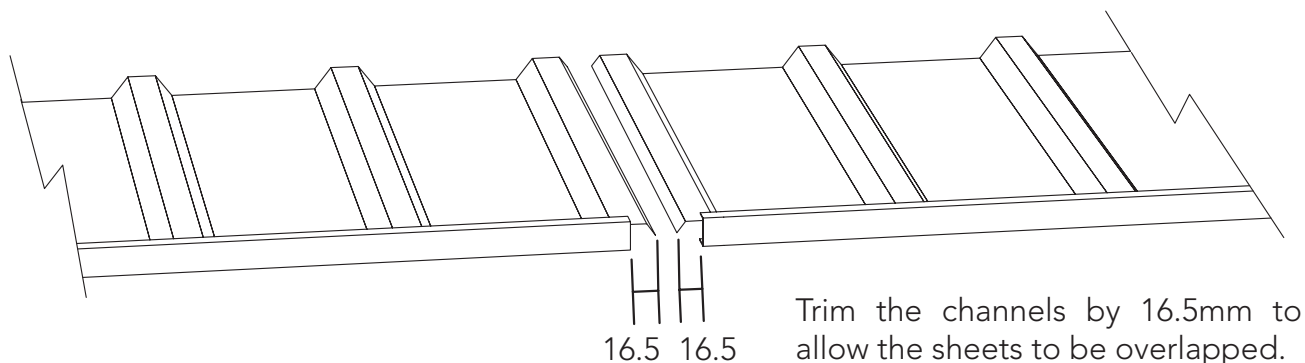


Refer to the panel construction section of this instruction set for further details and ensure that the assembled panels are not joined together with pre-punched holes incorrectly positioned.

The overall length of each panel is the same as the ridge beam.


It is not critical that the overall dimension is exact but try and make sure the length is within 5mm.

DOOR PANEL ASSEMBLY SINGLE DOOR

1 required.

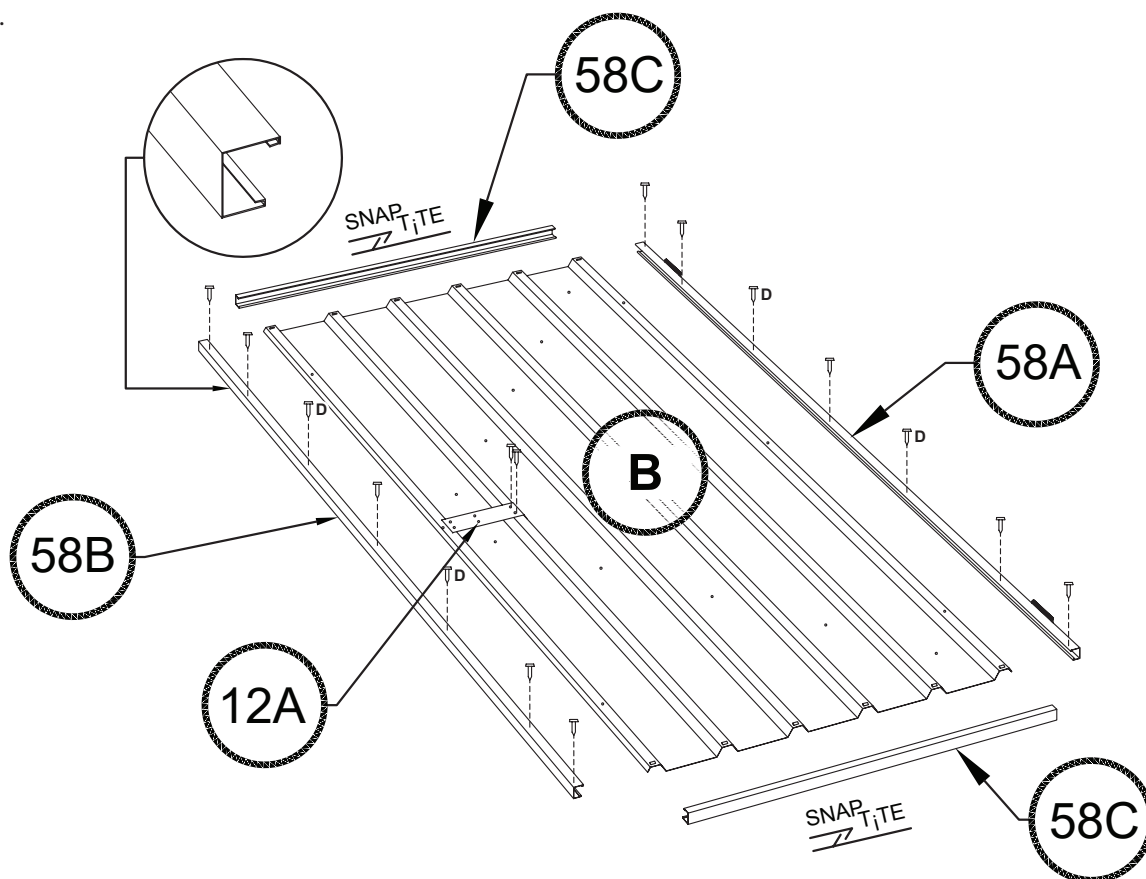


Vertical door channels are installed in the opposite orientation compared to the horizontal door channels.

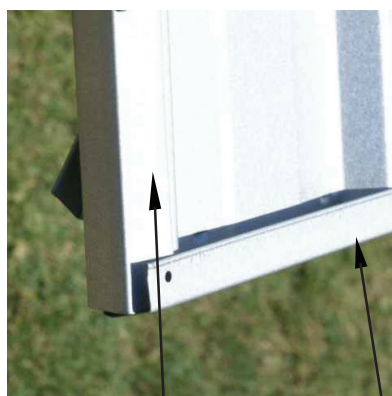


Long flange of channel

Short flange of channel

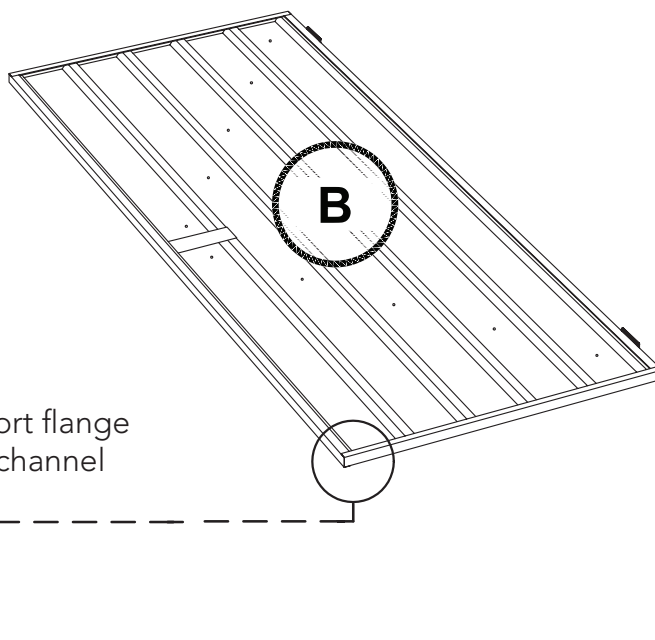


DOOR PANEL ASSEMBLY

SINGLE DOOR PANEL

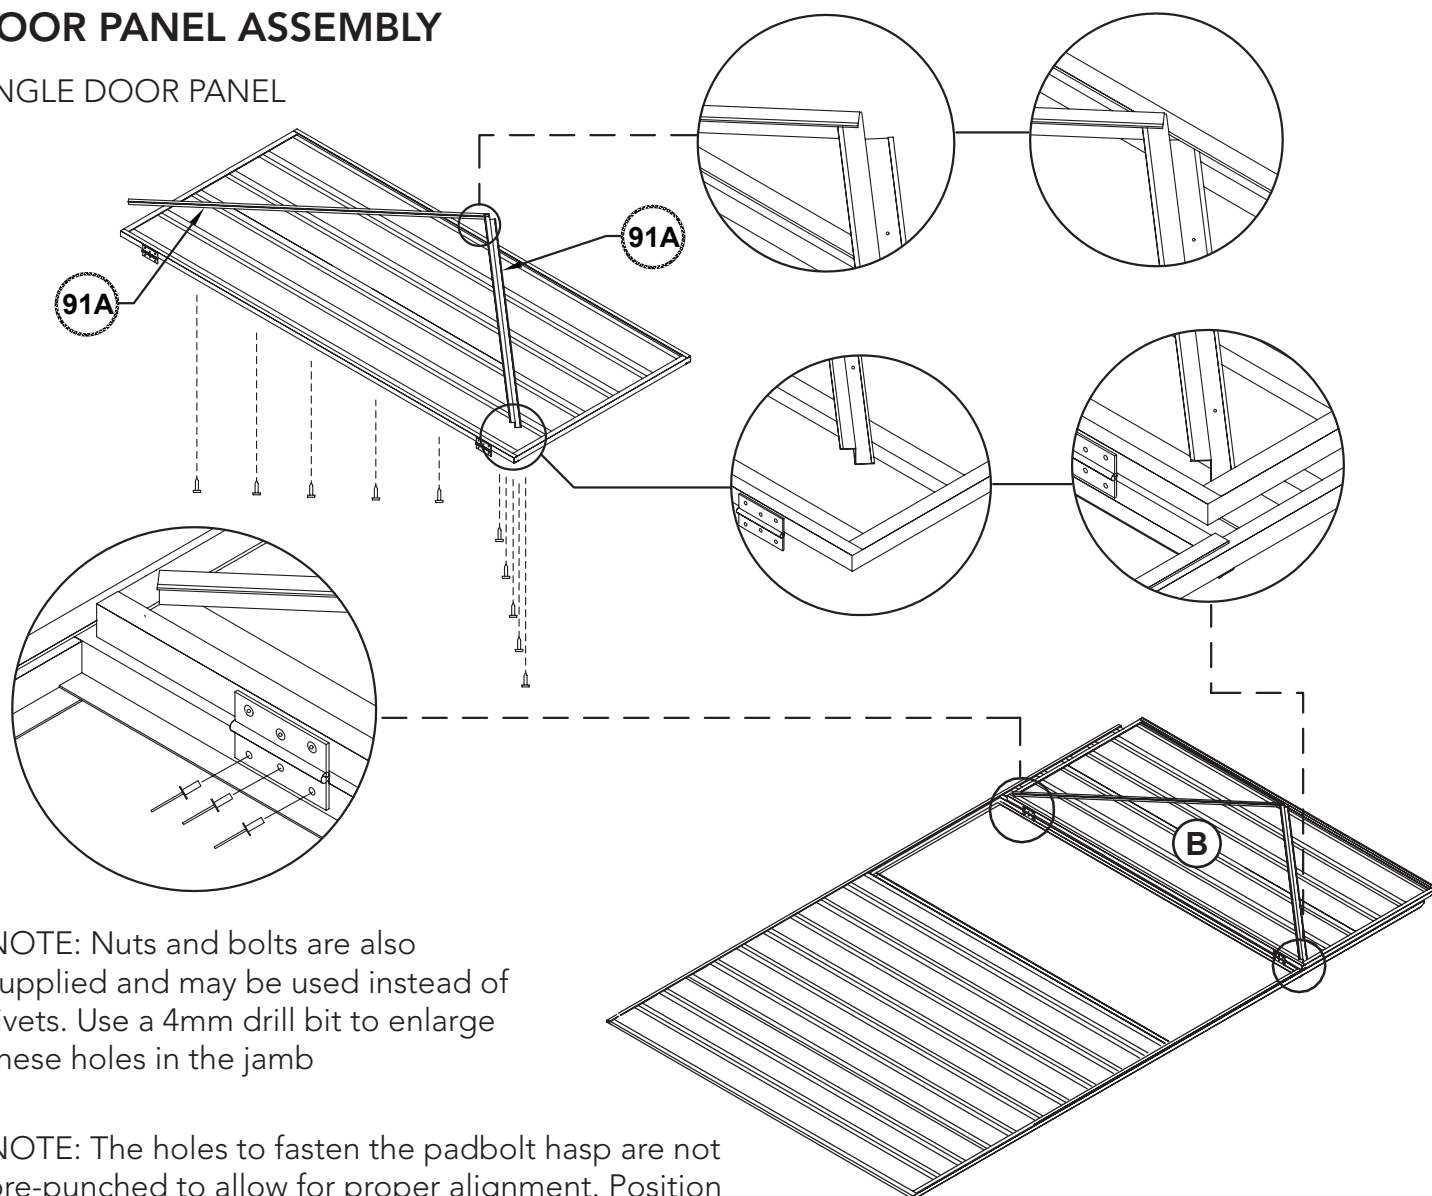


NOTE: Nuts and bolts are also supplied and may be used instead of rivets. Use a 4mm drill bit to enlarge these holes in the jamb

NOTE: The holes to fasten the padbolt hasp are not pre-punched to allow for proper alignment. Position the hasp centrally over the padbolt shaft and drill 3mm holes and secure with screws.

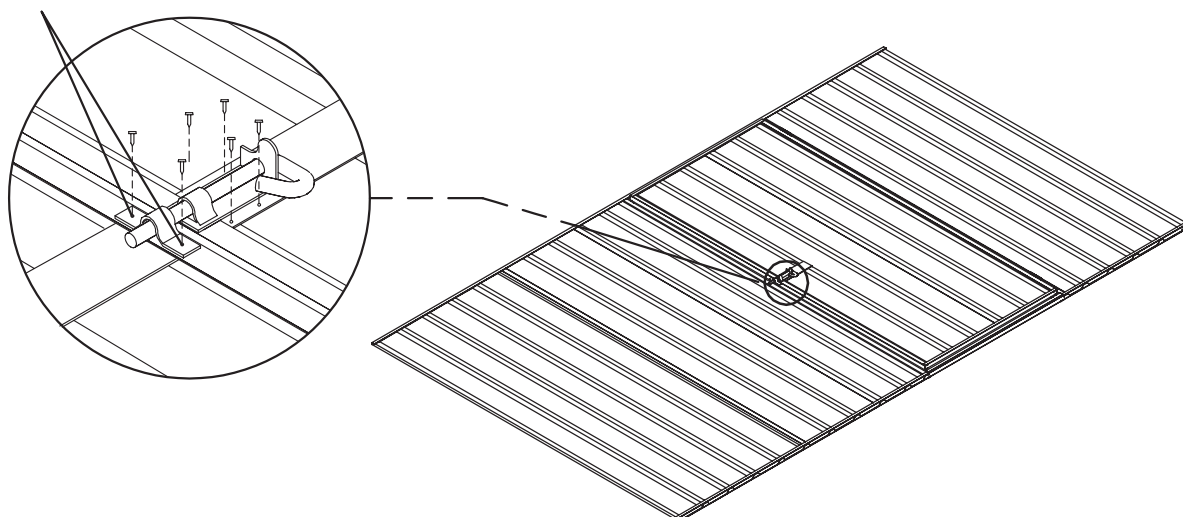

END PANEL ASSEMBLY

1 required.

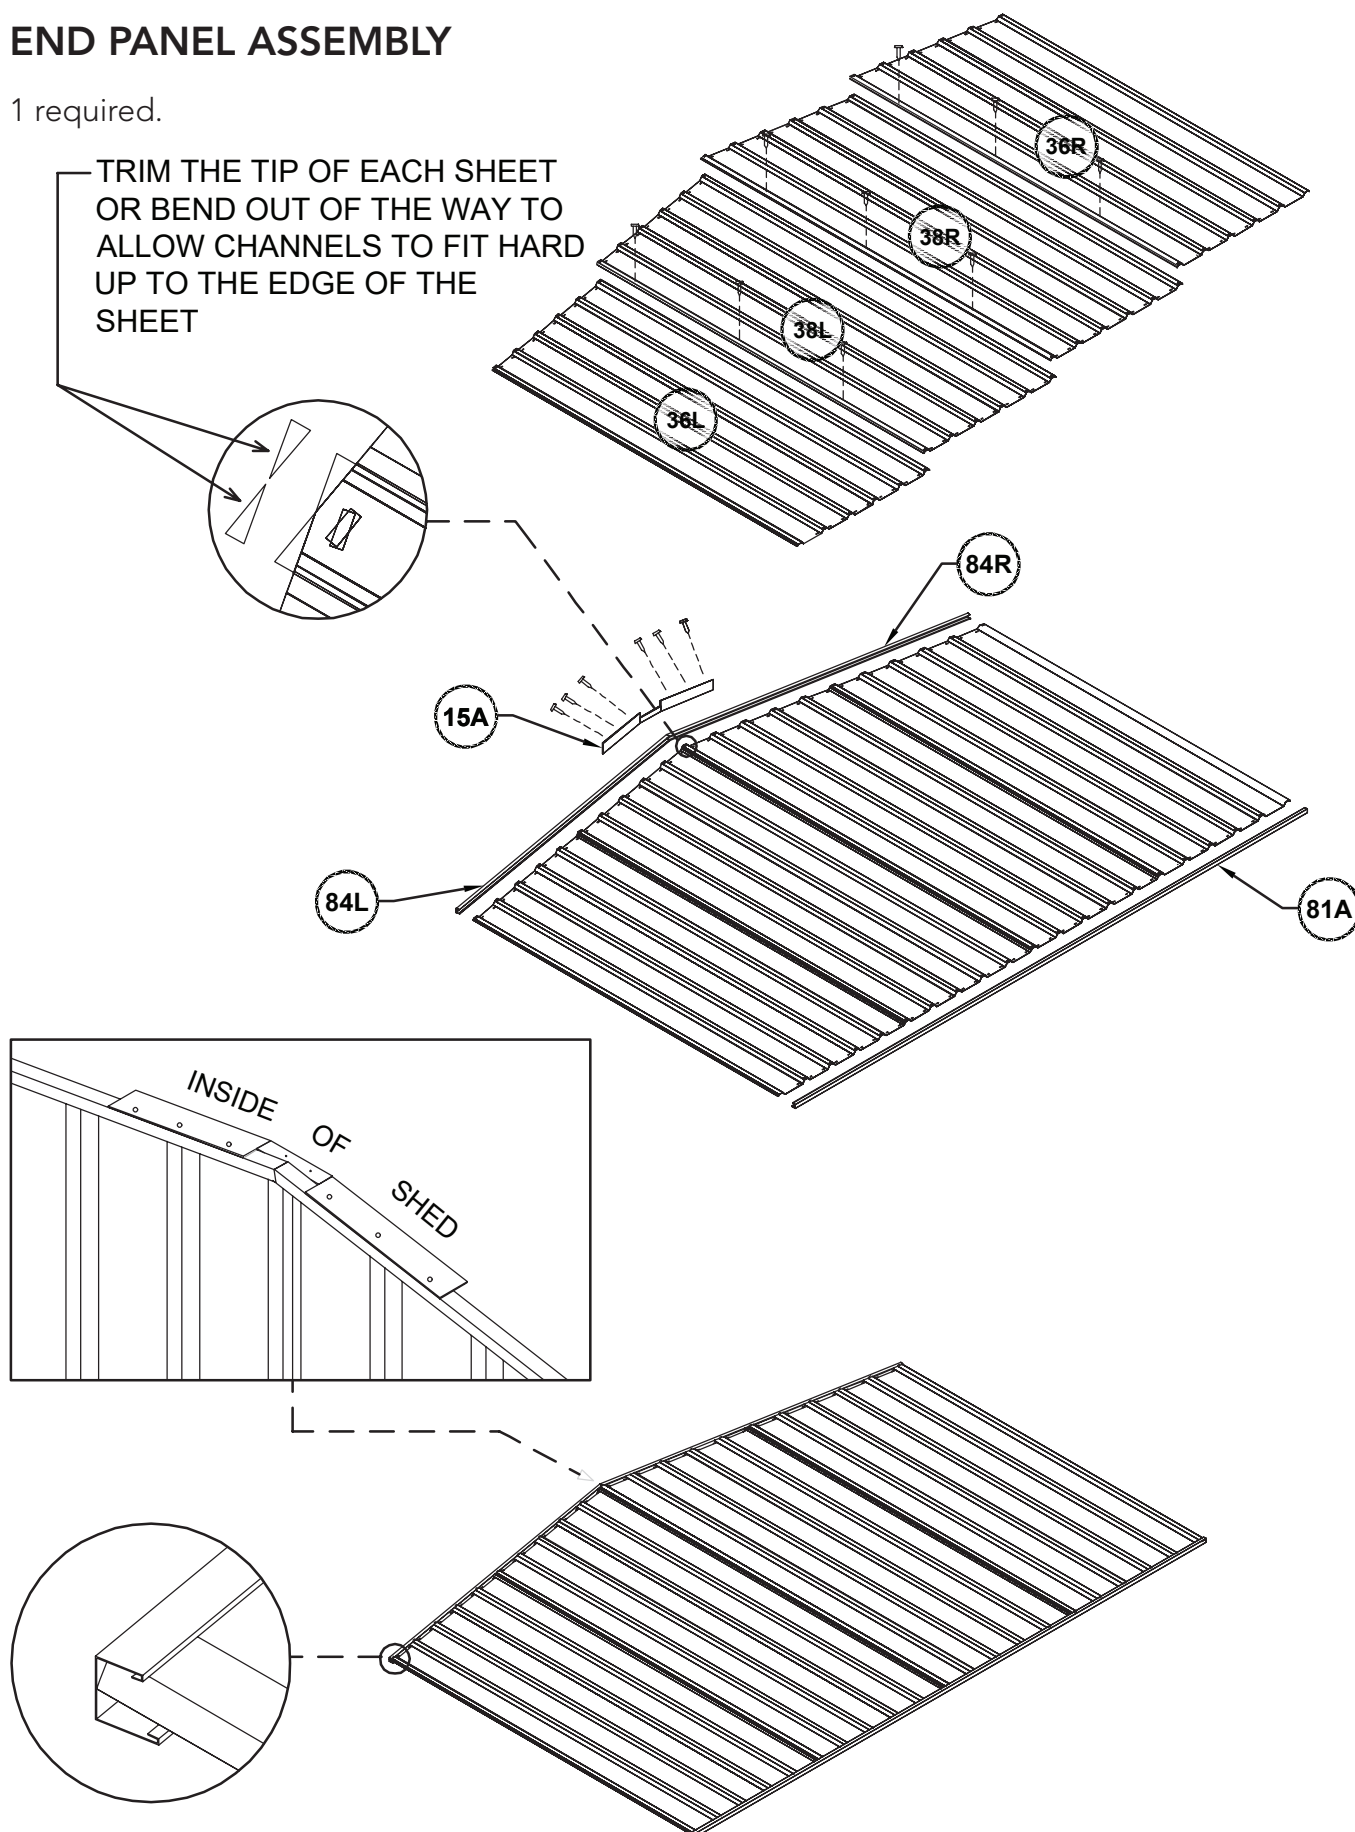


DOOR PANEL ASSEMBLY DOUBLE DOOR

Note: These sheets have not been pre-punched.

Pre-drill door sheets with a 3mm drill bit using the pre-punched components shown as templates

Vertical door channels are installed in the opposite orientation compared to the horizontal door channels.

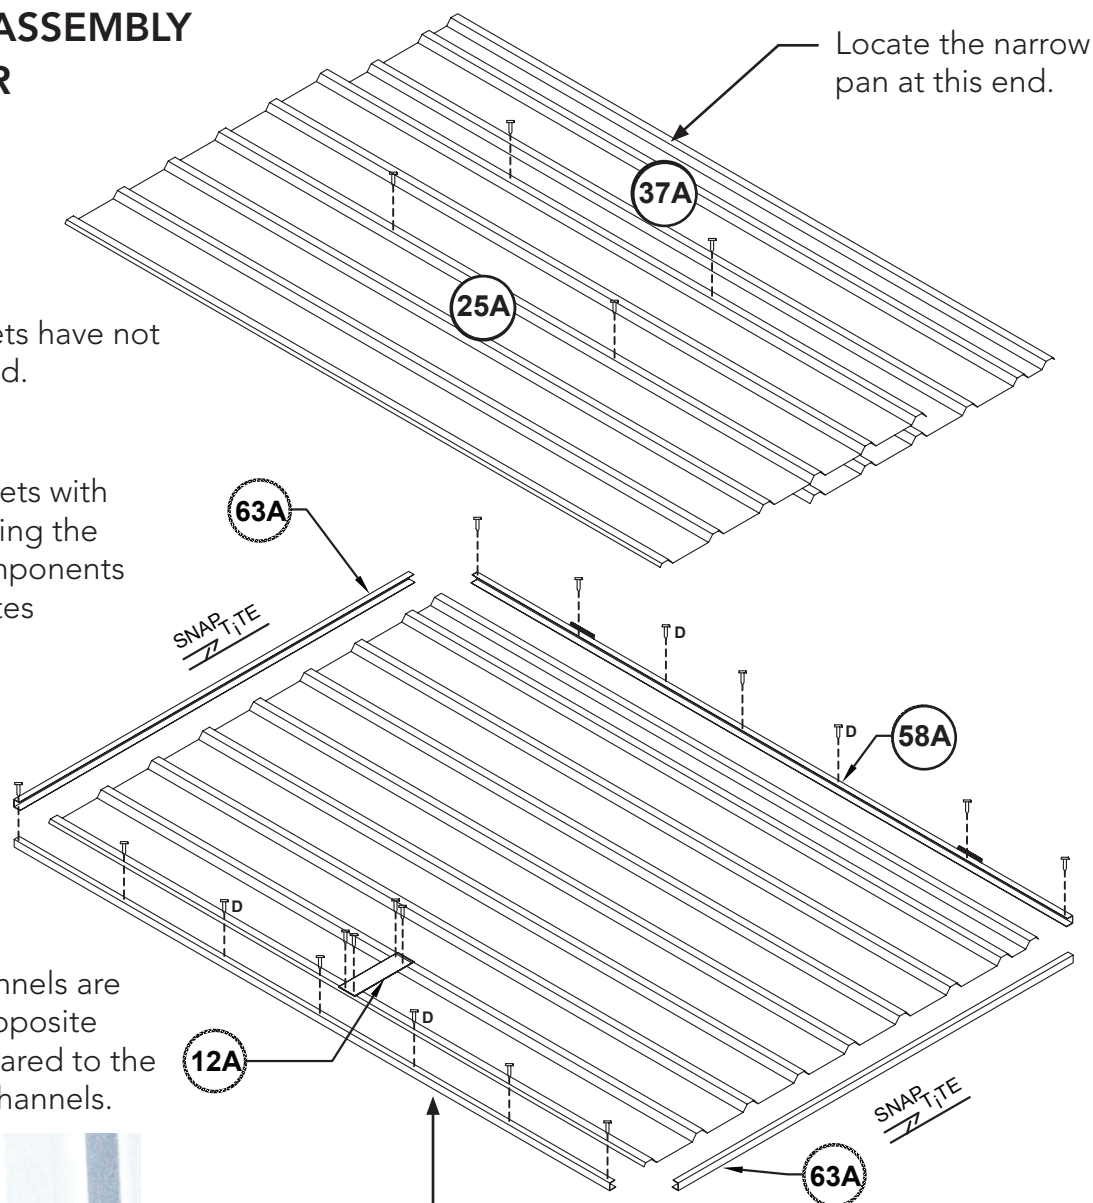


Locate the narrow pan at this end.




Long flange of channel

Short flange of channel

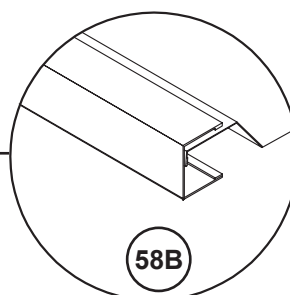


Fit one door with a channel

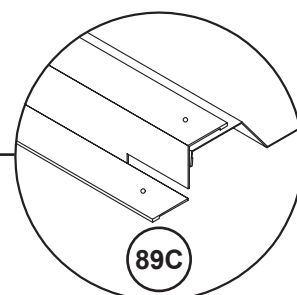

Fit the other with a jamb


CENTRE PORTAL FRAME DETAILS

2 required.

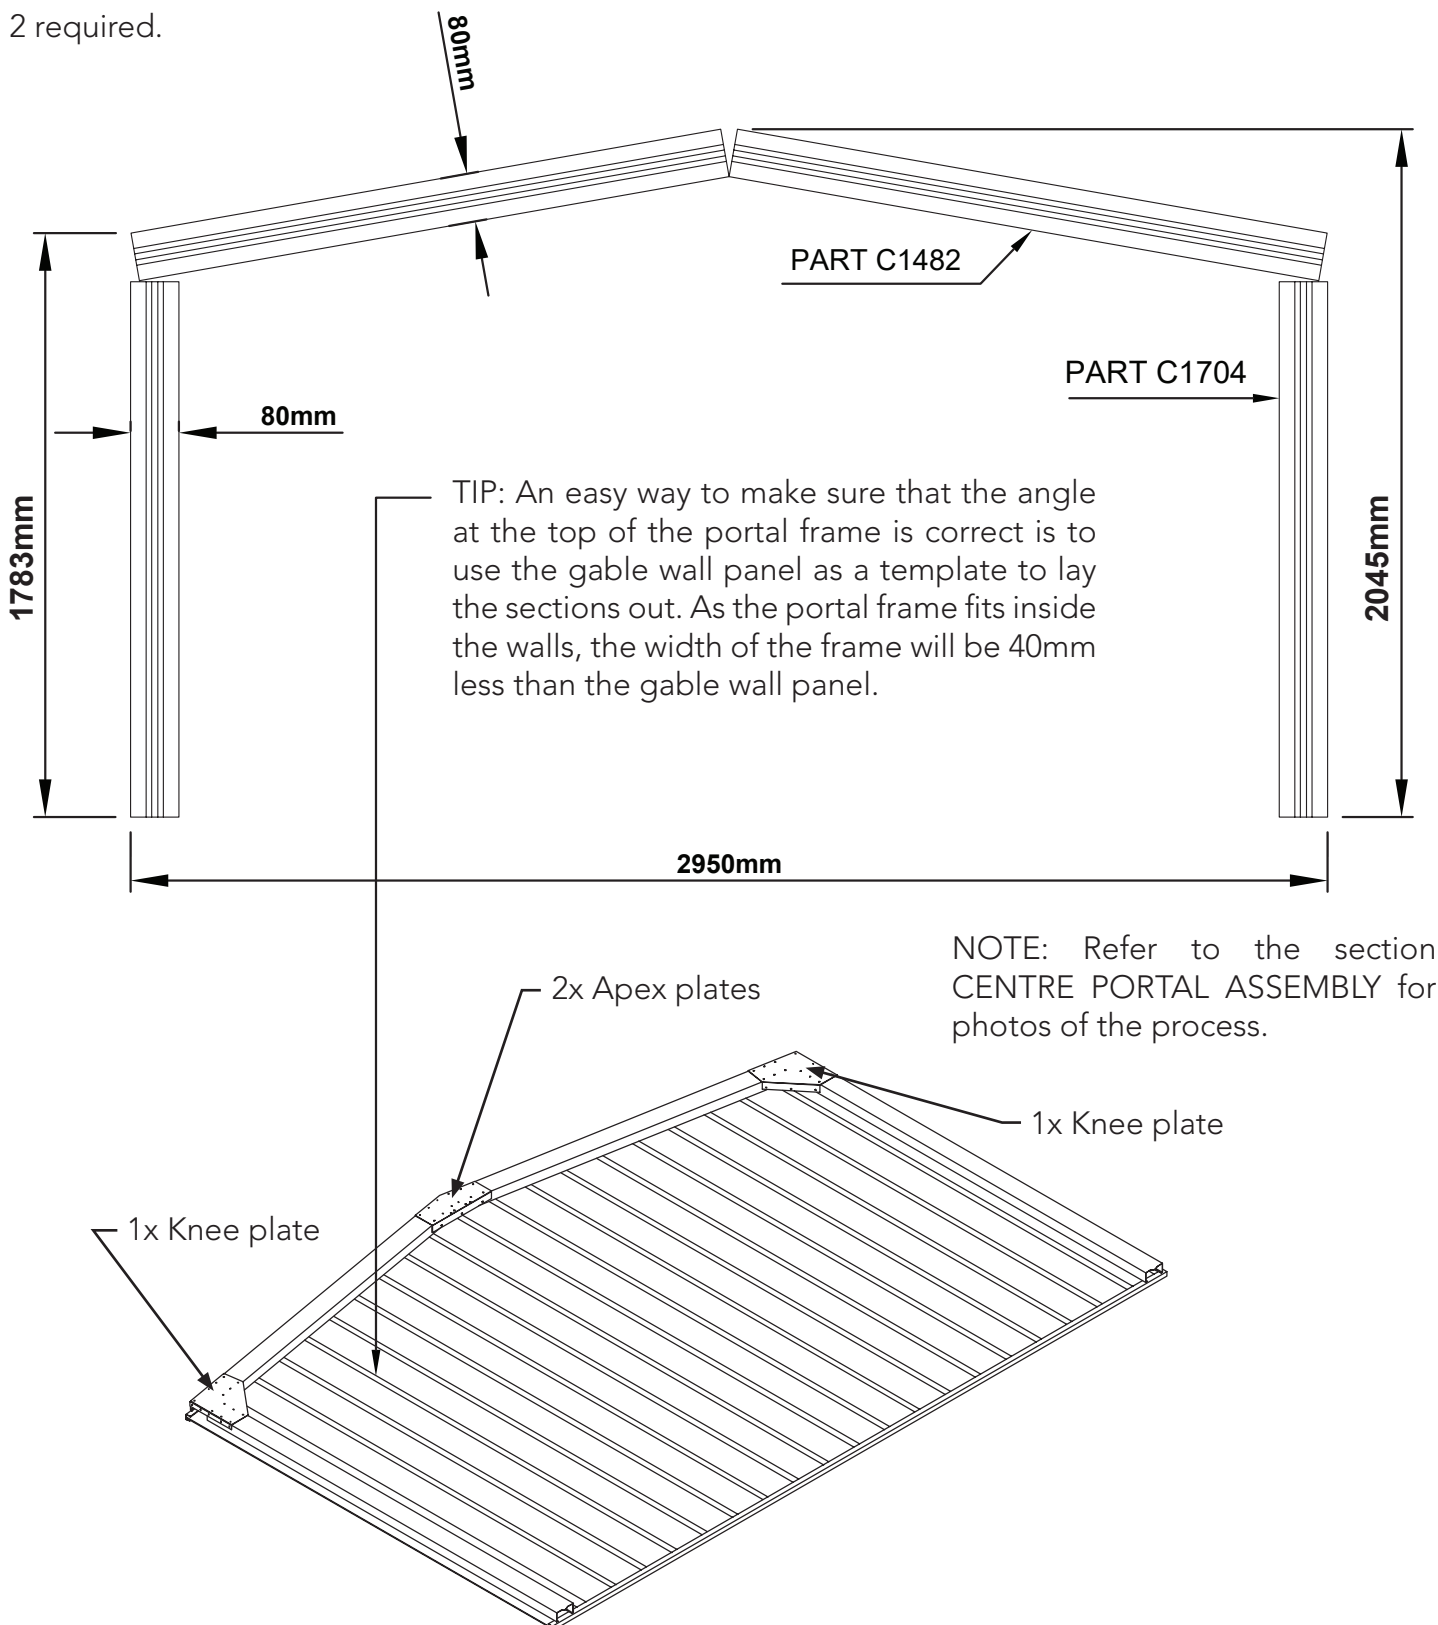

NOTE: If you have a slab with an edge rebate in your concrete slab, you will have to cut an amount off the bottom of the frame legs equal to the depth of the rebate.

CENTRE PORTAL FRAME DETAILS

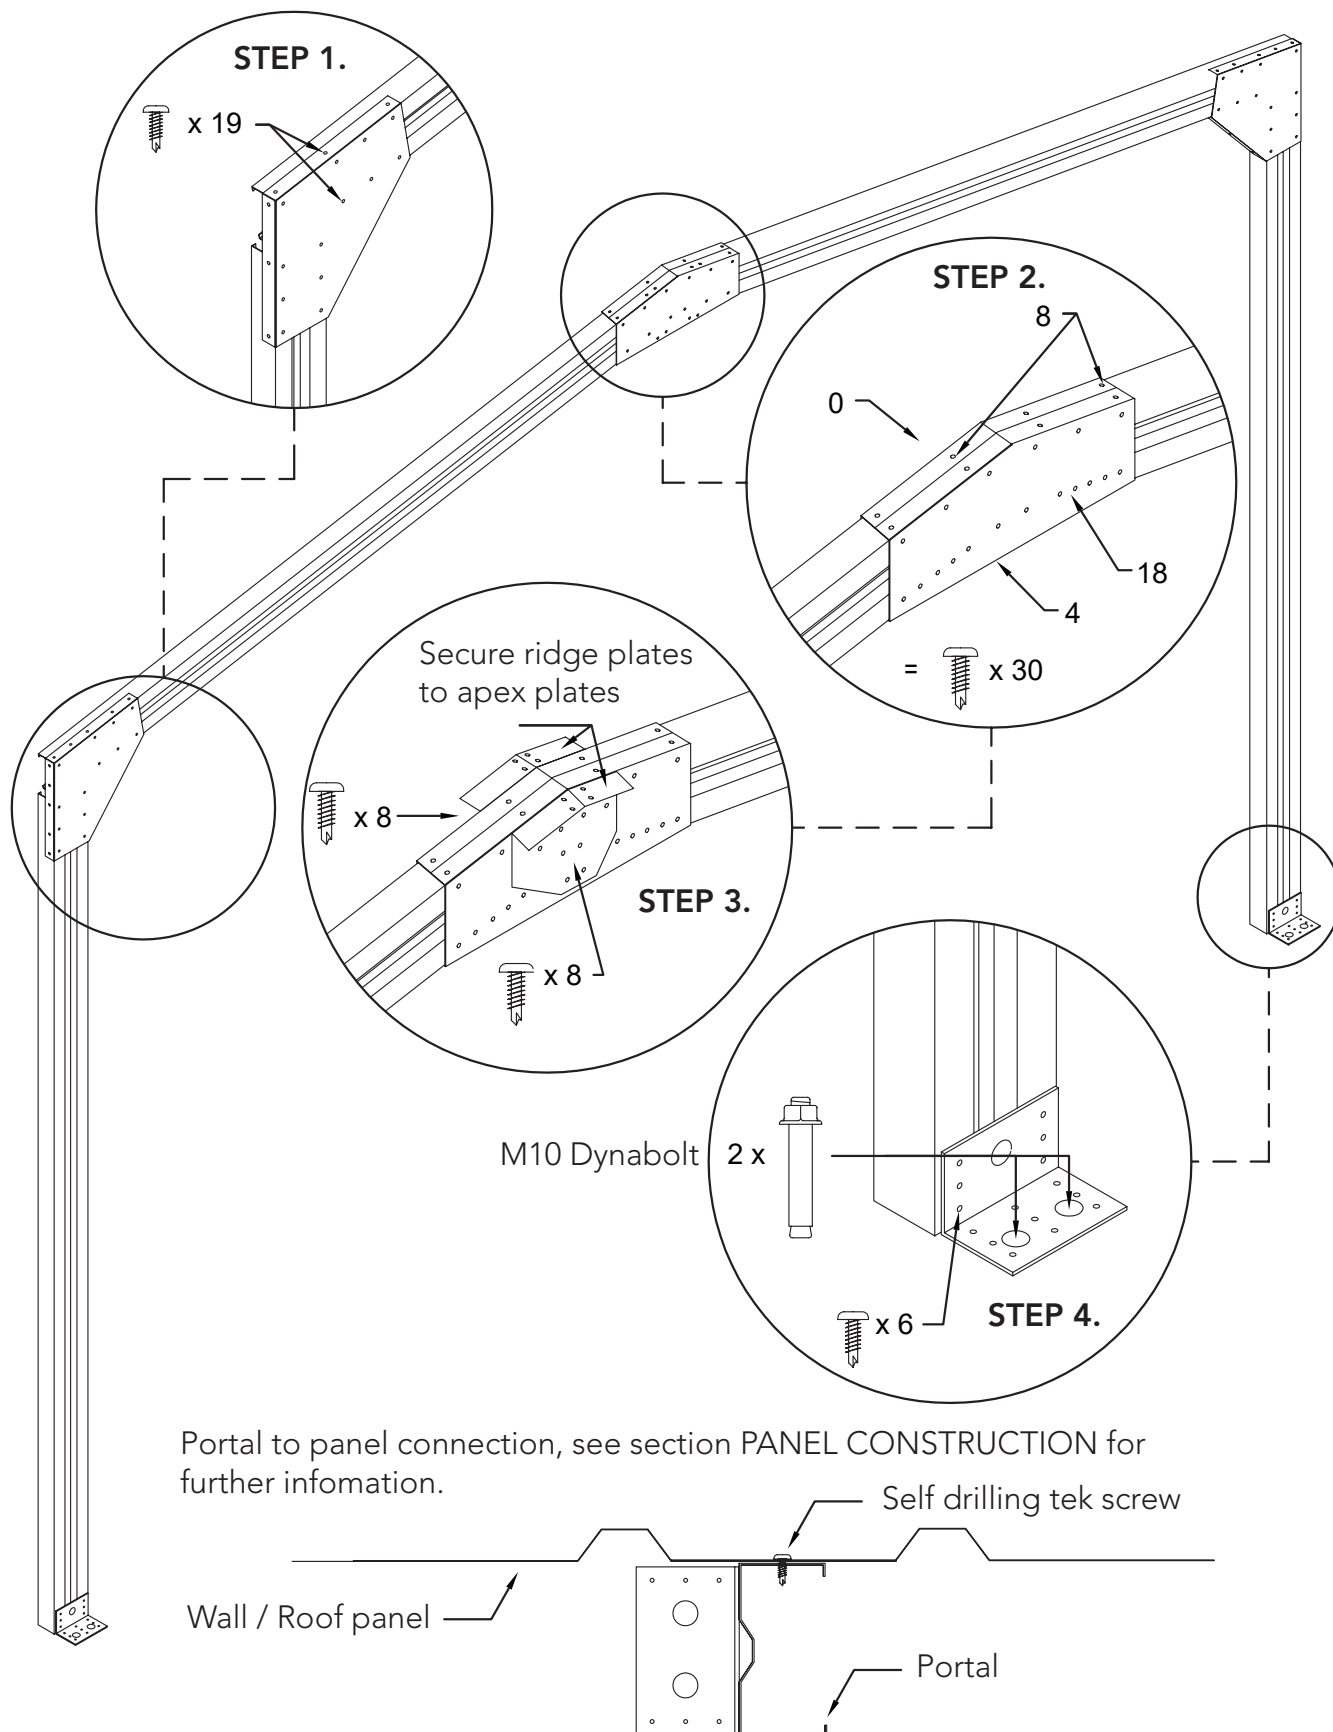


CENTRE PORTAL ASSEMBLY SUPPORT PHOTOS


STEP 1.

Draw pattern on the concrete in accordance with the dimensions detailed in the assembly instructions.


Step 1a

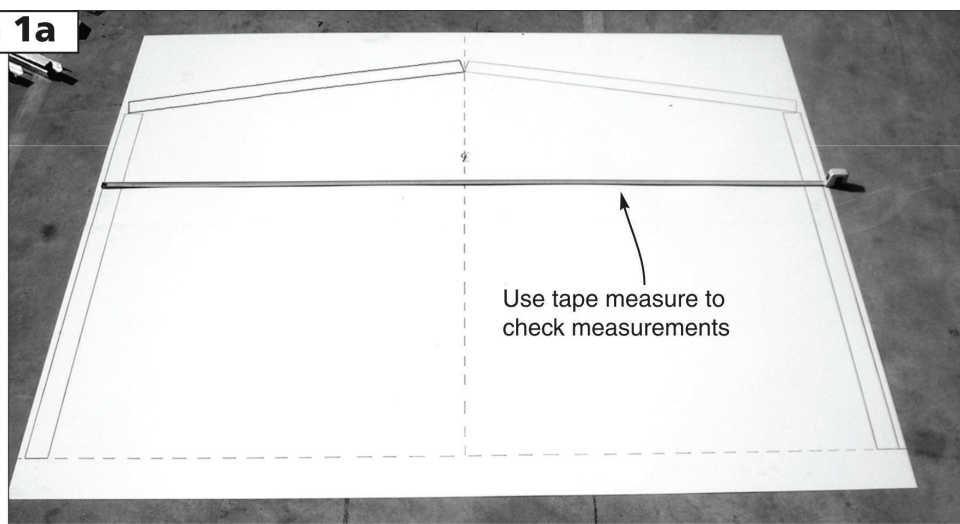

Step 1b

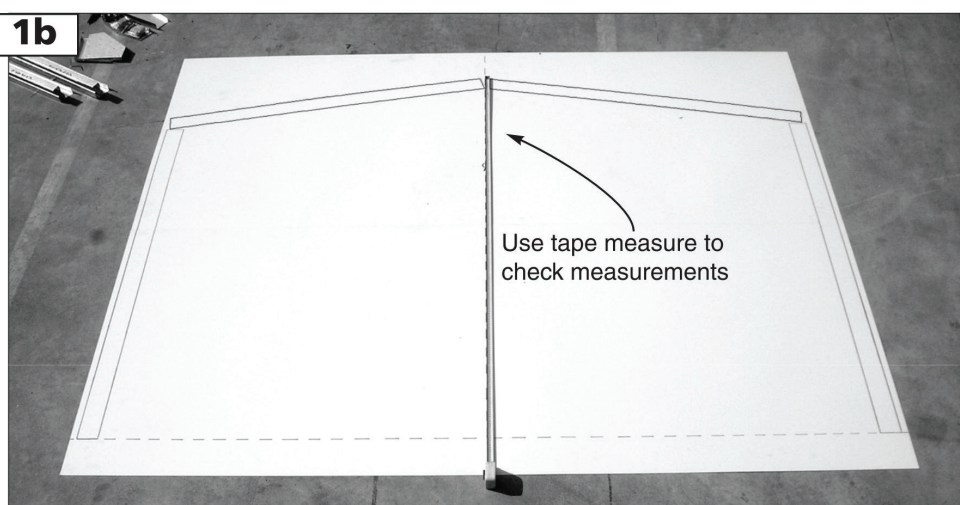

Step 1c

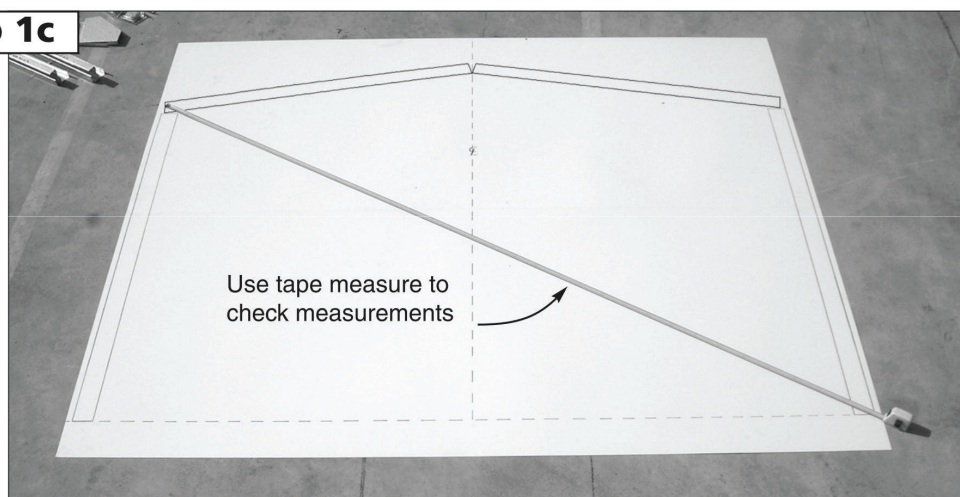


CENTRE PORTAL ASSEMBLY SUPPORT PHOTOS


STEP 2.

Understand where components are to be positioned


Step 2a

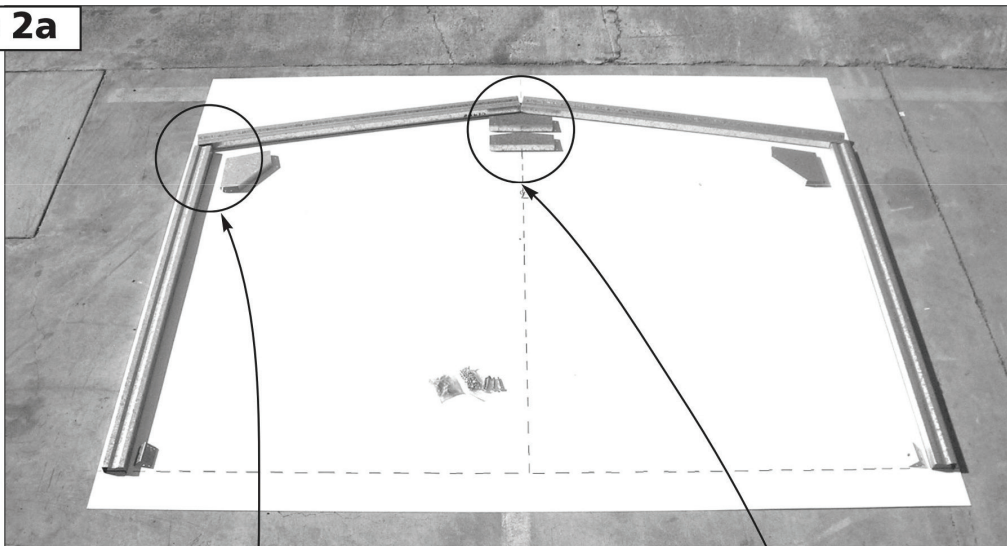

Step 2b

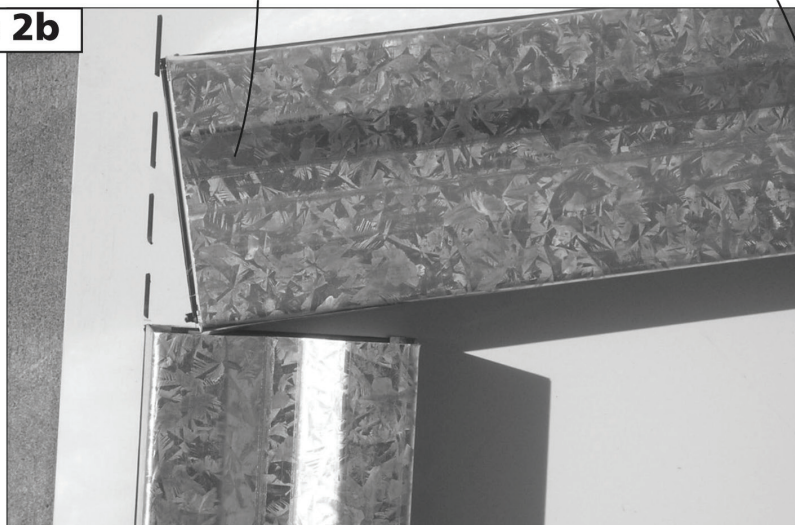

Step

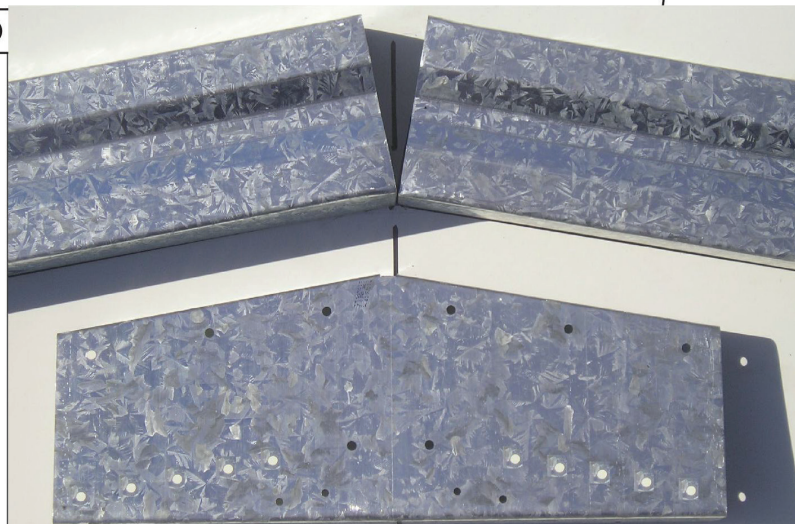

CENTRE PORTAL ASSEMBLY SUPPORT PHOTOS


STEP 3.

Join rafter to column with knee plate


Step 3a



Step 3b

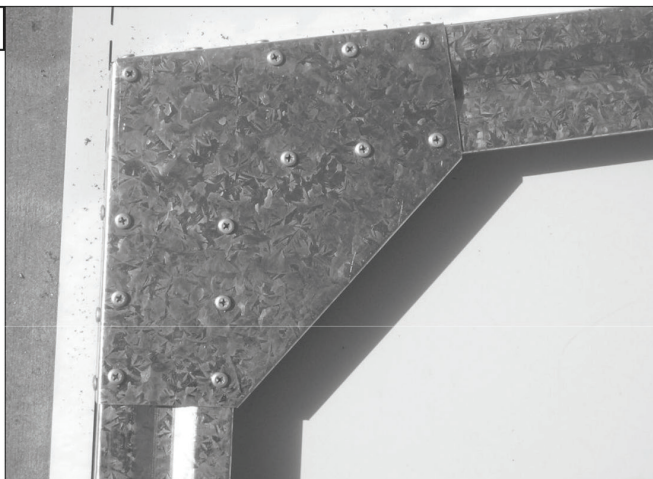

Step 3c

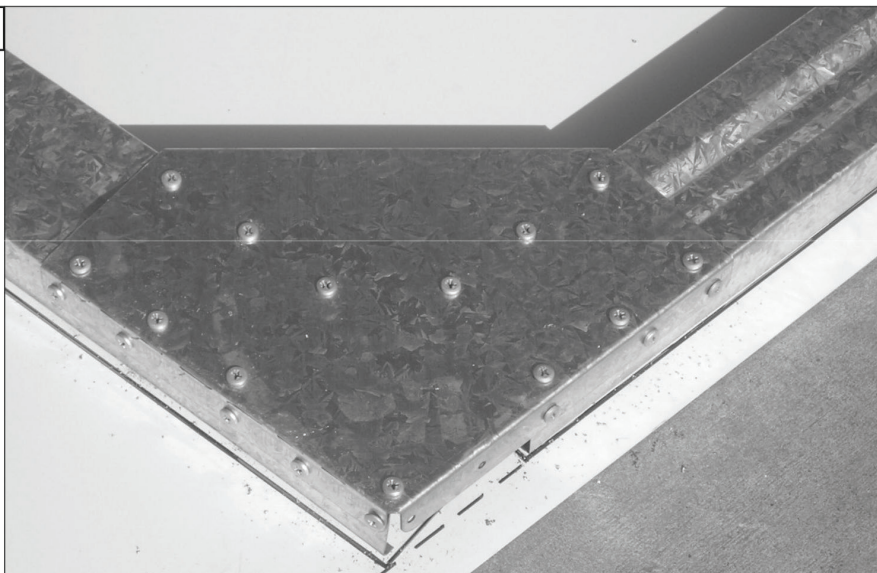


CENTRE PORTAL ASSEMBLY SUPPORT PHOTOS


STEP 4.

Join both rafters using the apex plate


Step 4a

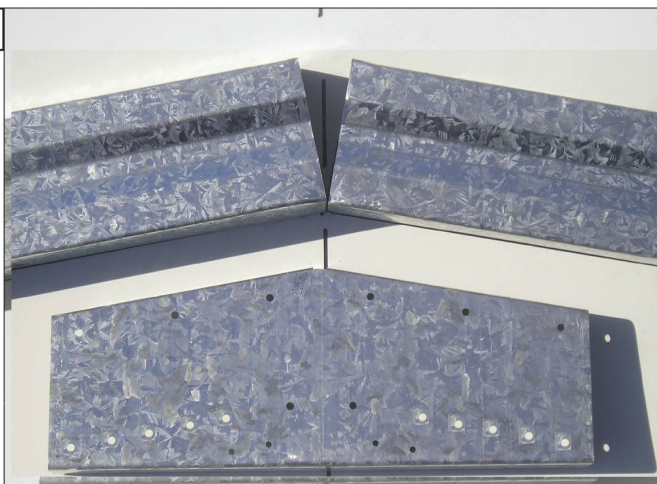

Step 4b

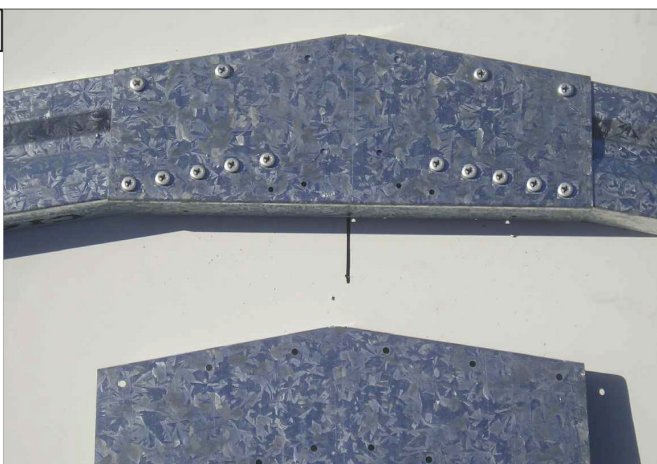

Step 4c

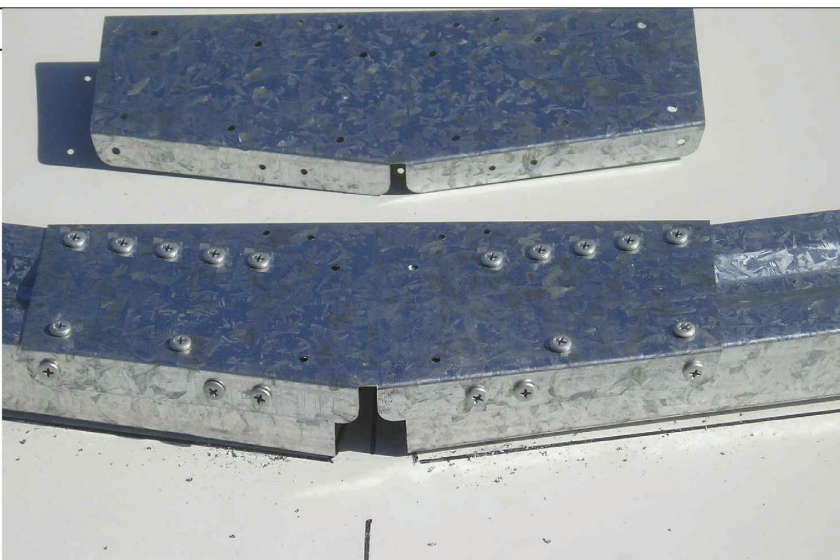

CENTRE PORTAL ASSEMBLY SUPPORT PHOTOS

STEP 5.



Secure ridge plate (RBP)



CENTRE PORTAL ASSEMBLY SUPPORT PHOTOS

STEP 6.




Secure multi purpose brackets

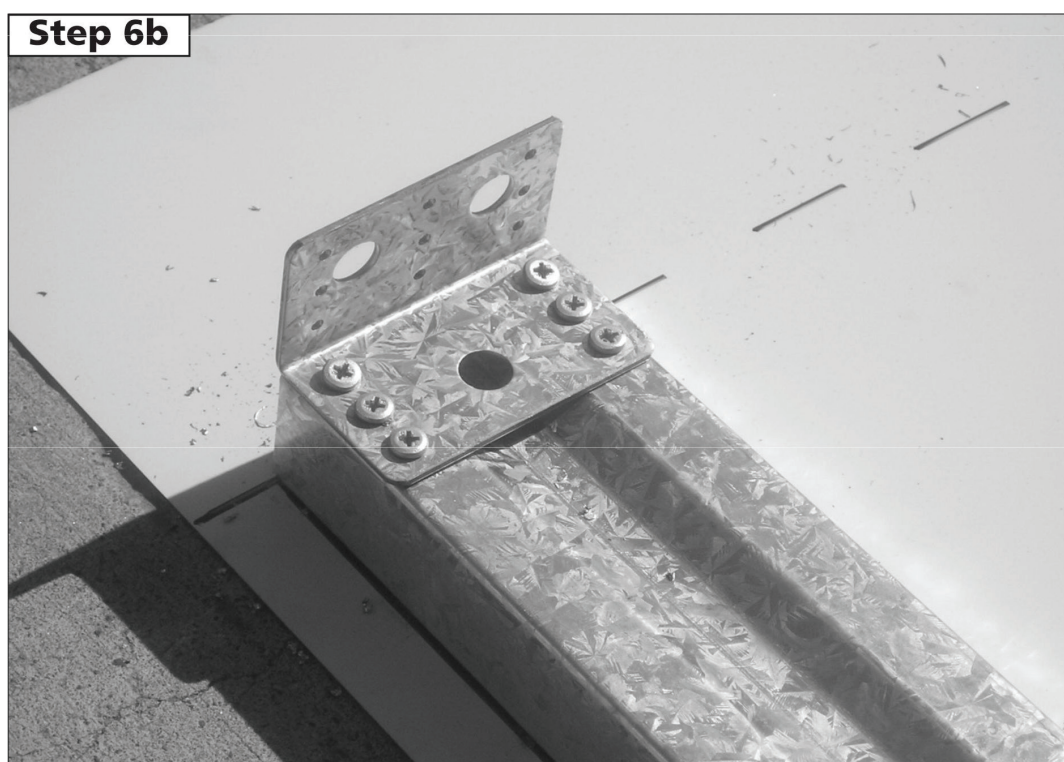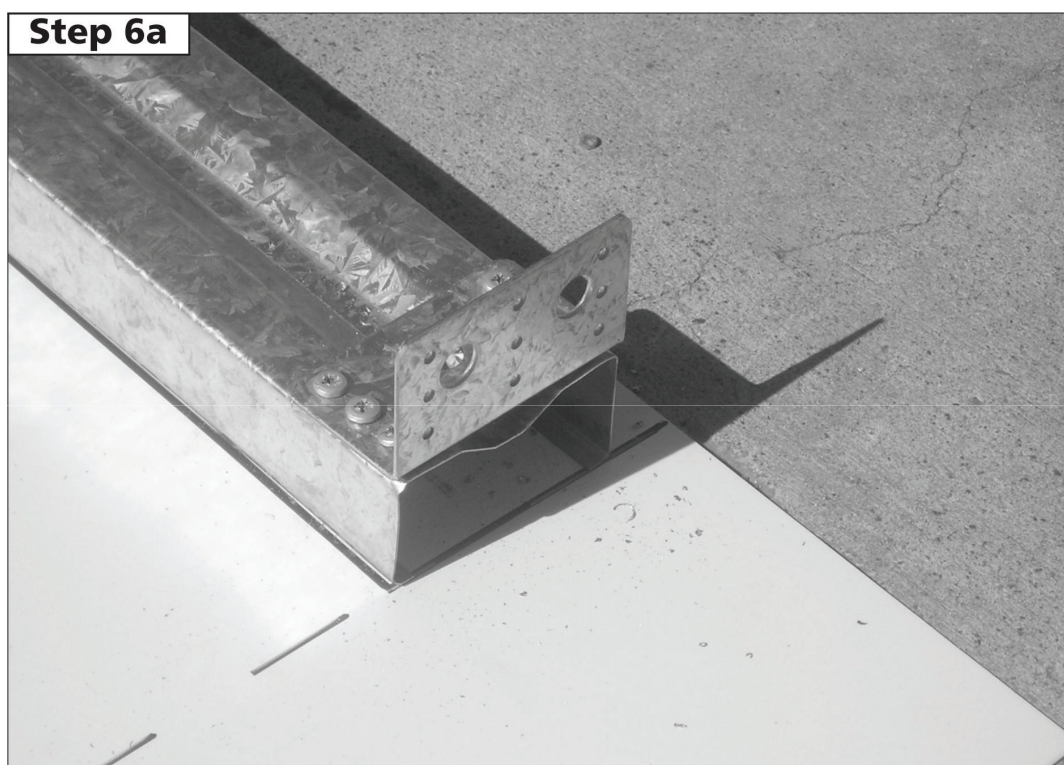

CENTRE PORTAL ASSEMBLY SUPPORT PHOTOS


STEP 7.

Turn frame over and repeat steps 4 and 5.

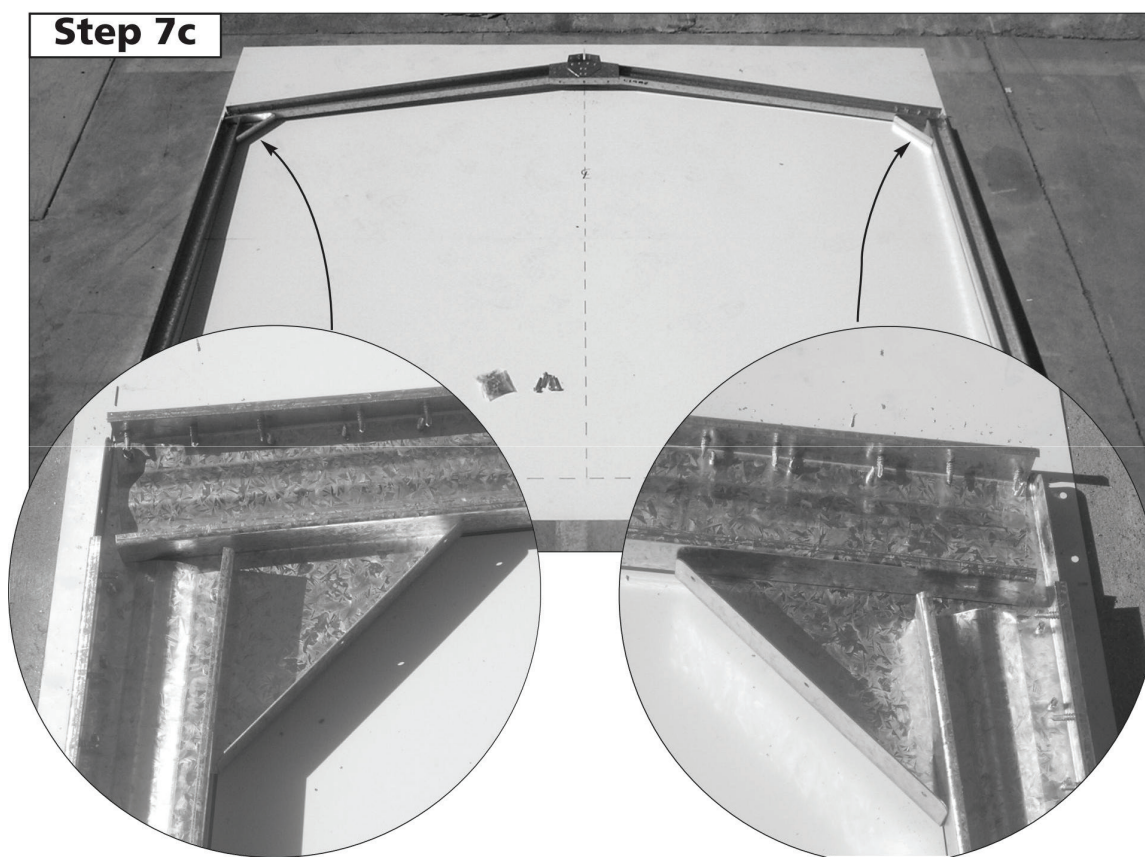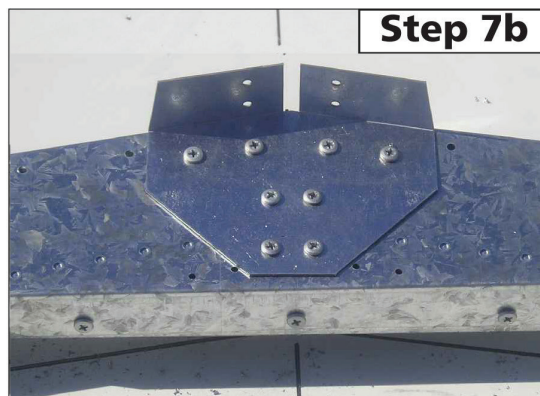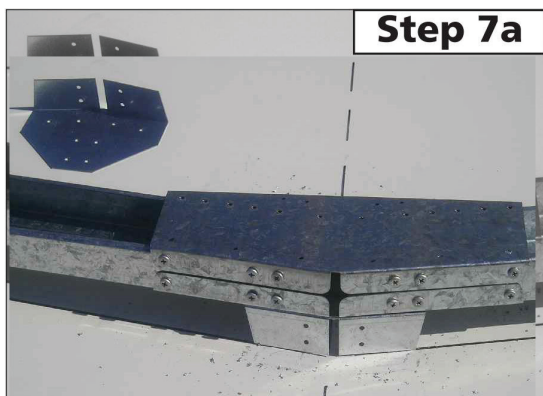



FRONT FRAME ASSEMBLY

STEP 1 of 2

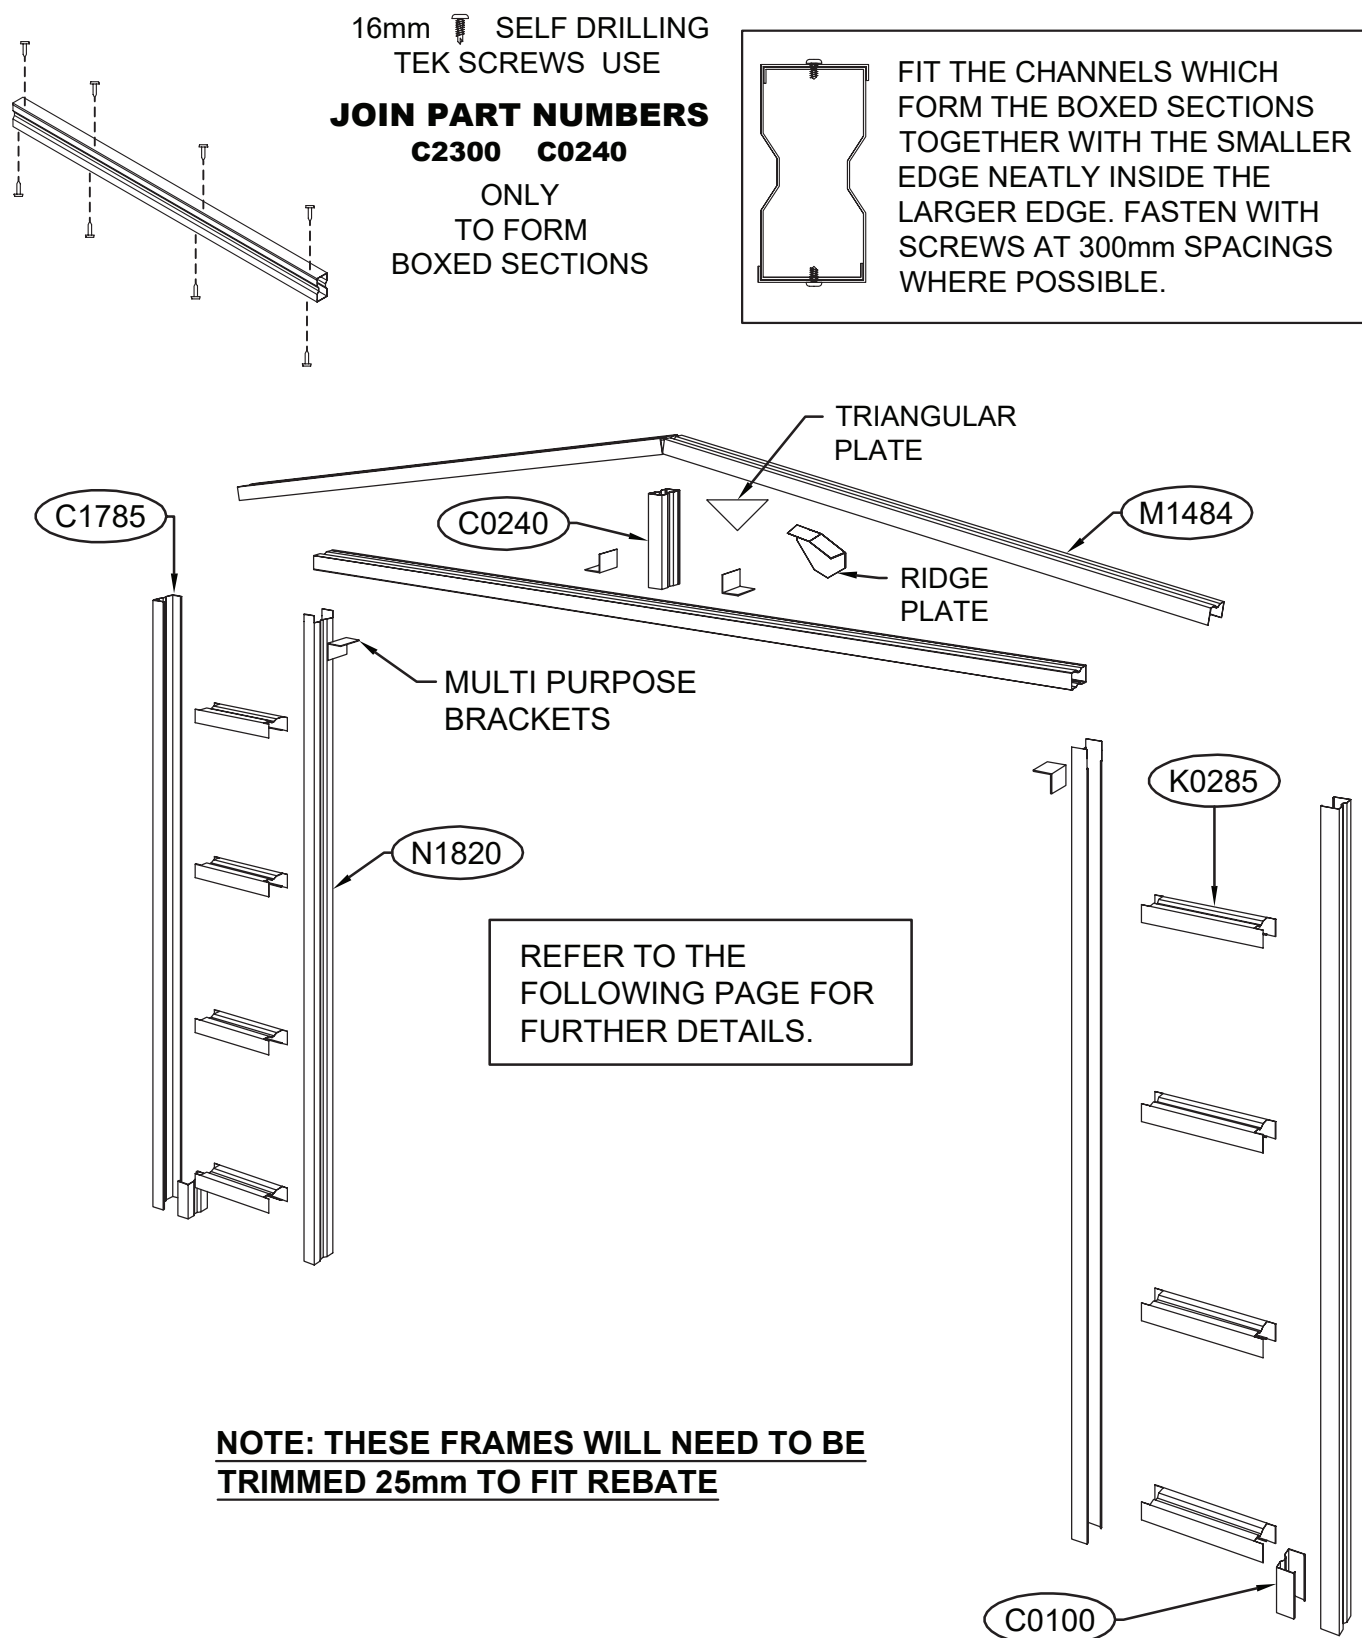

FRONT FRAME ASSEMBLY

STEP 2 of 2.

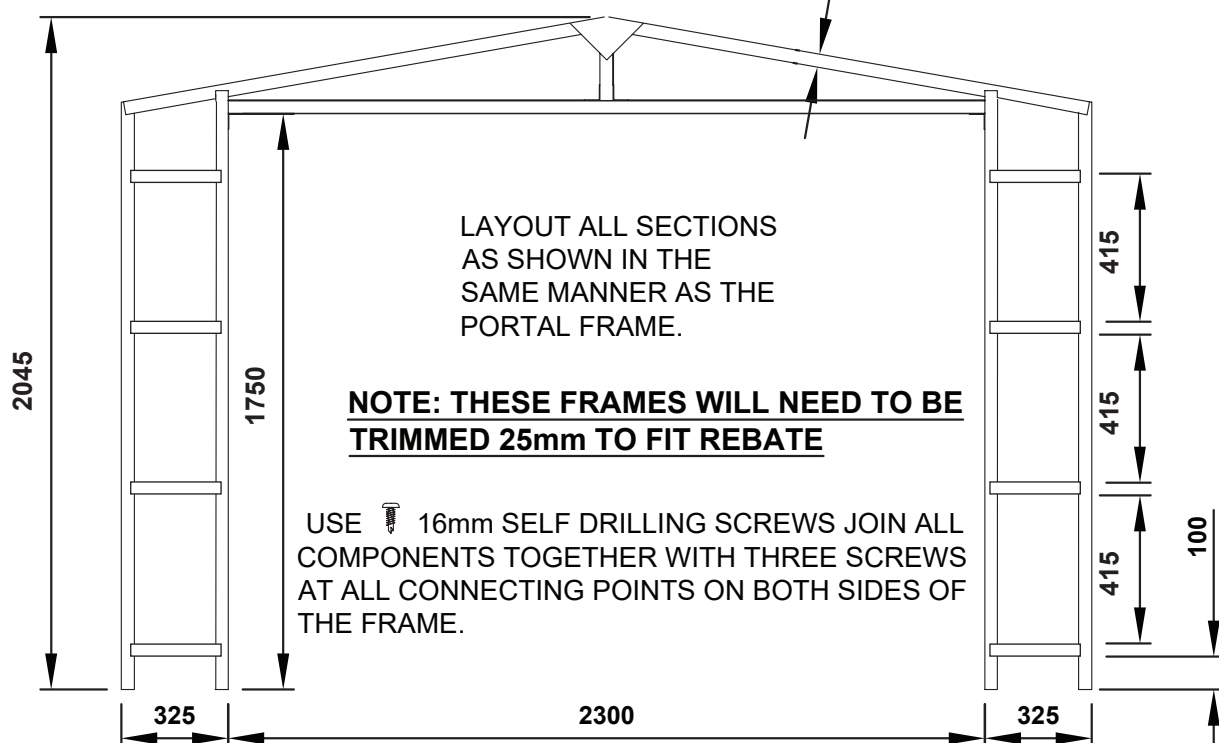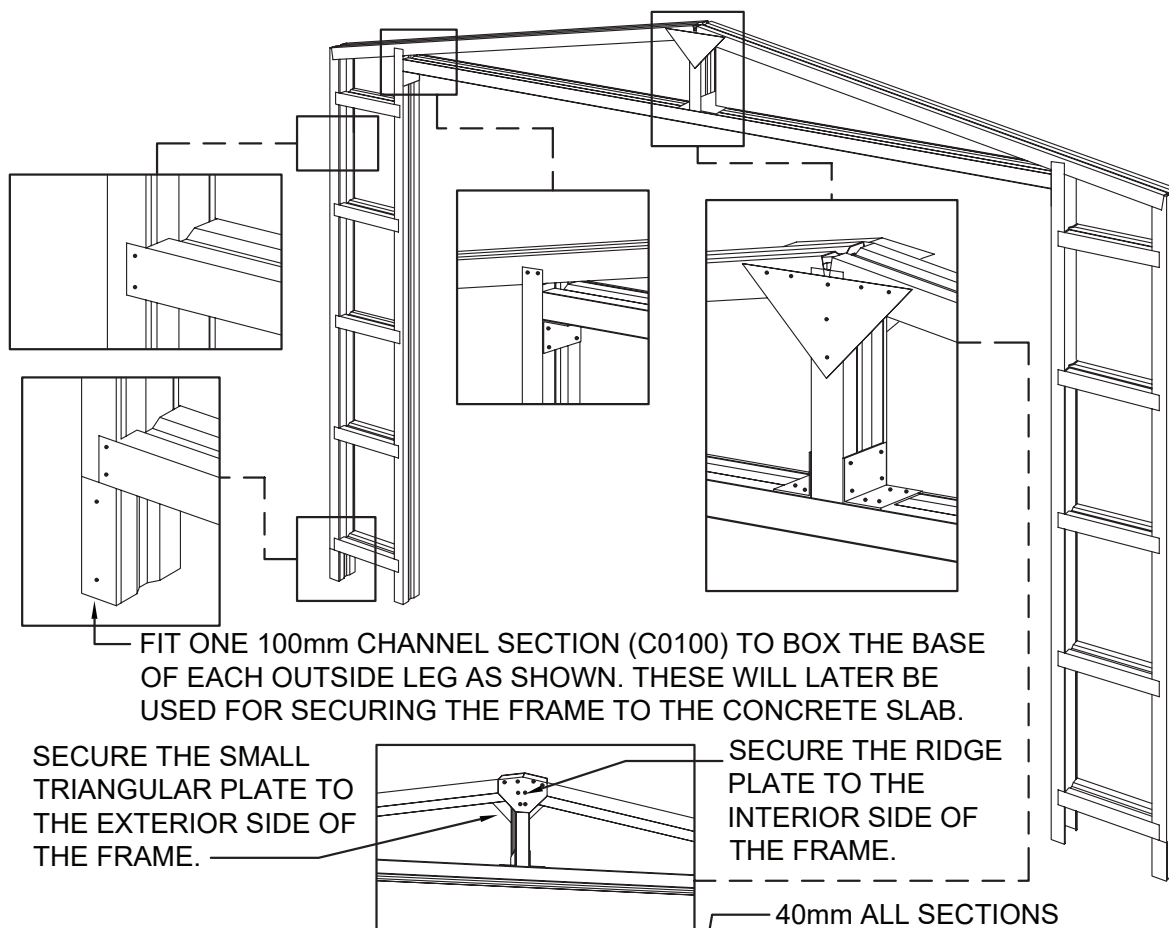


NOTE: IF YOU HAVE AN EDGE REBATE IN YOUR CONCRETE SLAB, YOU WILL HAVE TO CUT AN AMOUNT OFF THE BOTTOM OF THE FRAME LEGS EQUAL TO THE DEPTH OF THE REBATE.

FRONT FRAME ASSEMBLY SUPPORT PHOTOS


STEP 1.

Draw pattern on the concrete in accordance with the dimensions detailed in the assembly instructions.


Step 1a

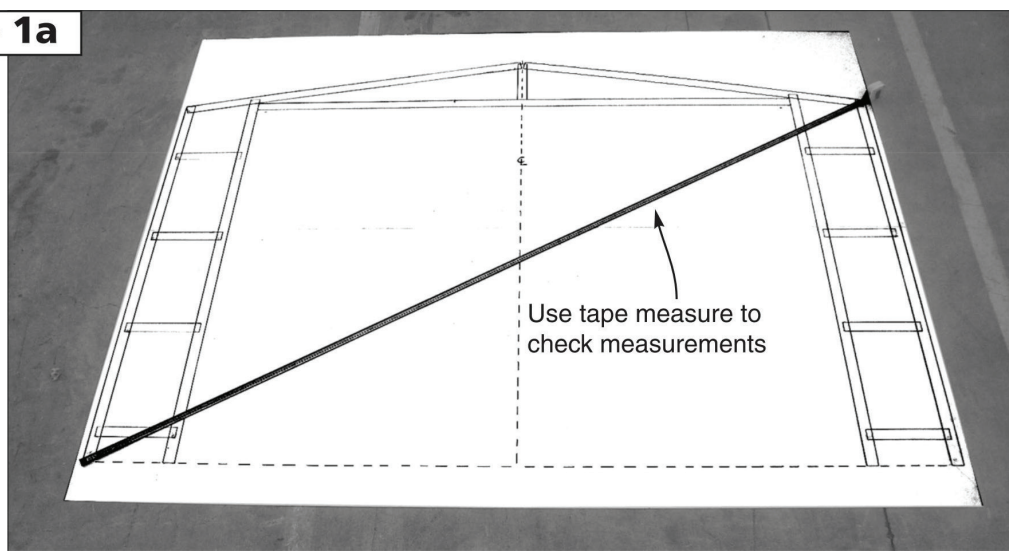

Step 1b

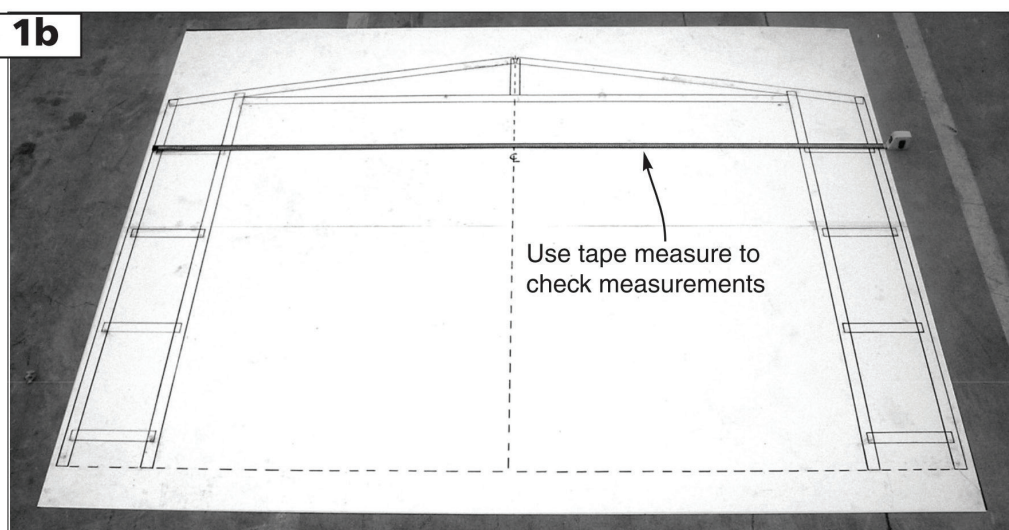

Step 1c

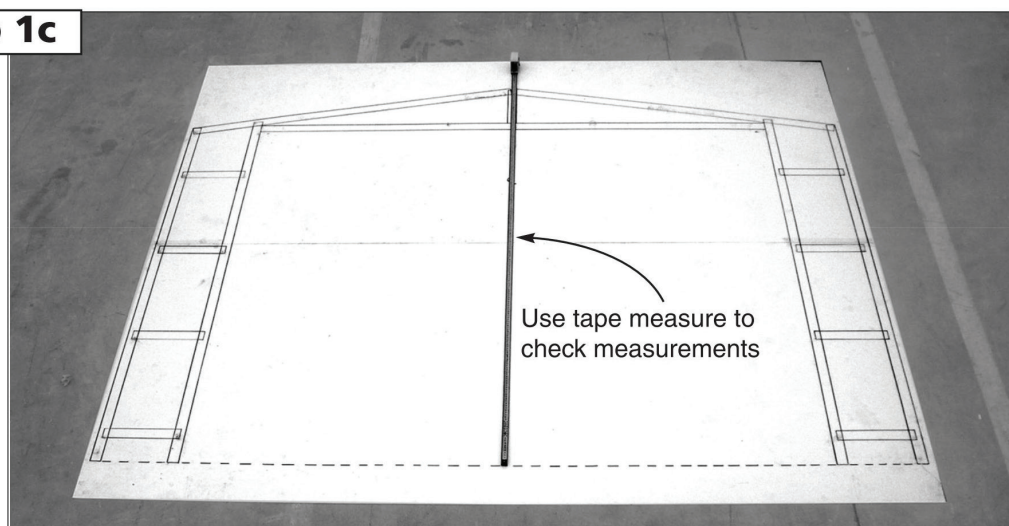


FRONT FRAME ASSEMBLY SUPPORT PHOTOS

STEP 2.

Understand where components are to be positioned.




Step 2

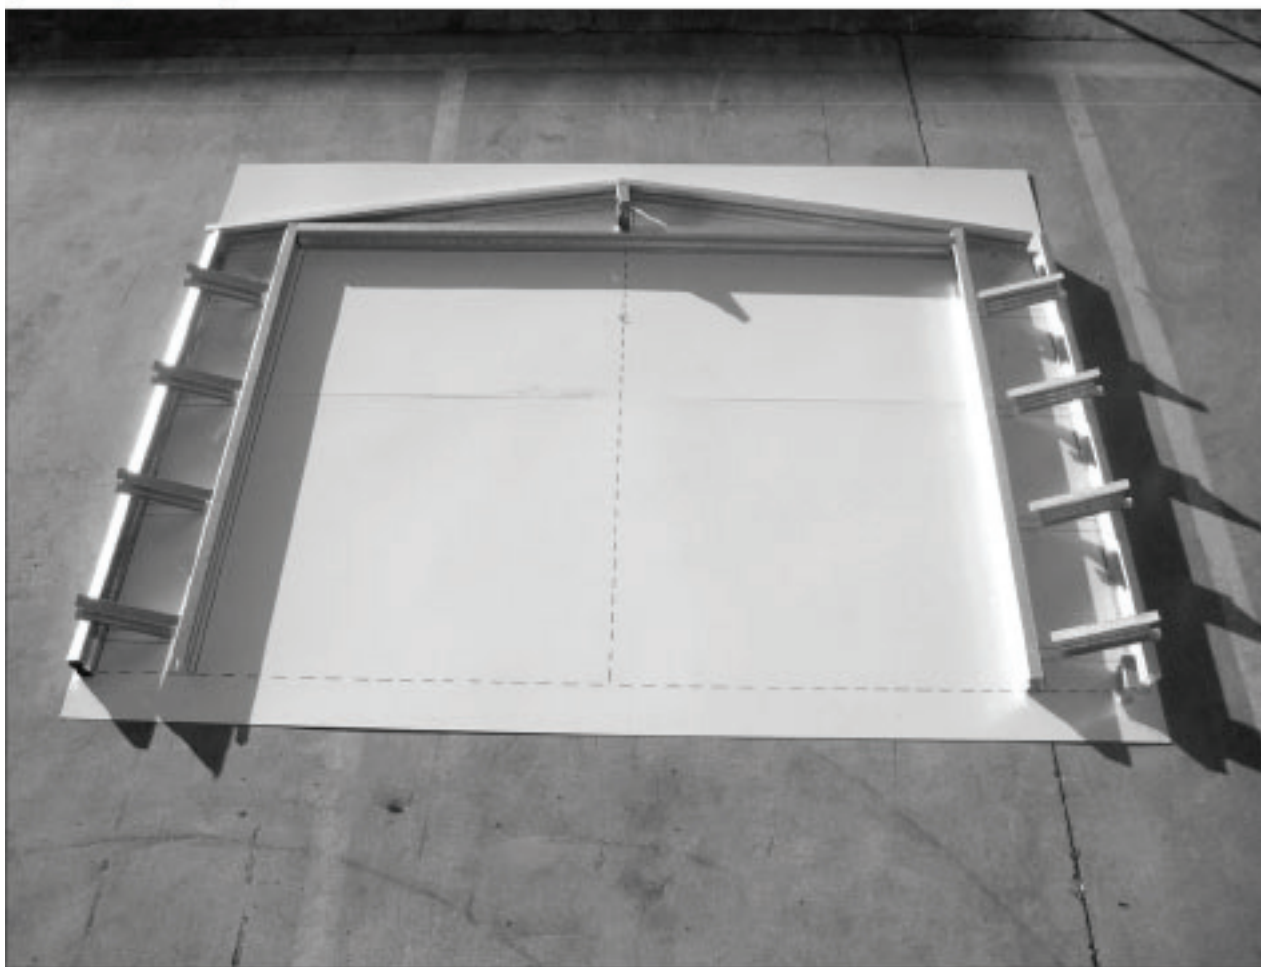

FRONT FRAME ASSEMBLY SUPPORT PHOTOS

STEP 3.

Join C0100 to the bottom of the columns (C1785)

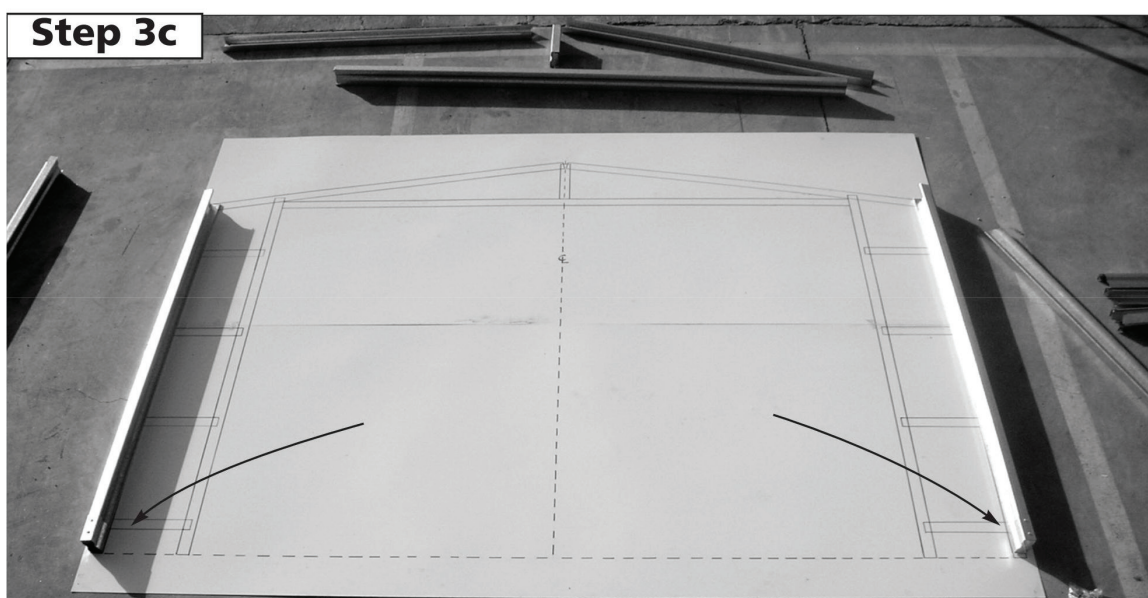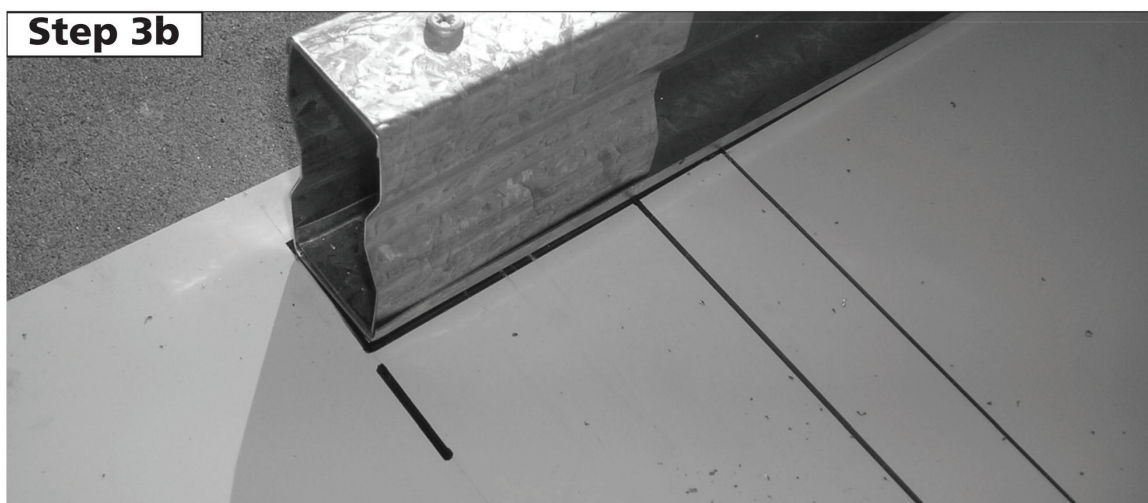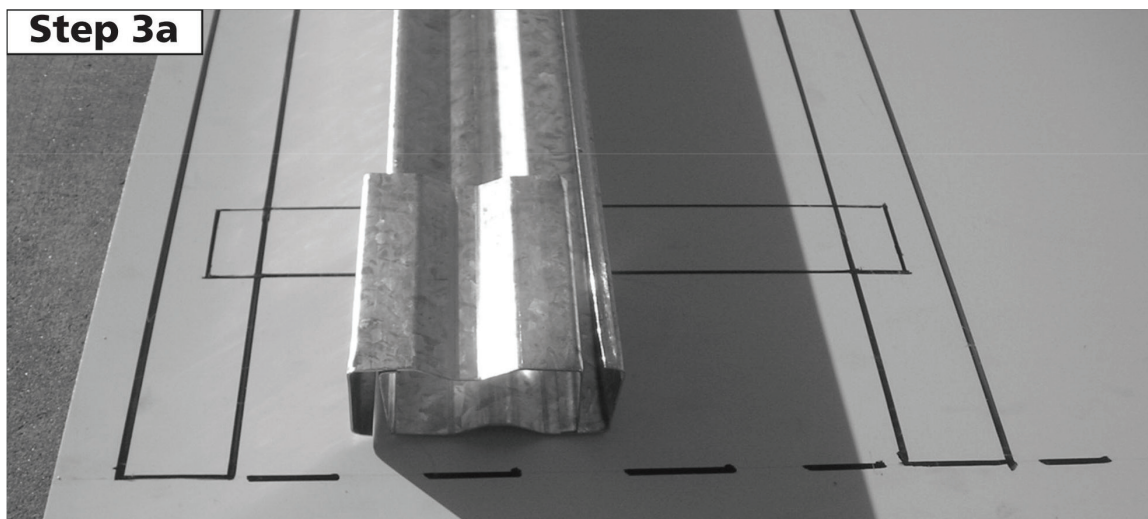

FRONT FRAME ASSEMBLY SUPPORT PHOTOS


STEP 4.

Join rafter (M1484) to column (C1785)

Step 4a



Step 4b

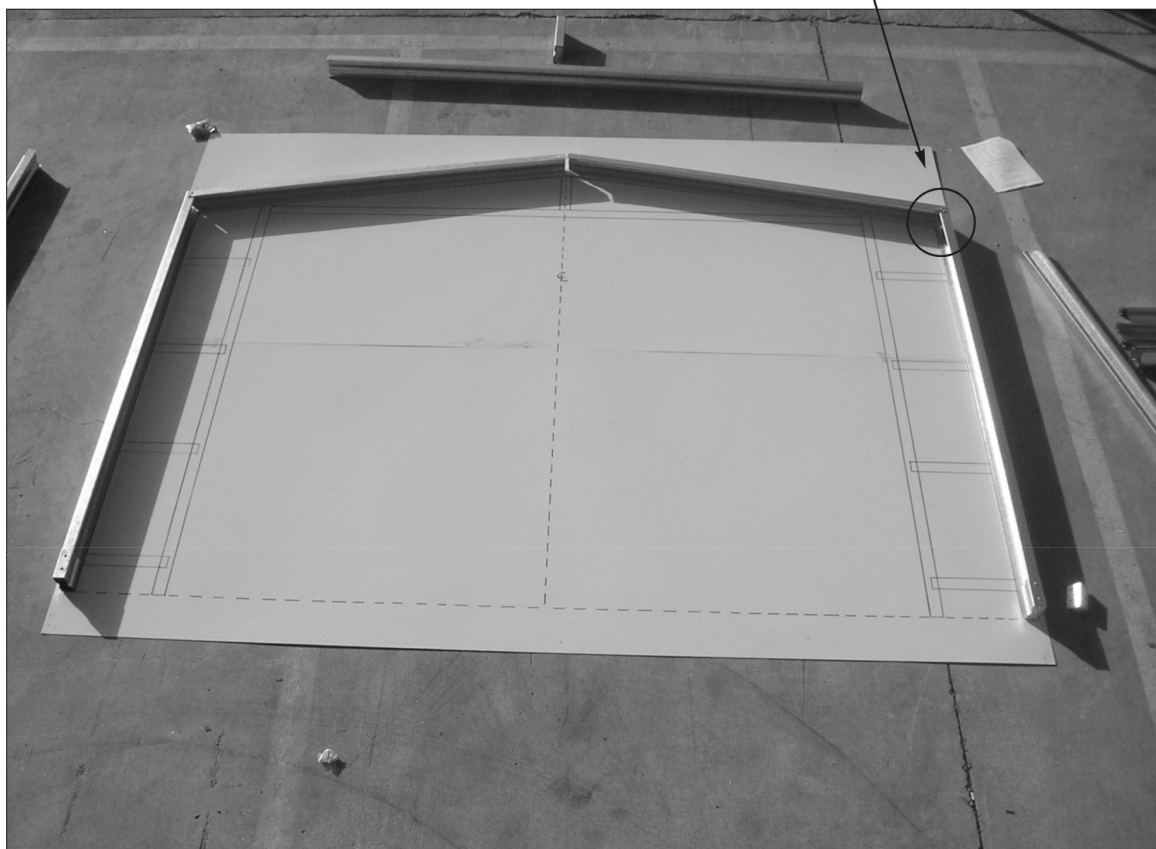

FRONT FRAME ASSEMBLY SUPPORT PHOTOS


STEP 5.

Join K0285 to C1785 & N1820.


Step 5a




Step 5b

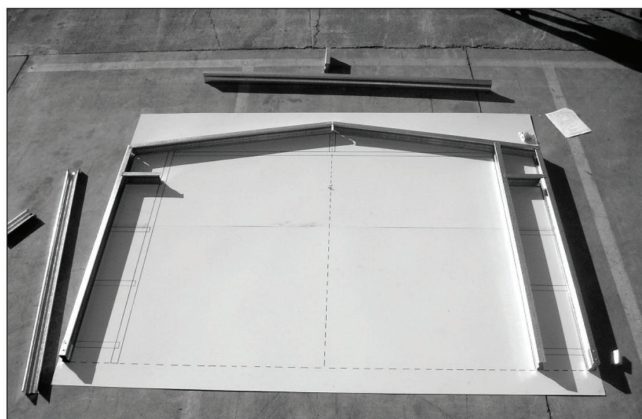


Step 5c

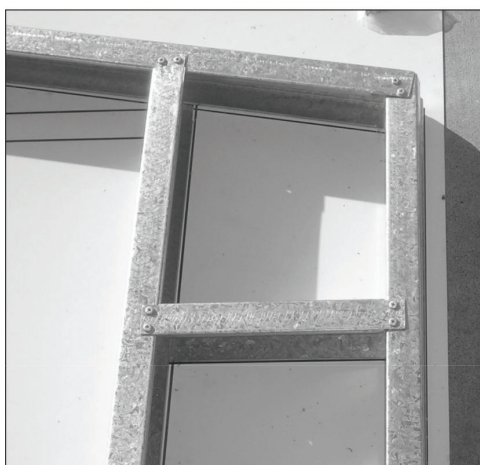


Step 5d

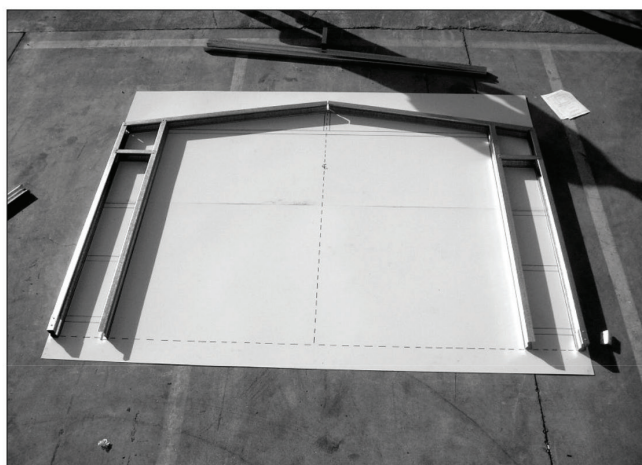

Step 5e

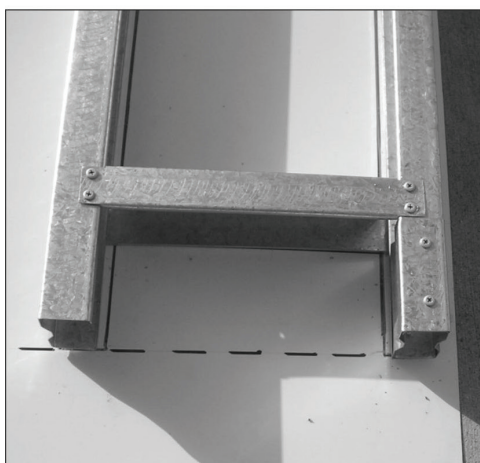

Step 5f

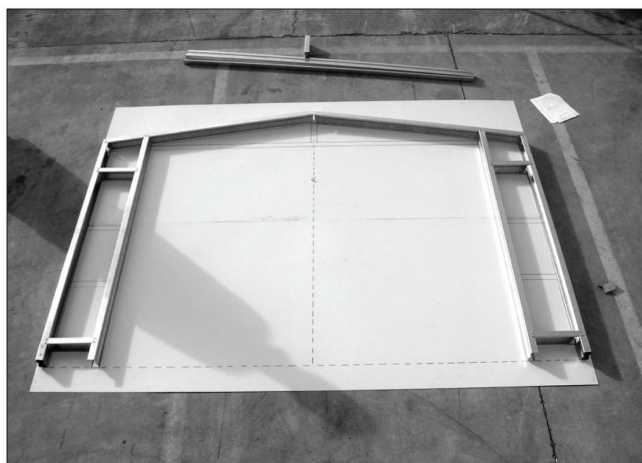


FRONT FRAME ASSEMBLY SUPPORT PHOTOS


STEP 6.

Fit multipurpose brackets.


Step 6a

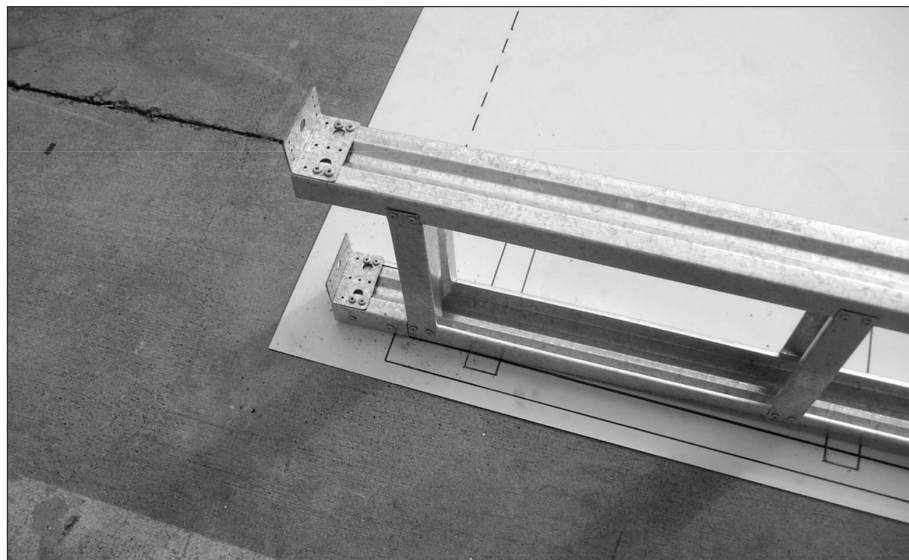

Step 6b

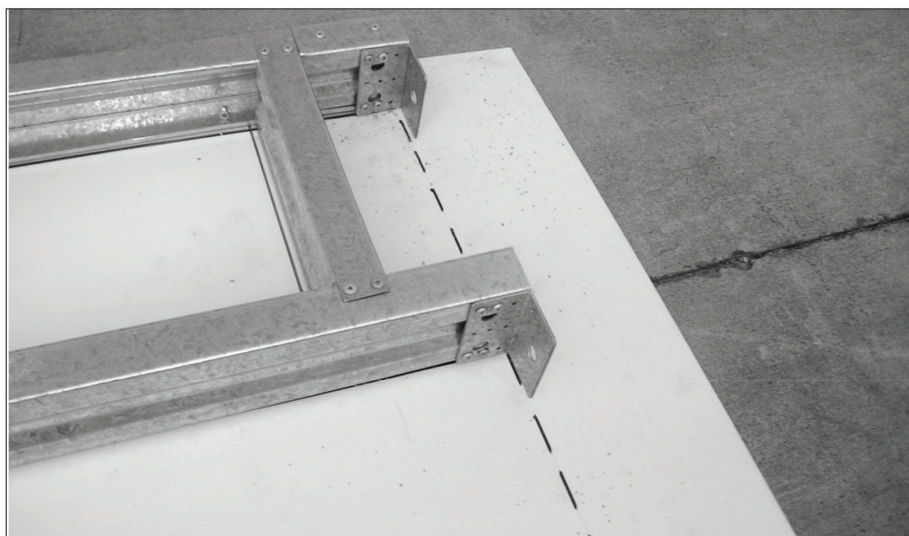

Step 6c

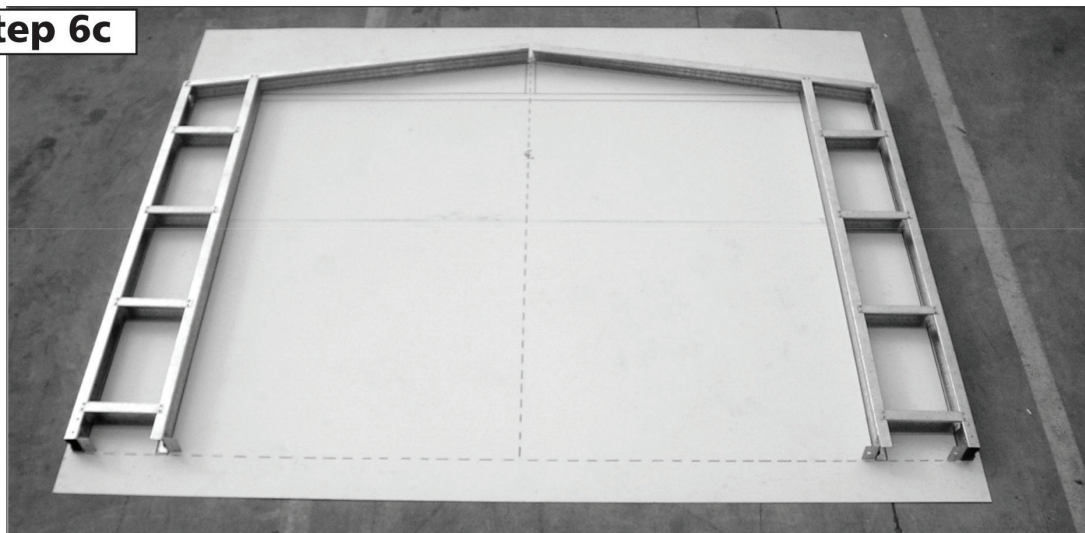


FRONT FRAME ASSEMBLY SUPPORT PHOTOS


STEP 7.

Assemble the C0240 & C2300 sections.


Step 7a

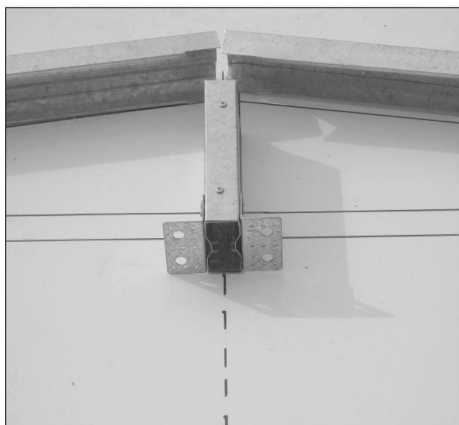


Step 7b

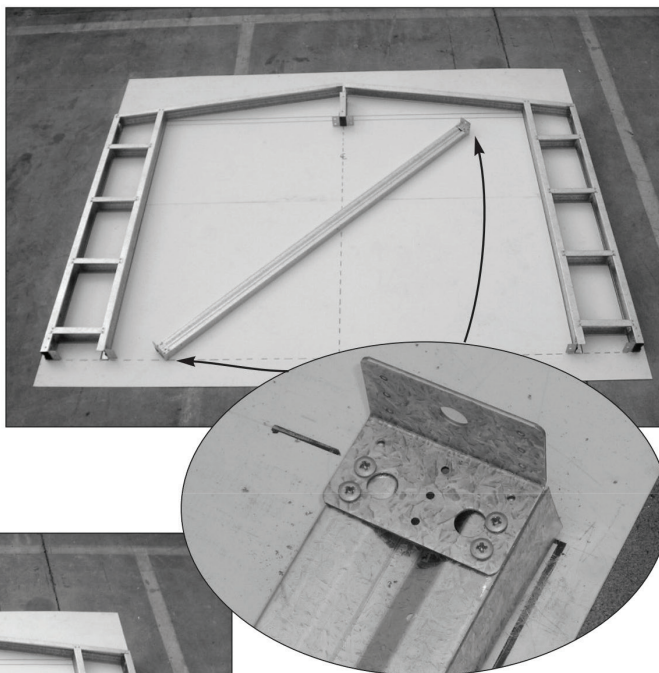

Step 7c

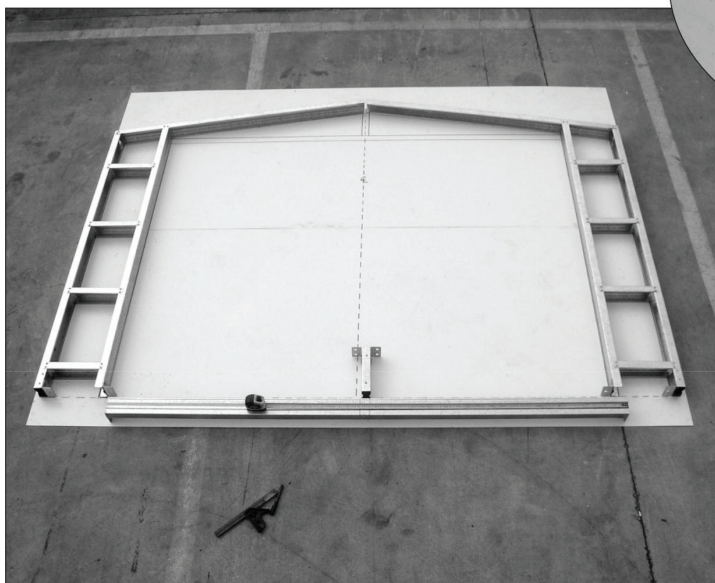

Step 7d

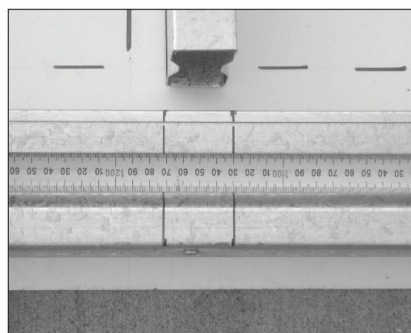

Step 7e



FRONT FRAME ASSEMBLY SUPPORT PHOTOS

STEP 8.

Join all sections together.

Step 8a




Step 8b



Step 8c



Step 8d

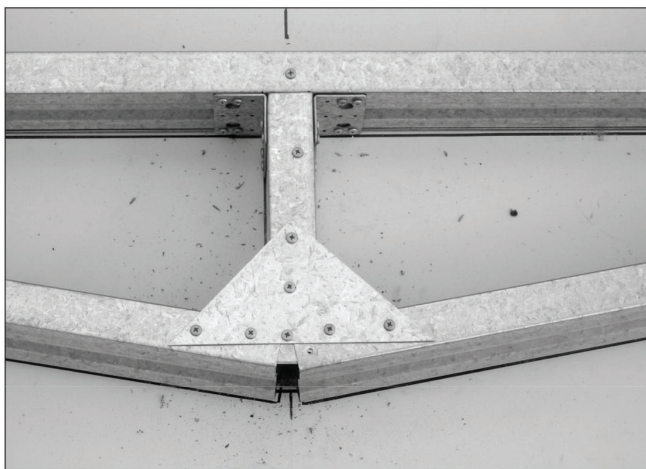

Step 8e




FRONT FRAME ASSEMBLY SUPPORT PHOTOS


STEP 9.

Turn over frame and repeat steps 4 to 8.

Step 9a

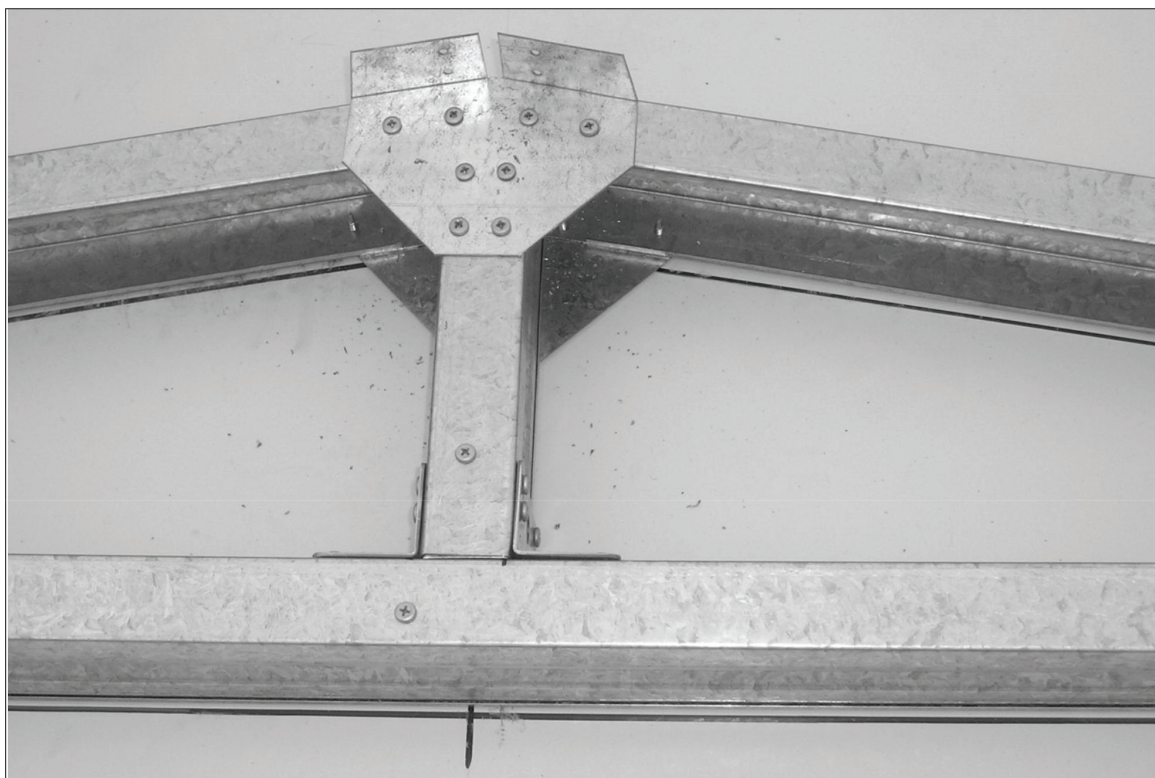


Step 9b

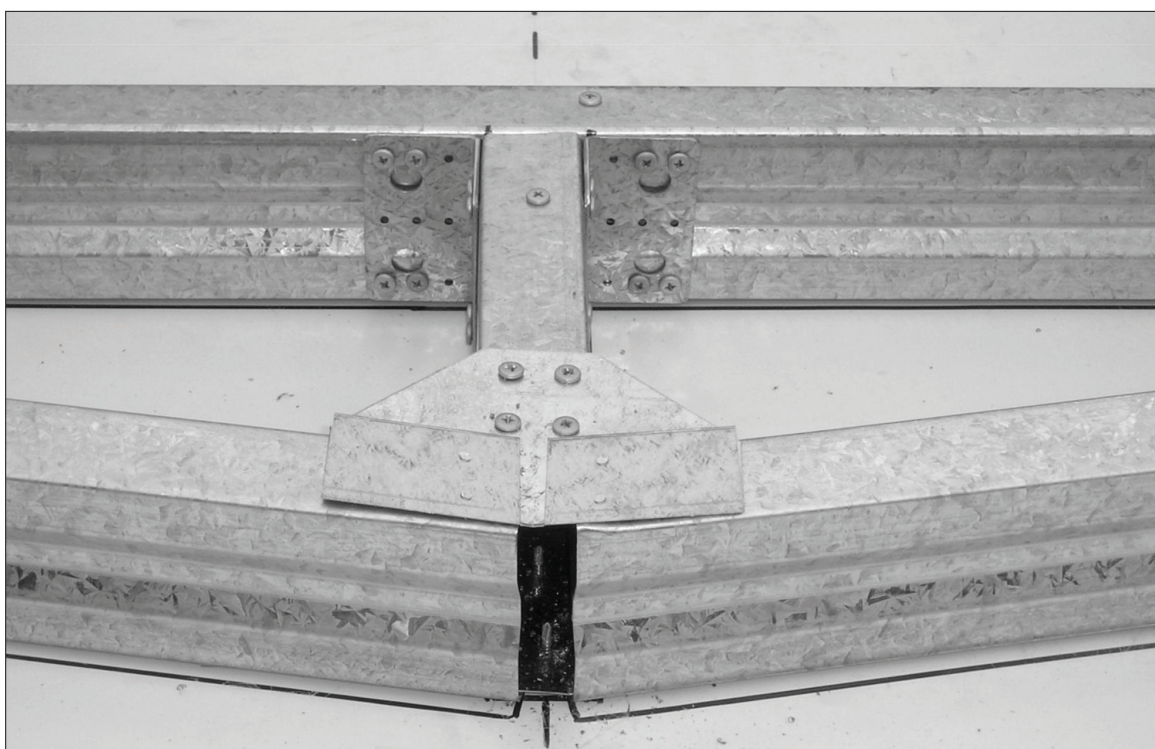

FRONT PANEL ASSEMBLY

1 required.

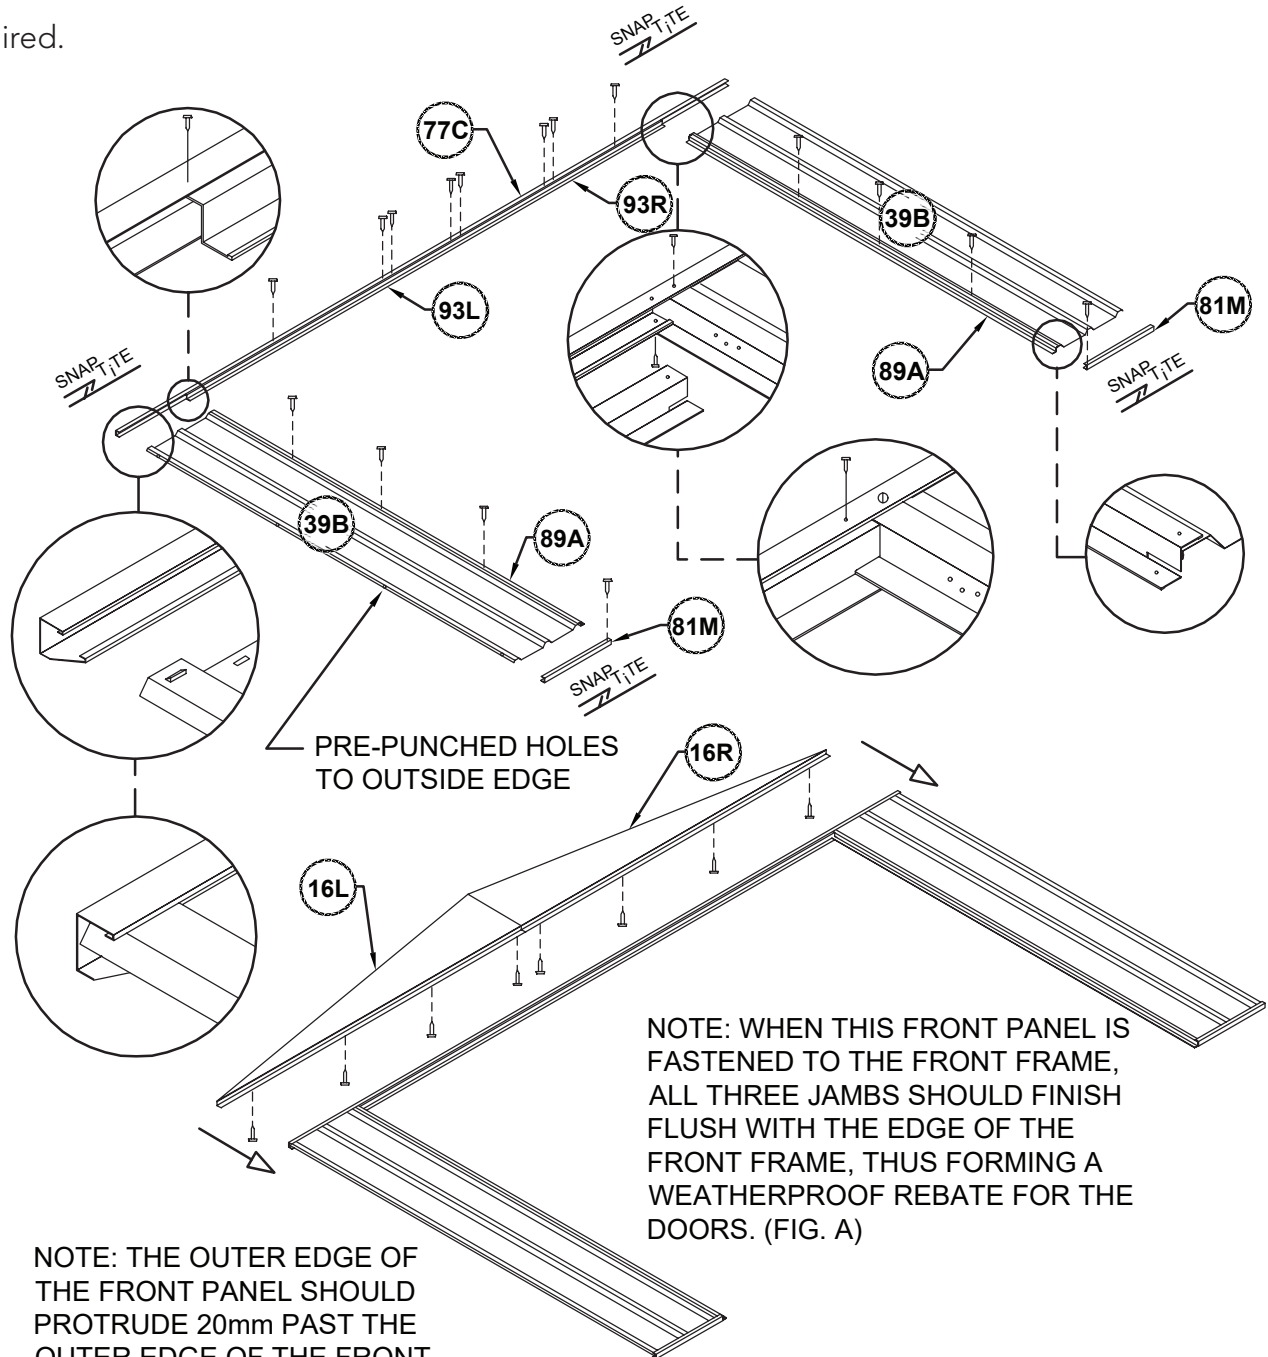

NOTE: WHEN THIS FRONT PANEL IS FASTENED TO THE FRONT FRAME, ALL THREE JAMBS SHOULD FINISH FLUSH WITH THE EDGE OF THE FRONT FRAME, THUS FORMING A WEATHERPROOF REBATE FOR THE DOORS. (FIG. A)

NOTE: THE OUTER EDGE OF THE FRONT PANEL SHOULD PROTRUDE 20mm PAST THE OUTER EDGE OF THE FRONT FRAME FOR CORNER LAPPING OF SIDE WALL PANELS. (FIG. B)

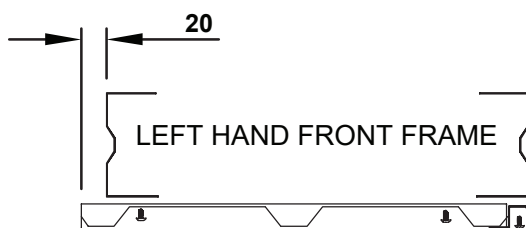


FIG. B

FIG. A



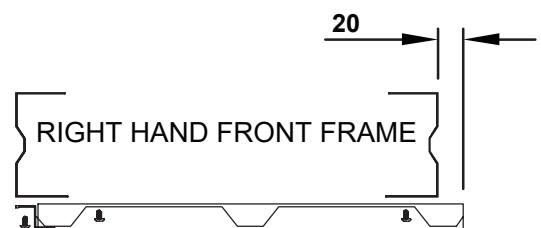


FIG. B


PORTAL FRAME DETAILS

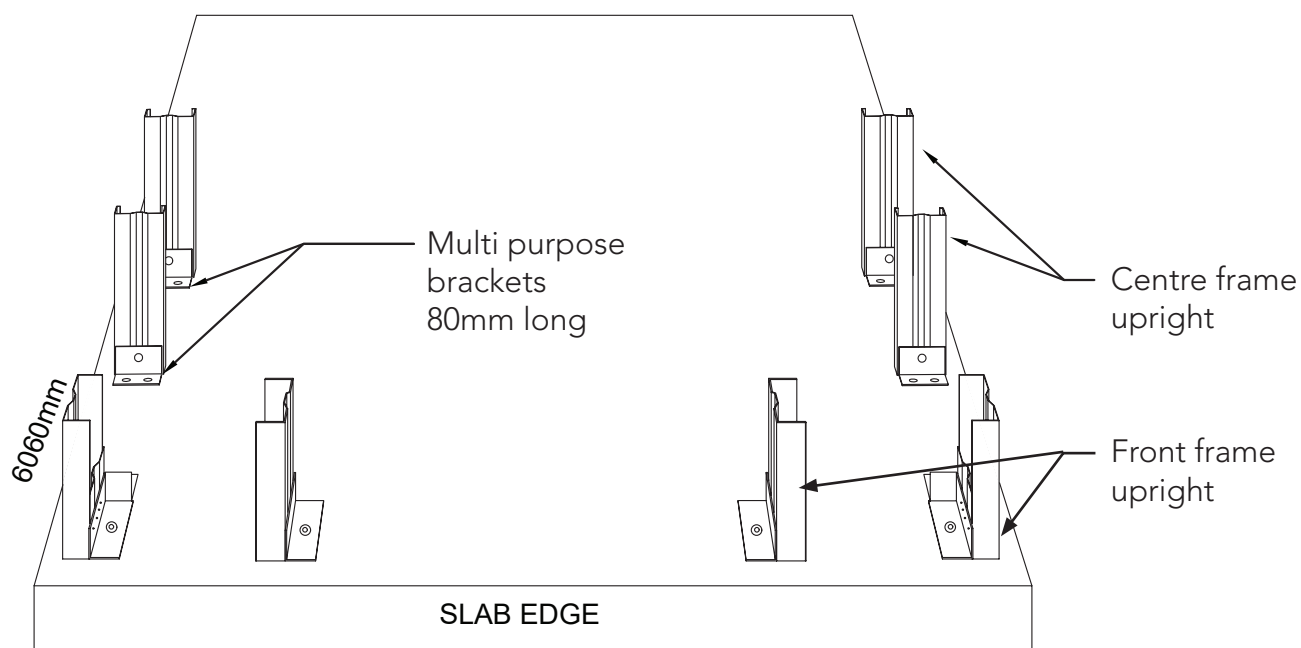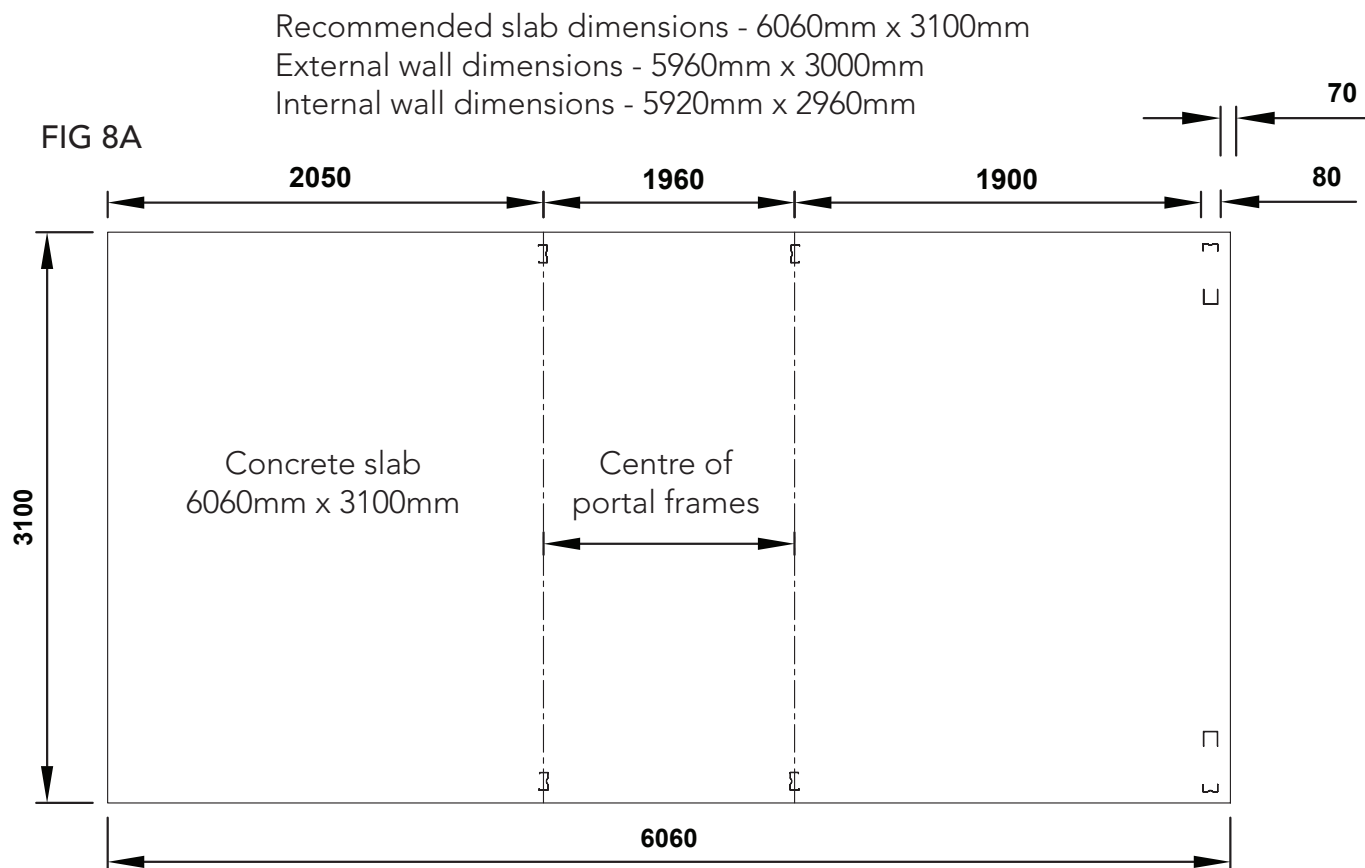

- Secure multipurpose brackets to uprights using self drilling screws
- Move frames into position, mark and drill holes in slab using 10mm masonry drill bit
- Secure frames to slab with M10 dynabolts.

PANEL CONSTRUCTION

NOTE: Take care to ensure that all wall panels are not upside down. The top channels of each panel are pre-punched for attaching roof sheeting. The base channels are not.

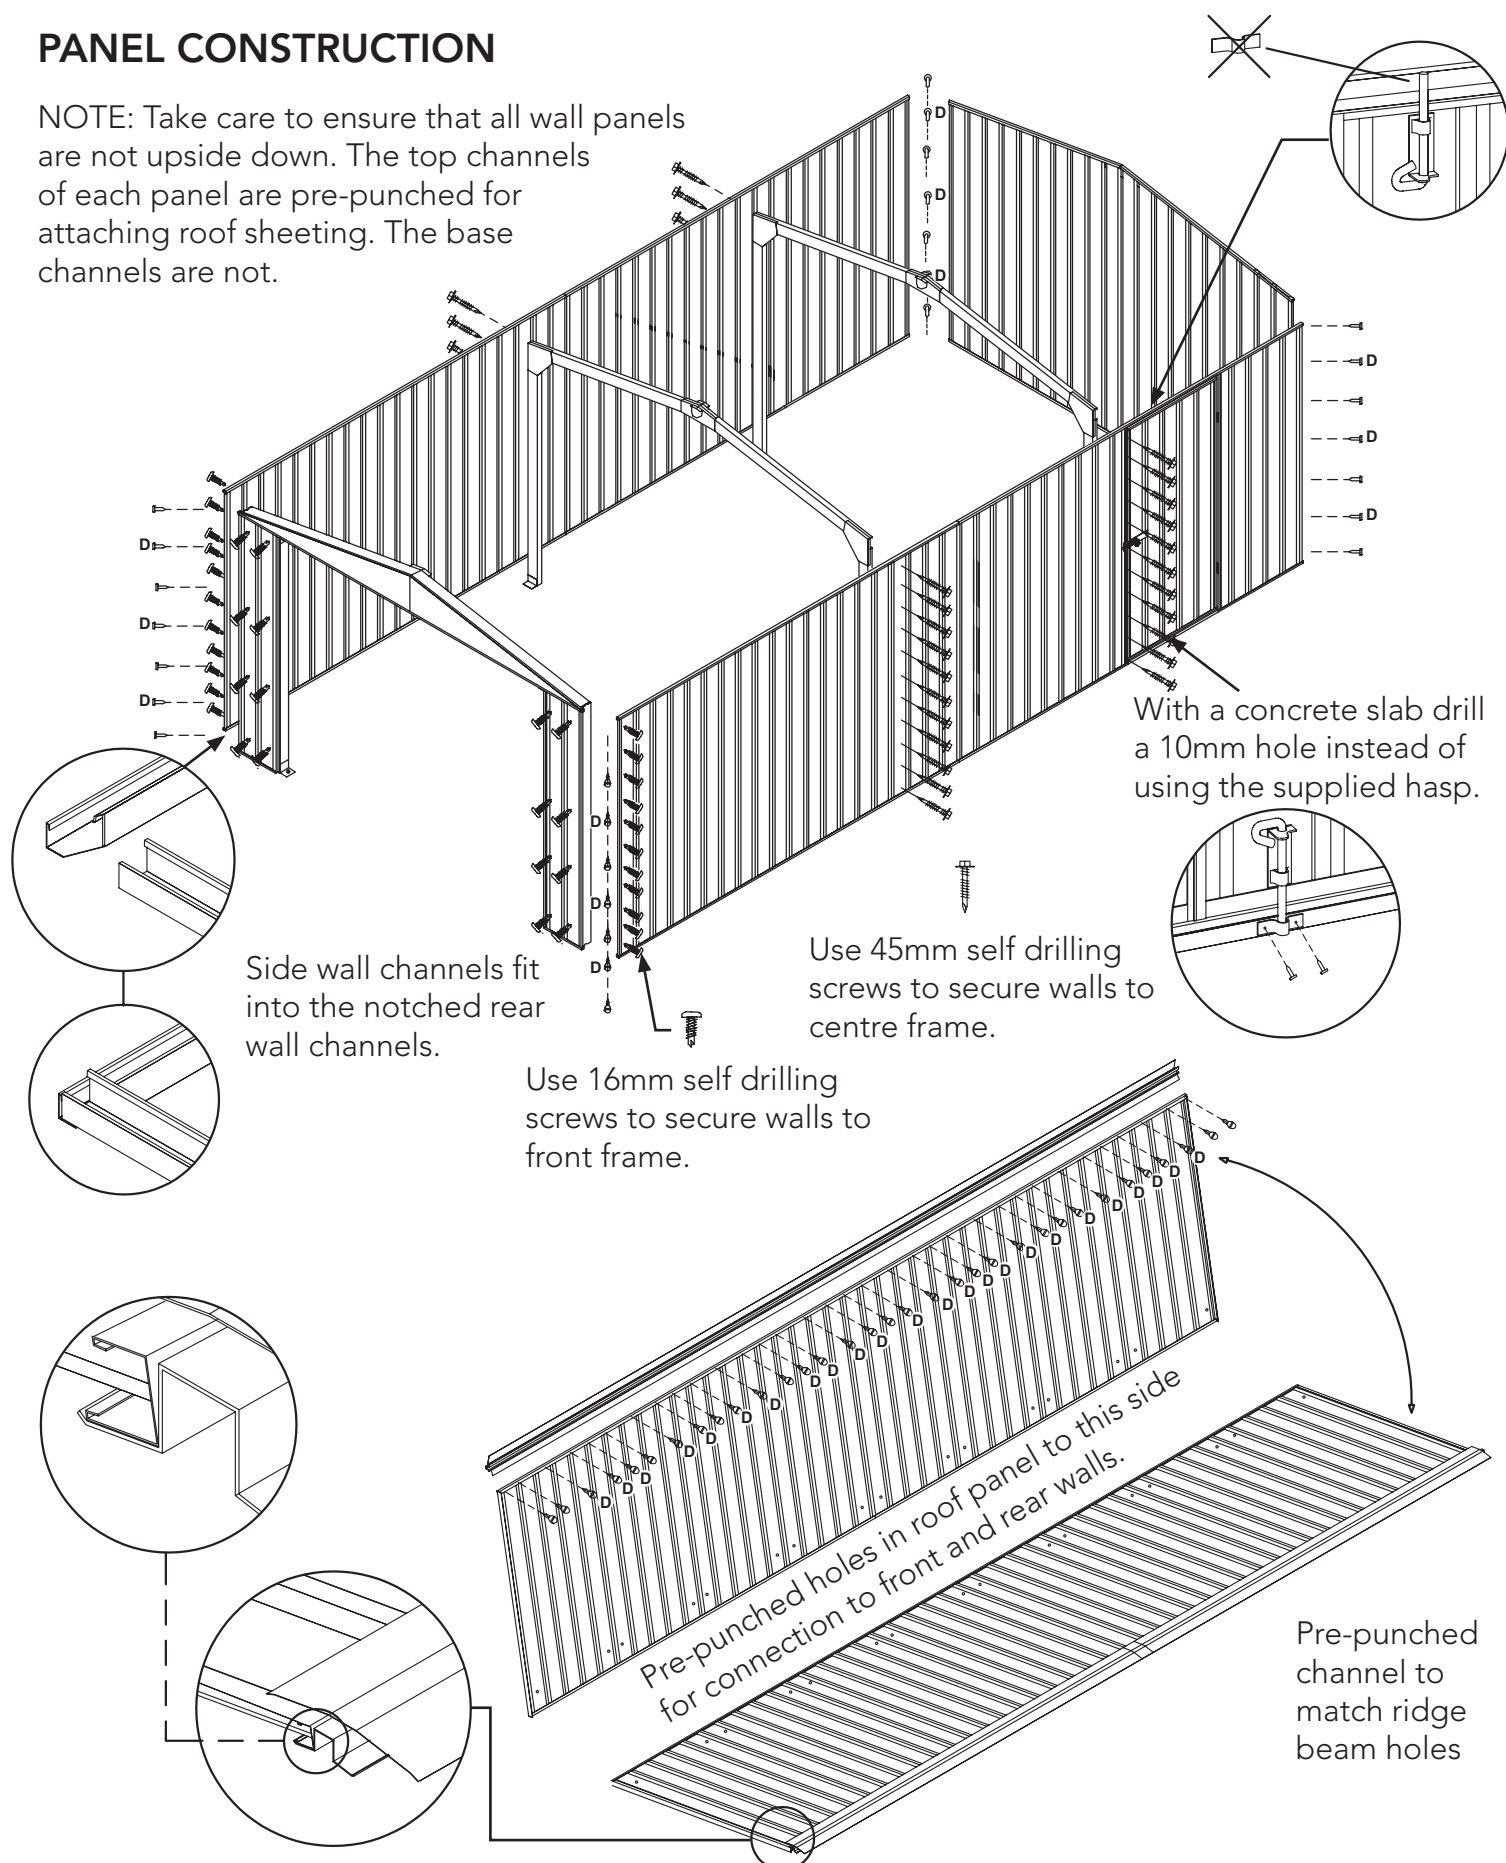

ROOF CONSTRUCTION

STEP 1.

Secure peak brace to ridge beam and roof panel with one screw at each end, see **A** below.

STEP 2.


Move the other roof panel into position and secure peak brace to ridge beam and roof panel with one screw at each end, see **B** below.

STEP 3.

Secure both roof panels to the walls with one screw in each corner first, followed by two screws adjacent to the portal frame as shown.

STEP 4.

Secure roof panels to the top chords of the portal frame using 45mm self drilling tek screws.

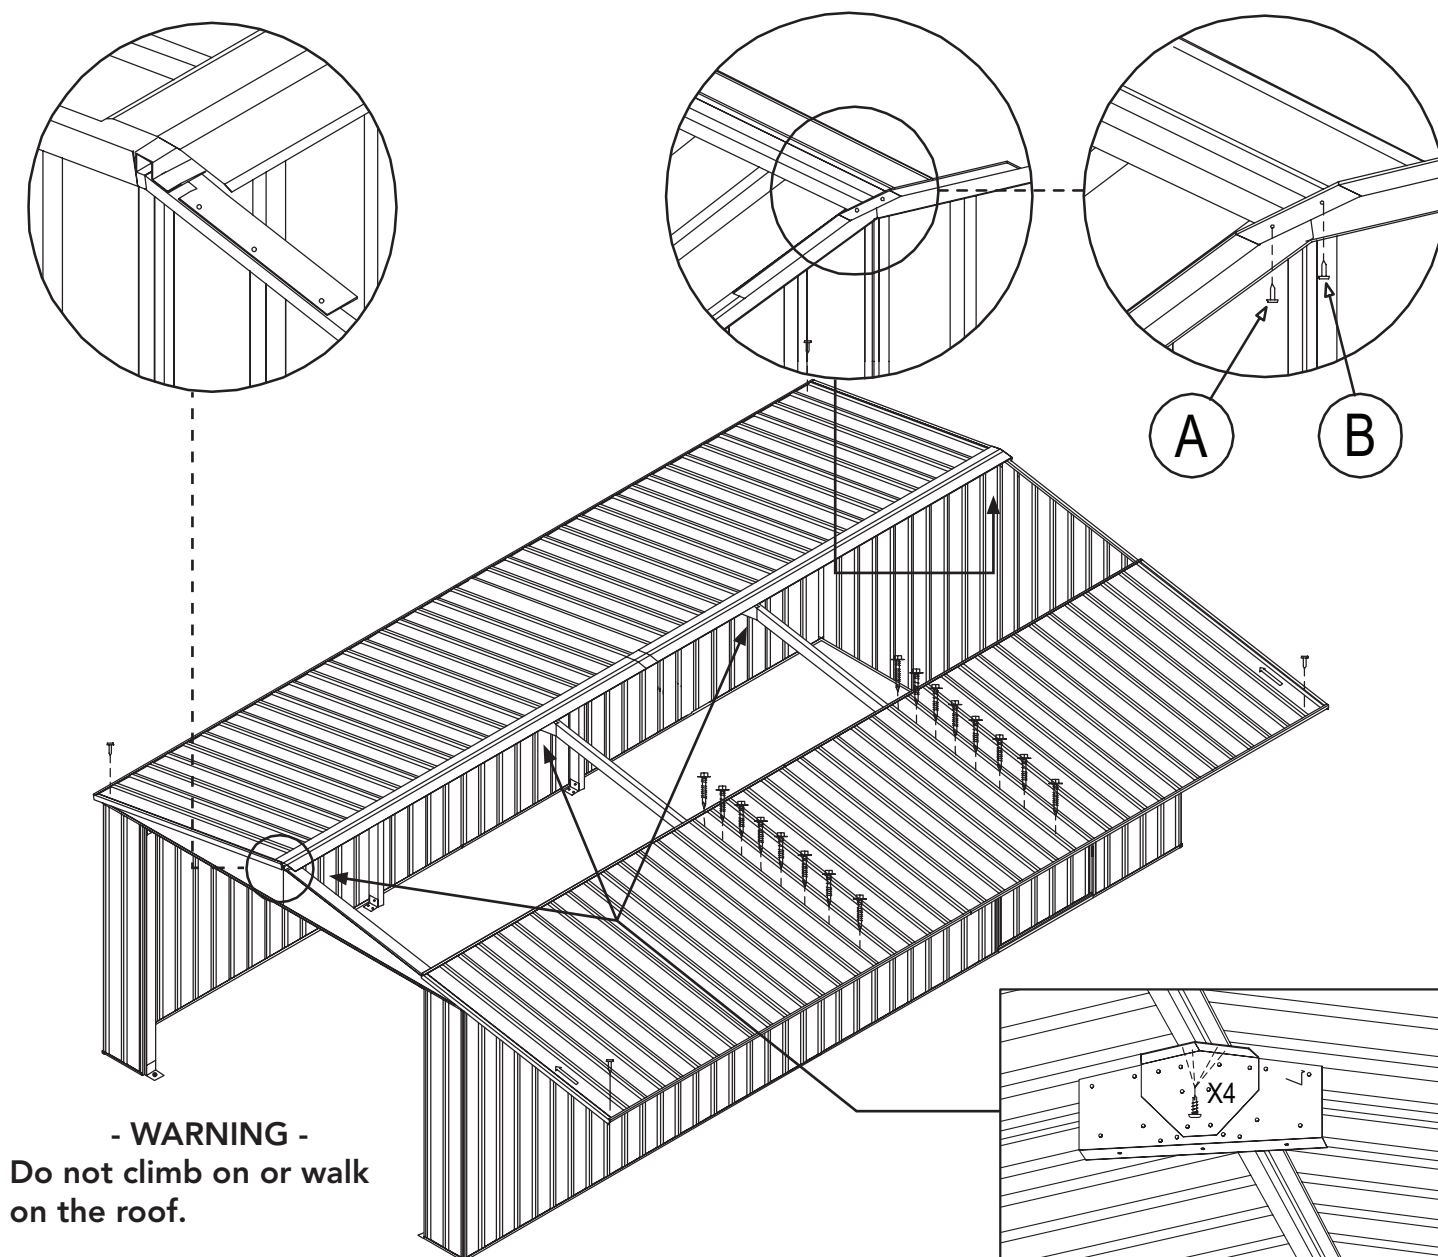

FINAL CONSTRUCTION

STEP 1.

Secure the roof panels to the wall panels as shown.

STEP 2.

Secure the roof panels to the internal frames with self drilling tek screws.



STEP 3.

Secure the portal frames to the ridge beam as detailed on the previous page.

STEP 4.

Bend the top and bottom flanges as shown, then hook the bottom flanges under the top channel and screw top to the ridge beam with two screws.

ANCHORING OF SHED

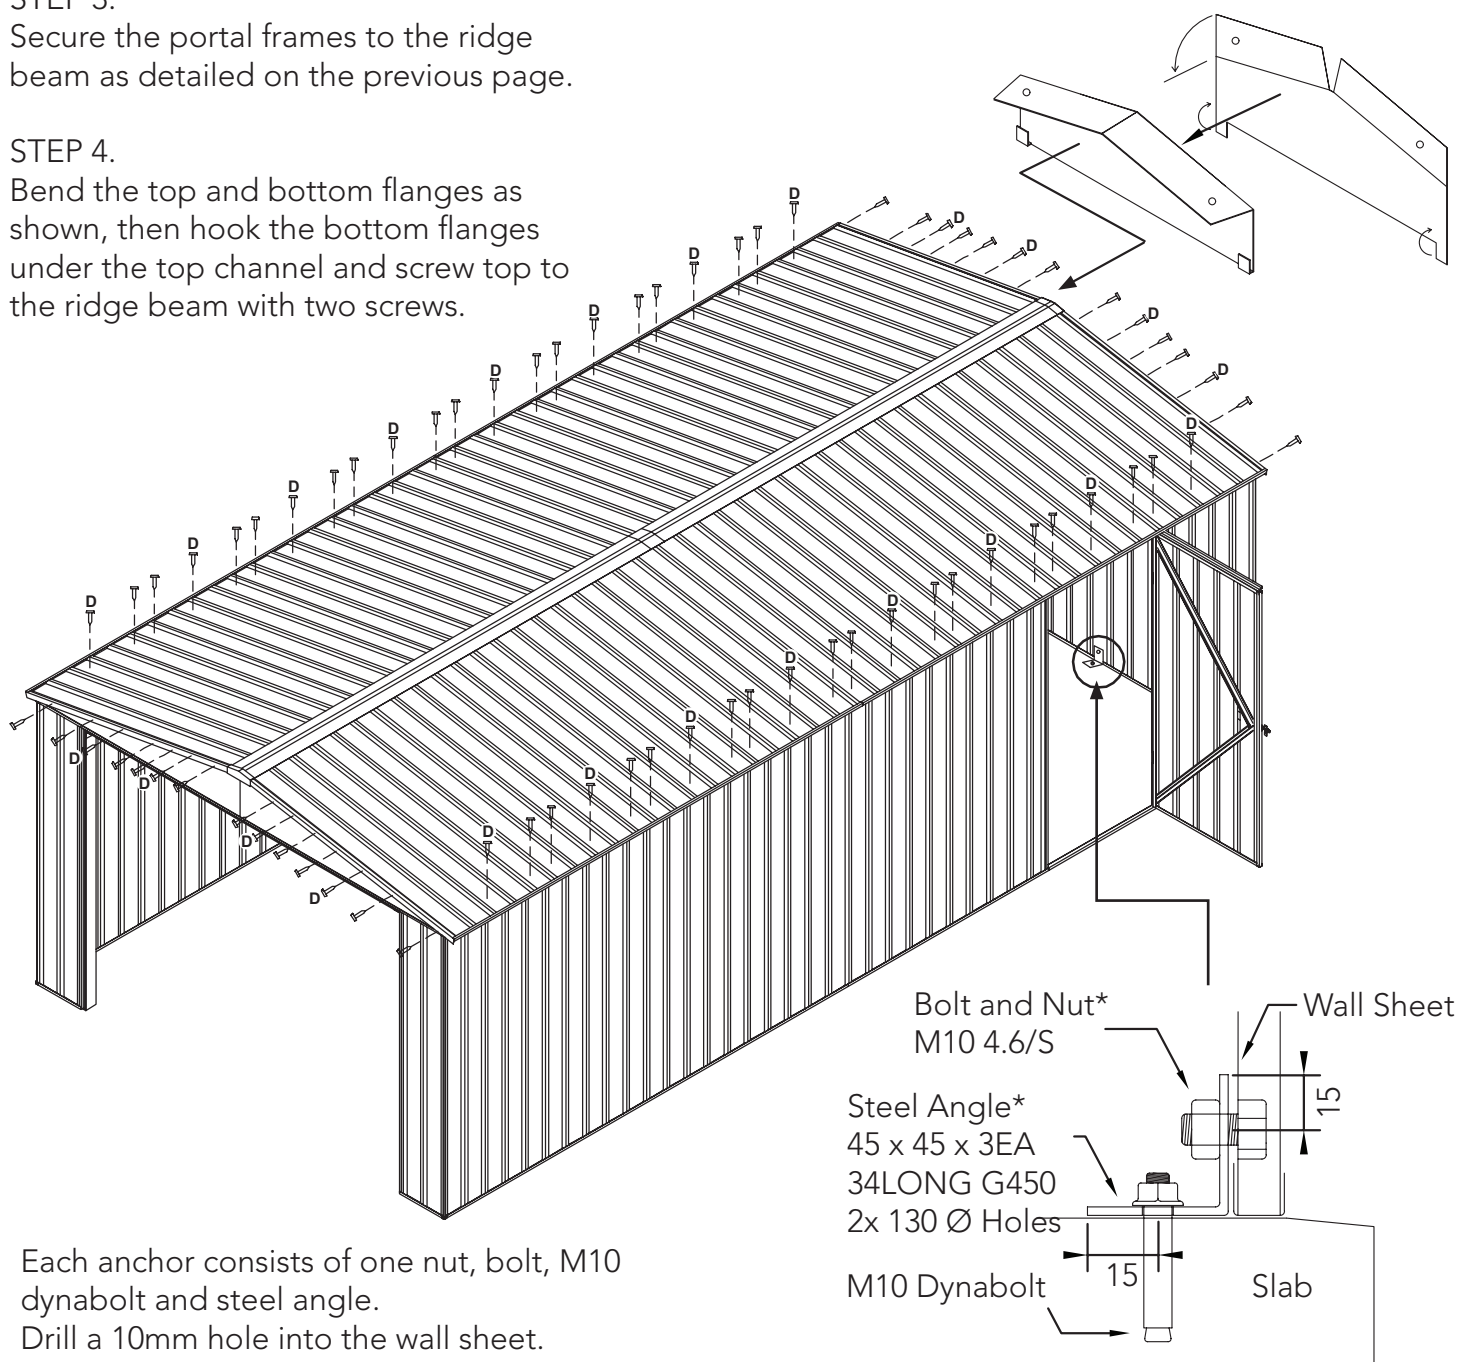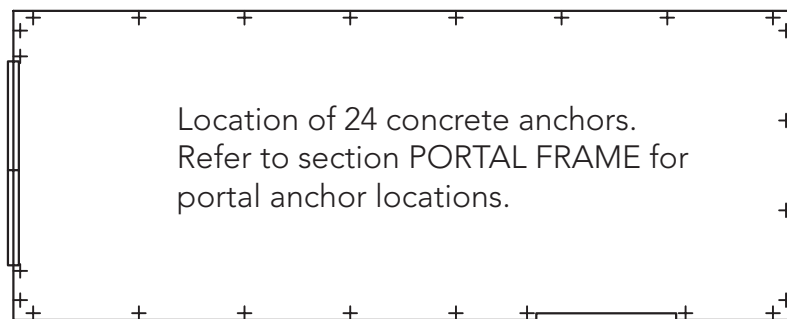


Each anchor consists of one nut, bolt, M10 dynabolt and steel angle.
Drill a 10mm hole into the wall sheet.
Drill a 10mm hole into the concrete.

* Denotes hot dip galvanised finish

DOOR INSTALLATION

Secure front doors to the front panel in the same manner as the side door was fitted.

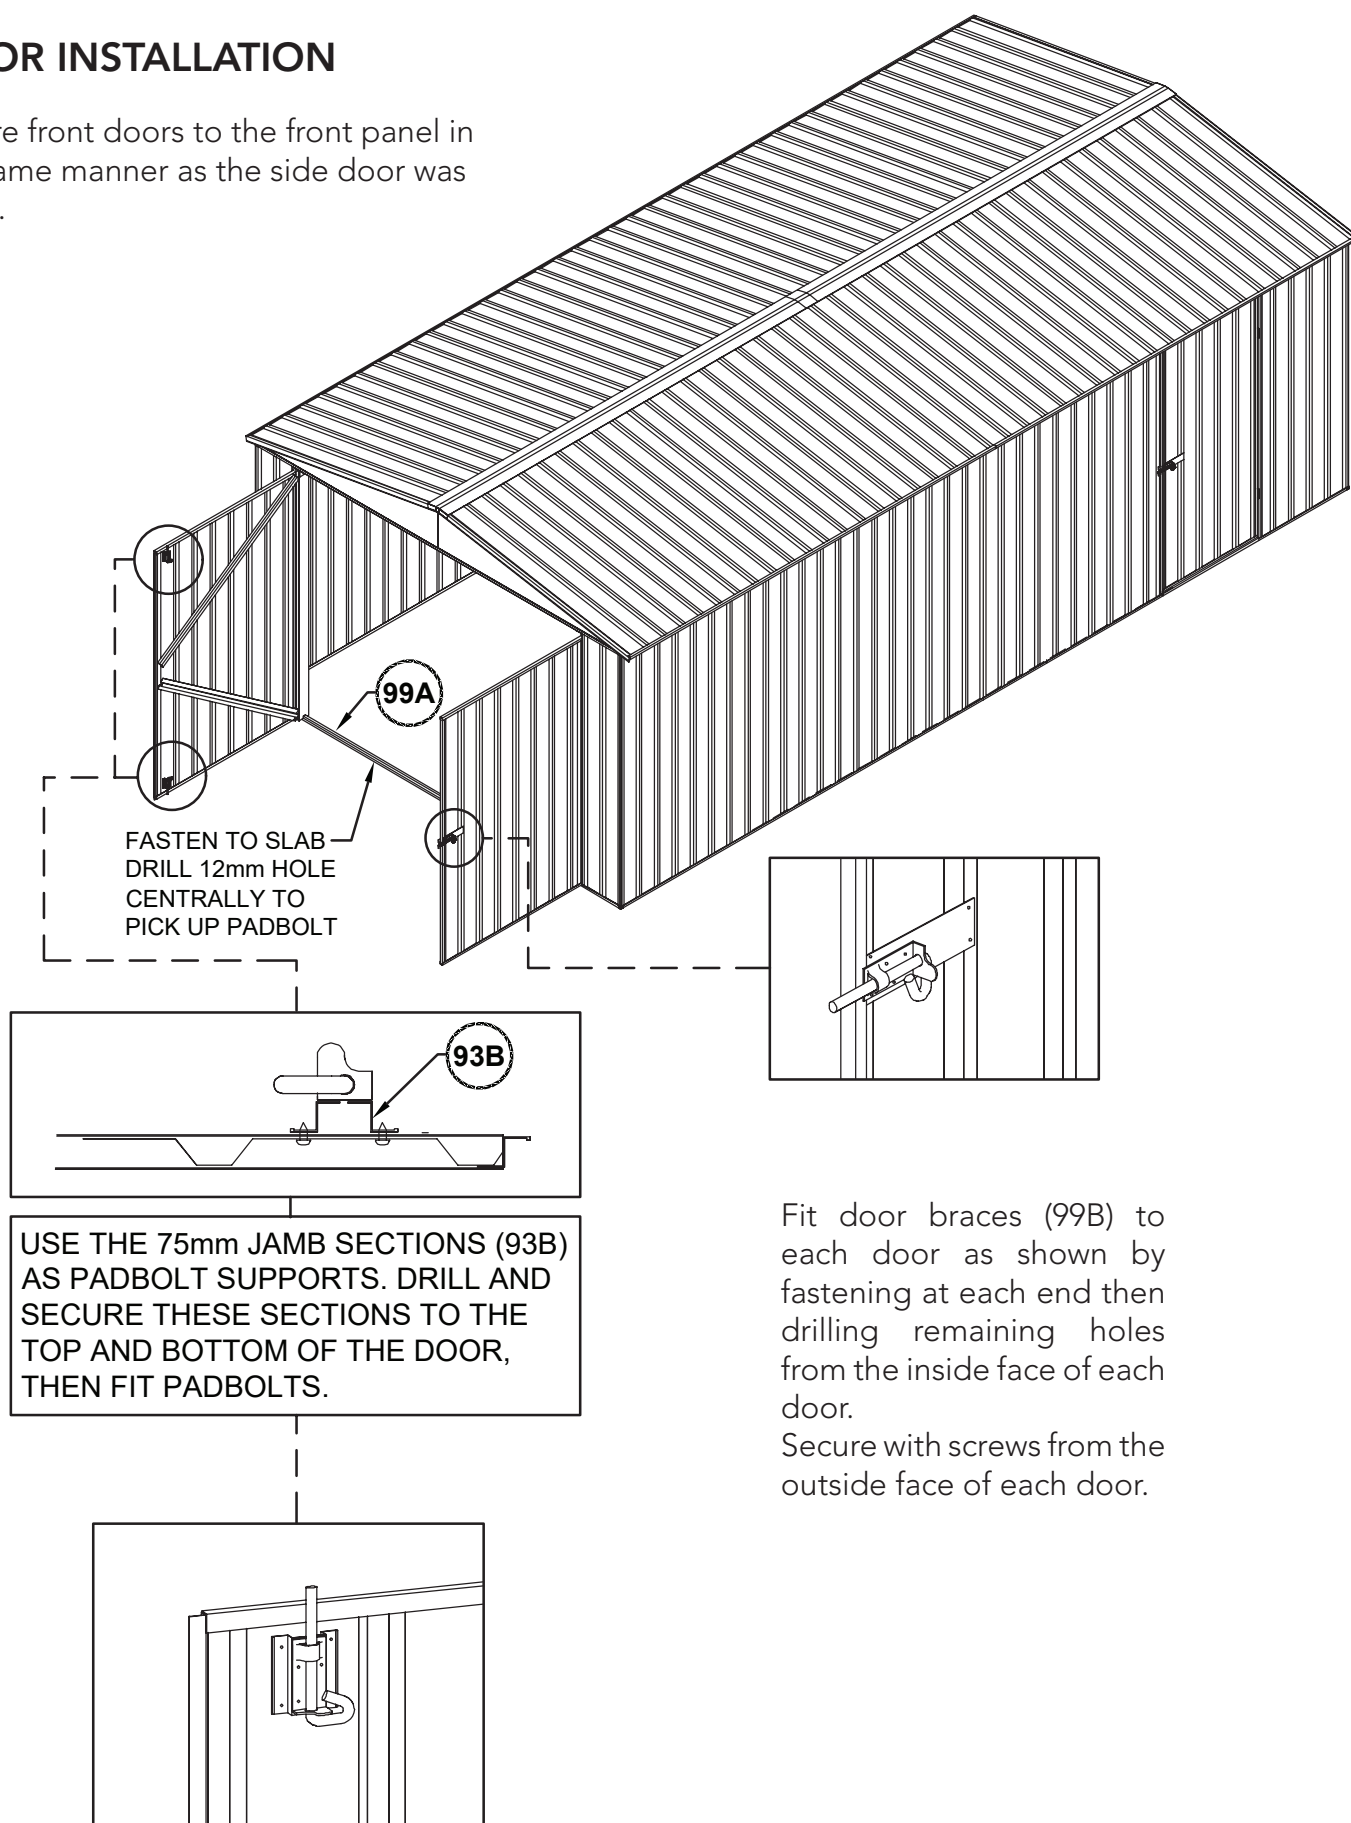

Absco Large Gable Roof Shed Notes

General

- 1.G This instruction manual shall be read in conjunction with other consultants drawings, specifications and written instructions provided by Absco and/or their representatives.
- 2.G The drawings provided herein are for installation and structural engineering purposes only. If discrepancies are discovered within the documentation provided, these shall be brought to the attention of Absco and written approvals obtained prior to commencing the affected section of work.
- 3.G If in doubt ask.
- 4.G Until approvals from the local authorities are obtained, commencement of construction from these drawings shall not commence.
- 5.G Unless varied by the project specification, all materials and workmanship shall be undertaken in accordance with the relevant Australian standards and the by-laws and ordinances of the relevant building authorities.
- 6.G All dimensions indicated in these drawings shall be verified on site by the installation contractor. Scaling of drawings shall not be undertaken.
- 7.G Prior to commencing works on site, the contractor shall verify the position of all services in the area to ensure that the construction does not interfere with any of those services.
- 8.G During installation on site the shed structures shall be maintained in a stable condition with no part becoming overstressed or permanently deformed.
- 9.G In circumstances where the shed has been installed in a manner which is inconsistent with the installation manual, structural certification shall be void.
- 10.G The structural components detailed within this installation manual have been designed for the following loads in accordance with AS/NZS1170 based on a Class 10a, Type 2 structure:
- Roof Live Load: 0.25 kPa uniformly distributed or 1.1 kN concentrated as per AS/NZS1170.1

Wind Load: Classification N2, Non-Cyclonic to AS4055 where $V_u = 40$ m/s, $V_s = 26$ m/s

Windward wall $C_{p,e} = 0.7$

Leeward Wall $C_{p,e} = -0.3$ to -0.5 as applicable based on shed geometry

Side Wall $C_{p,e} = -0.2$ to -0.65 as applicable based on shed geometry

Roof $C_{p,e} = -0.3$ to -1.04 depending on wind direction

Absco Large Gable Roof Shed Notes


Steelwork

- 1.S All structural steelwork shall have a corrosion protection system applied consistent with AS/NZS 2312-2002.
- 2.S All structural steelwork detailed within this installation manual shall be minimum Grade 550 for roll formed sections (including roof and wall sheeting and portal frame members) and Grade 250 for angle sections.
- 3.S All multi purpose and anchor brackets for connection onto the supporting reinforced concrete slab (includes 45x45x3EA x 34mm long and 47x47x1.9EA x 80 long) shall be minimum Grade 450.
- 4.S All portal frame knee and apex plates shall be minimum Grade 450
- 5.S All roof, and wall sheeting shall be minimum base metal thickness of 0.3mm
- 6.S All portal frame members shall be minimum base metal thickness of 0.75mm.
- 7.S All snaptite channels and jambs shall be minimum base metal thickness of 0.42mm
- 8.S All top hats shall be minimum base metal thickness of 1.0mm
- 9.S All portal frame knee and apex plates shall be minimum base metal thickness 1.0mm
- 10.S All screw fasteners shall be Phil Pan Head Zinc Plated #8 x 3/4" (STP0820)
- 11.S All bolt fasteners for anchoring shall be M10 minimum grade 4.6/S
- 12.S Installation of screw fasteners shall generally be undertaken in accordance with the relevant provisions of AS1562.

Absco Large Gable Roof Shed Notes

Supporting Slab and Foundations

- 1.F The supporting slab foundation for the garden shed shall be of a minimum size indicated on the installation manual. The top surface of the formed slab shall be level and free of any irregularities which would inhibit the installation of the shed.
- 2.F The structural engineering design for the supporting slab foundation shall be undertaken by a suitably qualified structural engineer. The design shall consider all relevant provisions of AS3600 and AS2870.
- 3.F Between adjacent footings or excavations, the contractor installing the slab foundation shall not exceed a rise of 1 in a run of 2 in line of slope.
- 4.F Unless approved in writing by the slab foundation engineer, the limits of excavations near existing footings shall be in accordance with that indicated below.

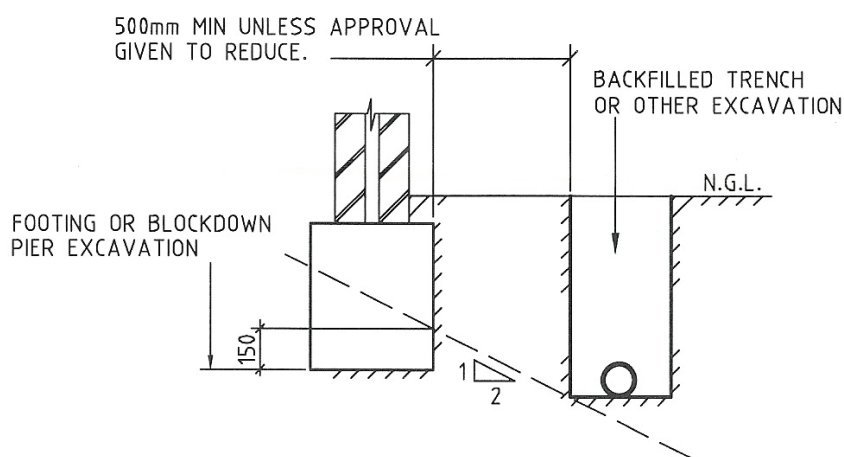

The contractor shall undertake investigatory localised excavations near existing footings to ascertain their depth prior to excavating adjacent to them. It is noted that excavating to a depth below that indicated above shall not be undertaken without the written approval from the engineer.

Absco Sheds Storage Guidelines

- Absco Sheds are designed to be weatherproof for normal weather conditions. In the event of extreme weather conditions such as heavy rain, combined with high wind gusts, the ridge capping, sheeting joints, screw fixings etc., may exhibit minor deformations which may allow some water entry. These areas should be checked regularly to ensure that maximum strength and protection is maintained.
- Other weather conditions such as extreme heat and extreme cold, moist or dry air can influence the effects of concrete floor moisture and/or condensation on the underside of the roof sheets.
- Absco Sheds and storage units are primarily used for storage of garden equipment such as lawnmowers, wheelbarrows, garden tools etc. Storage items that might be adversely affected by any of the above conditions may require additional protection such as being sealed or covered by plastic sheets and/or stacked above the concrete floor on timber slats.
- Waterproof sealants may be used to offer further protection where required around joins and screw fixings, as can rubber door seals and other products which are available from most hardware outlets.
- Placement of waterproof sealants (silicone) between the base of the shed and concrete slab is not recommended, as this process can have a reverse effect, preventing excess water from escaping, resulting with water accumulating and being trapped inside the shed.
- Absco accepts no responsibility for water entry, floor moisture, condensation or the condition of the Contents inside your Absco steel building arising from any of the pre-mentioned weather conditions.

Lifetime Warranty Statement



This warranty against defects is given by:

Absco Industries (ABN: 77 869 708 678)
Address: PO Box 119 Acacia Ridge QLD 4110
Ph: 1800 029 701
Fax: 07 3344 1191
Email: admin@absco.com.au

Date of issue: 19 December 2018

Details of Manufacturer's Warranty

This product comes with a Lifetime structural warranty from the date of purchase. This warranty also applies where there are missing or damaged parts identified in the parts list referred to in the instruction kit within the product packaging.

Please ensure that you keep this warranty form in a safe place along with your proof of purchase. You can register your warranty online <http://absco sheds.com.au/warranty-details/> or complete the form on the back of this document and mail it back to Absco, along with a copy of your proof of purchase.

The benefits of this warranty are in addition to your rights under the Australian Consumer Law (ACL) and in particular, the guarantees implied under the ACL and any other rights and remedies of the consumer under a similar law in relation to the goods and services to which this warranty relates.

Process of claiming warranty:

To make a claim under the warranty within the warranty period, you will need to contact the manufacturer directly by phone or email:

Contact Number: 1800 029 701
Contact Email: admin@absco.com.au

You will be required to produce proof of purchase (this is at discretion of the manufacturer) at the time of the claim.

The manufacturer bears the cost of replacing the products or spare parts or repairing the products and reasonable direct expenses of claiming under this warranty:

Where parts are replaced, the manufacturer will bear the cost of sending the spare part and will endeavour to deliver it to the customer's nearest reseller within 20 working days for the customer to pick up. At such time the customer may be required to return the alleged faulty parts.

Where assessment is required in case of replacing or repairing the product, the manufacturer will appoint an assessor within 10 working days to identify the alleged defect. The manufacturer will bear the repair costs by appointing a local tradesman. The manufacturer may choose to replace the product if the repair or the cost of repair is not feasible. The replacement product will be available for collection from the nearest reseller within 20 working days. The customer will bear the cost of assembly for the replacement product.

IMPORTANT

1. Manufacturer's Disclosure

This warranty against defects shall not apply in the following situations:

- A) Where the product is not assembled in accordance with the instructions provided in the product kit;
- B) Where the product is used to store corrosive materials such as fertilizer, chlorine etc;
- C) The warranty does NOT cover damage caused by storms, wind, rain, snow or poor foundations;
- D) This warranty does not apply to surface deterioration of panels caused by 'Swarf' (Tiny particles of steel debris left from cutting, grinding or drilling operations) that has not been removed after building construction.

2. Notes

This product is weatherproof to a certain level; however driving windy rain may cause the product to leak. Condensation may also occur in some weather conditions such as extreme heat or cold. The product should only be used for storing items such as gardening equipment and should not be used for articles that may be prone to damage if they come into contact with moisture.

3. Major Defects

If the manufacturer is satisfied that the defect is a major defect, the purchase price may be refunded in lieu of providing a replacement product or repairing the product.

This warranty is provided in addition to other rights and remedies you have under law: Our goods come with guarantees which cannot be excluded under the Australian Consumer Law. You are entitled to replacement or refund for a major failure and to compensation for other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

If you do not wish to register your warranty online, complete the below form and email, fax or post this form back to Absco, along with a copy of your proof of purchase.

NAME:

STREET ADDRESS:

POSTAL / ZIP CODE:

STATE / CITY / PROVINCE / REGION:

COUNTRY:

SHED TYPE/CODE:

ORDER NO:

DATE OF PURCHASE:

EMAIL ADDRESS:

DATE REGISTERED:

